


# MAXIMO MX 18

## Panel Formwork 270 / 330

Instructions for Assembly and Use – Standard Configuration

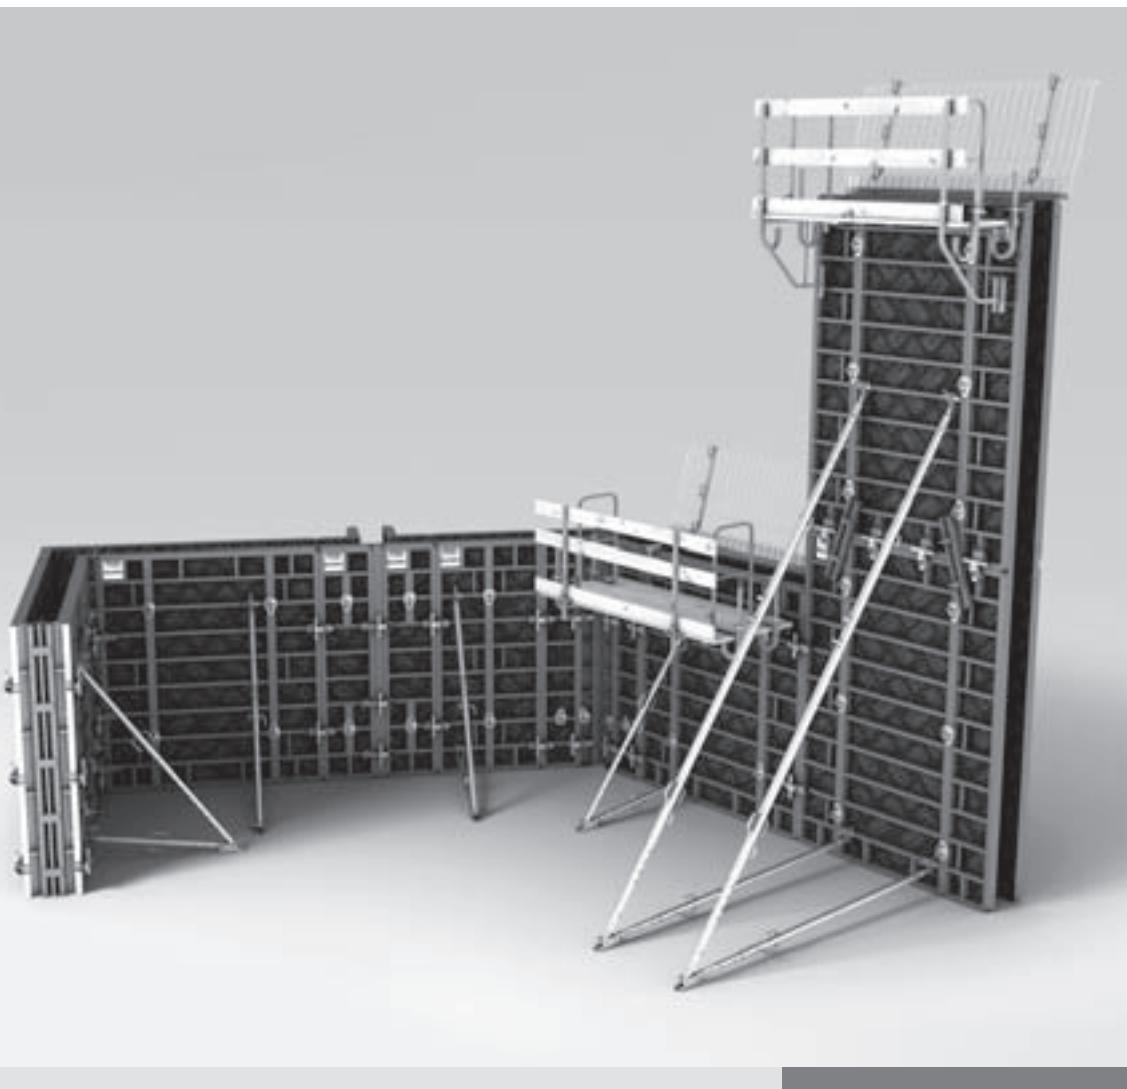


# Content

<b>Overview</b>		
Main Components	1	
Key	2	
<b>Introduction</b>		
Target Groups	3	
Additional Technical Documentation	3	
Intended Use	4	
Care and Maintenance Instructions	5	
<b>Safety Instructions</b>		
Cross-System	6	
System-Specific	7	
Storage and Transportation	7	
<b>General</b>		
A1 Storage and Transportation		
– Stacking Device MX	8	
– Stacking Aid MXI, MXA, MX Flat	9	
A2 Quick User Guide	10	
A3 Panels	12	
A4 Panel Connections		
– Alignment Coupler BFD	16	
– Compensation Waler MAR	17	
A5 Tie Technology		
– Tie System MX 18	18	
– Tie System DW	20	
– Inclined Ties	21	
– Closing Tie Points	22	
A6 Push-Pull Props, Kickers		
– Permissible Width of Influence	24	
– Brace Connector	25	
– Push-Pull Props and Kickers	25	
A7 Work and Concreting Scaffolds		
– Concreting Platform 120/270	26	
– Scaffold Bracket TRG	29	
– Guardrails	31	
A8 Downward Extensions	32	
A9 Parapets, Foundations, Beams		
– Tension and Compression Brace	34	
– Foundation Strap	35	
A10 Height Offsets	36	
A11 Obtuse Wall Connection	36	
Vertical / Horizontal Wall Connections	37	
<b>Standard Configuration MX 18, Height 270 cm</b>		
B1 90° Corners with Inside Corner		
MXI 18, 270 x 50/20		
– Wall Thicknesses 15 – 40 cm	38	
– Wall Thicknesses > 40 – 60 cm	40	
B2 Panel Connections		
following 90° Corners	42	
B3 90° T-junctions with		
Inside Corner MXI 18, 270 x 50/20		
– Wall Thicknesses 15 – 40 cm	44	
– Wall Thicknesses > 40 – 60 cm	46	
B4 Panel Connections		
following 90° T-junctions	48	
B5 Length Compensations	49	
<b>B6 Stopend Formwork</b>		50
Stopend Panel for Reinforcement		
– without water bar installation – MT		52
– with water bar installation – MTF		53
– with expandable water bar		53
B7 Extensions		54
<b>Standard Configuration MX 18, Height 330 cm</b>		
C1 90° Corners with Inside Corner		
MXI 18, 330 x 50/20		
– Wall Thicknesses 15 – 40 cm		56
– Wall Thicknesses > 40 – 60 cm		58
C2 Panel Connections		60
following 90° Corners		
C3 90° T-junctions with		
Inside Corner MXI 18, 330 x 50/20		
– Wall Thicknesses 15 – 40 cm		62
– Wall Thicknesses > 40 – 60 cm		64
C4 Panel Connections		66
following 90° T-junctions		
C5 Tension and Compression Brace		68
C6 Length Compensations		69
C7 Stopend Formwork		
– with Panel MX 18, 330 x 30		70
– with timber and filler plywood		71
C8 Extensions		72
<b>Supplementary System Components</b>		
D1 Magnet Cone MX 18		74
D2 90° Corners with Inside Corner		
MXI 18, 270/330 x 60		
– Wall Thicknesses 15 – 30 cm,		
MXA 270/300 x 35		76
– Wall Thicknesses 30 – 40 cm,		
MXA 2700 x 45		76
– Wall Thicknesses > 40 – 60 cm		
D3 90° T-junctions with Inside Corner		
MXI 18, 270/330 x 60		
– Wall Thicknesses 15 – 40 cm		80
– Wall Thicknesses > 40 – 60 cm		82
D4 90° Corners for 80 cm Wall Thickness		
– with Inside Corner MXI 18, 270/330 x 50/20		84
– with Inside Corner MXI 18, 270/330 x 60		86
D5 Shaft Formwork		
Shaft Corner MXSE 18		88
Crane Lifting Gear		
– Lifting Hook MAXIMO 1.5 t		89
– Lifting Gear Combi MX		89
Shaft Corner MXSE 18, 270		90
Shaft Corner MXSE 18, 330		92
Shuttering / Striking		94
Wall Thicknesses		96
Extensions		97
D6 Sealing Replacement		
– Removing the sealing		98
– Inserting the sealing		99
<b>Components</b>		
MX 18 Panel Formwork 270 / 330		100

# Overview

PERI



## Main Components

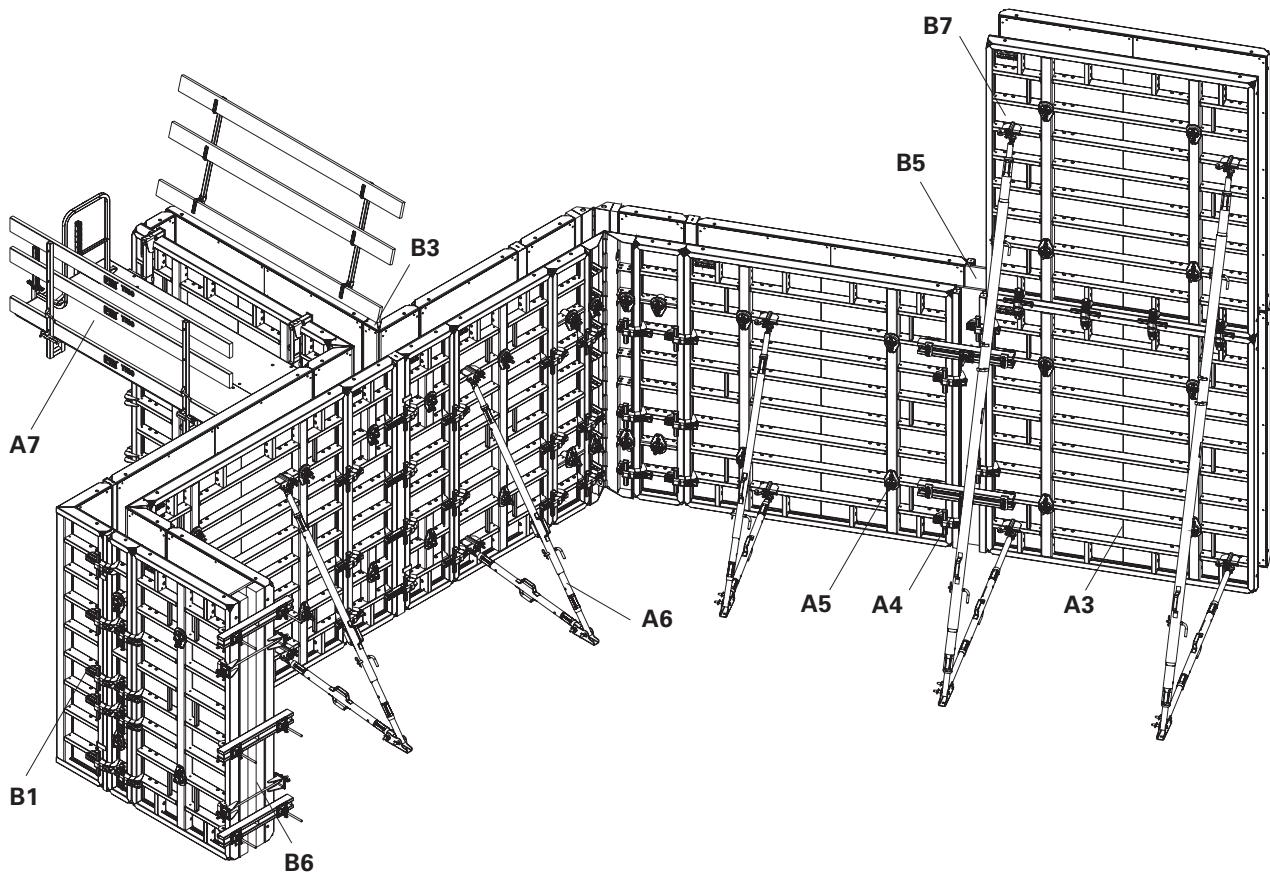

- A3 Panels
- A4 Panel Connections
- A5 Anchor Technology
- A6 Push-Pull Props, Kickers
- A7 Work and Concreting Scaffold
- B1 90° Corners
- B3 90° T-junctions
- B5 Length Compensations
- B6 Stopend Formwork
- B7 Extensions

## Key

### Pictogram | Definition



### Dimension specifications

Dimensions are usually given in cm.  
Other measurement units, e.g. m, are shown in the illustrations.

### Conventions

- Instructions are numbered with:  
1. .... , 2. .... , 3. ....
- The result of an instruction is shown by: → Position numbers are clearly provided for the individual components and are given in the drawing, e.g. 1, in the text in brackets, for example, (1). Multiple position numbers, i.e. alternative components, are represented with a slash, e.g. 1 / 2.

## Presentational reference

The illustration on the front cover of these instructions is understood to be a system representation only. The assembly steps presented in these Instructions for Assembly and Use are shown in the form of examples with only one component size. They are valid accordingly for all component sizes contained in the standard configuration.

For a better understanding, detailed illustrations are partly incomplete. The safety installations which have possibly not been featured in these detailed drawings must nevertheless be available.

## Target Groups

### Contractor

These Instructions for Assembly and Use are designed for contractors who use the formwork systems for

- assembling, modifications and dismantling or
- e.g. concreting or
- for other operations, e.g. carpentry or electrical work.

### Construction site coordinator

The Safety and Health Protection Coordinator\*

- is appointed by the client,
- must identify potential hazards during the planning phase,
- determines measures that provide protection against risks,
- creates a safety and health plan,
- coordinates the protective measures for the contractor and site personnel so that they do not endanger each other,
- monitors and ensures compliance with the protective measures.

### Qualified and competent personnel

Due to the specialist knowledge gained from professional training, work experience and recent professional activity, the qualified person has a reliable understanding of safety-related issues and can correctly carry out tests. Depending on the complexity of the test to be undertaken, e.g. scope of testing, type of testing or the use of a certain measuring device, a range of specialist knowledge is necessary.

- Designation of the safety precautions in the event of changing weather conditions which could adversely affect the safety of the formwork system concerned as well as the personnel.
- Details regarding the permissible loads.
- Description of any other risks that are associated with the assembly, modification or dismantling procedures.



**In other countries, ensure that the relevant national guidelines and regulations in the respective current version are complied with!**

### Qualified specialists

Formwork systems may only be assembled, modified or dismantled by personnel who are suitably qualified to do so. For the work to be carried out, the qualified workers must have received instructions\*\* which contain at least the following points:

- An explanation of the plan for the assembly, modification or dismantling of the formwork system in an understandable form and in the language of the user.
- Description of measures in order to safely assemble, modify or dismantle the formwork system.
- Designation of the preventive measures to avoid the risk of persons and objects falling.

\* Valid in Germany: Regulations for Occupational Health and Safety on Construction Sites 30 (RAB 30).

\*\* Instructions are given by the contractor himself or a qualified and competent person selected by him.

## Additional Technical Documentation

- Instructions for Use
  - Lifting Hook MAXIMO 1.5 t
  - Lifting Gear Combi MX
  - Lifting Gear MX
  - Pallets and Stacking Devices
  - Concrete Cones
  - PERI Bio Clean
- Data Sheet for Anchor Bolt 14/20 x 130
- PERI Design Tables – Formwork and Shoring
- MAXIMO Brochure

## Intended Use

### Product description

PERI products have been designed for exclusive use in the industrial and commercial sectors only by suitably trained personnel.

The MAXIMO wall formwork system is a flexible panel formwork made of steel for residential and industrial construction projects.

With MAXIMO, concrete components can be produced, e.g. walls and foundations.

MAXIMO has the following features:

- Neat tie and joint arrangement.
- Centrally-positioned tie point for different tie systems. One-sided tie technology with spacing adjustment.
- Panel connections with BFD Alignment Coupler – also possible in area of ties.
- Rigid external corners for wall thicknesses from 20 – 60 cm.
- Formlining panels are riveted.
- Compatible with PERI TRIO.

### Technical data

- Panel heights:  
330, 270, 120, 90, 60 and 30 cm.
- Panel widths:  
240, 120, 90, 60, 45 and 30 cm.
- Perm. load of platform and brackets:  
150 kg/m<sup>2</sup>.

### Permissible fresh concrete pressure

#### according to DIN 18218

Evenness according to DIN 18202,  
Table 3, Line 7.

Fresh concrete pressure	Height	Tie System MX 18* / DW 20
Hydrostatic pressure	2.70 m	67.5 kN/m <sup>2</sup>
Triangular load	3.30 m	82.5 kN/m <sup>2</sup>
Constant load	2.70 m	80.0 kN/m <sup>2</sup>
Uniformly distributed load	3.30 m	80.0 kN/m <sup>2</sup>

\* Tie System MX 18 is only valid for panel connections with wall thicknesses ≤ 60 cm. Tie System DW 20 is valid for all wall thicknesses.

Perm. fresh concrete pressure 80 kN/m<sup>2</sup> for 90° corners and 90° T-junctions for wall thicknesses > 40 cm: assembly only with Tie System DW 20 – Walers SRU and ties throughout – see Section D4.

## Instructions for Use

The use in a way not intended, deviating from the standard configuration or the intended use according to the Instructions for Assembly and Use, represents a misapplication with a potential safety risk, e.g. risk of falling.

Only PERI original components may be used. The use of other products and spare parts is not allowed.

Changes to PERI components are not permitted.

## Care and Maintenance Instructions

In order to maintain the value and operational readiness of the formwork materials over the long term, clean the elements after each use.

Some repair work may also be inevitable due to the tough working conditions.

The following points should help to keep care and maintenance costs as low as possible.

Spray the formwork on both sides with the concrete release agent before each use; this allows easier and faster cleaning of the formwork. Spray the concrete release agent very thinly and evenly!

Spray the rear side of the formwork with water immediately after concreting; this avoids any time-consuming and costly cleaning operations.

When used continuously, spray the panel formlining with the concrete release agent immediately after striking; then clean by means of a scraper, brush or rubber lip scraper. Important: do not clean formlining made of plywood with high-pressure equipment; this could result in the formlining being damaged.

Fix box-outs recesses and mounting parts with double-headed nails; as a result, the nails can be easily be subsequently removed, and damage to the formlining is largely avoided.

Close all unused anchor holes with plugs; this eliminates any subsequent cleaning or repair work. Anchor holes accidentally blocked with concrete are freed by means of a steel pin from the formlining side.

When placing bundles of reinforcement bars or other heavy objects on horizontally-stored formwork elements, suitable support, e.g. square timbers, is to be used; as a result, impressions and damage to the formlining are largely avoided.

Internal concrete vibrators should be fitted, if possible, with rubber caps; as a result, any damage to the formlining is reduced if the vibrator is accidentally inserted between the reinforcement and formlining.

Never clean powder-coated components, e.g. elements and accessories, with a steel brush or hard metal scraper; this ensures that the powder-coating remains intact.

Use spacers for reinforcement with a large-sized supports or extensive areas of support; this largely avoids impressions being formed in the formlining when under load.

Mechanical components, e.g. spindles or gear mechanisms, must be cleaned of dirt or concrete residue before and after use, and then greased with a suitable lubricant.

Provide suitable support for the components during cleaning so that no unintentional change in their position is possible.

Do not clean components when suspended on a crane.

## Cross-System

### General

The contractor must ensure that the Instructions for Assembly and Use supplied by PERI are available at all times and are understood by the site personnel.

These Instructions for Assembly and Use can be used as the basis for creating a risk assessment. The risk assessment shall be compiled by the contractor. The Instructions for Assembly and Use do not replace the risk assessment!

Always take into consideration and comply with the safety instructions and permissible loads.

For the application and inspection of PERI products, the current safety regulations and guidelines must be observed in the respective countries where they are being used.

Materials and working areas are to be inspected on a regular basis especially before each use and assembly for:

- signs of damage,
- stability and
- functionality.

Damaged components must be exchanged immediately on site and may no longer be used.

Safety components are removed only when they are no longer required.

Components provided by the contractor must conform with the characteristics required in these Instructions for Assembly and Use as well as all valid construction guidelines and standards. Unless otherwise indicated, this applies in particular to:

- timber components: Strength Class C24 for Solid Wood according to EN 338,
- scaffold tubes: galvanised steel tubes with minimum dimensions of Ø 48.3 x 3.2 mm according to EN 12811-1:2003 4.2.1.2,
- scaffold tube couplings according to EN 74.

Deviations from the standard configuration are only permitted after a further risk assessment has been carried out by the contractor. On the basis of this risk assessment, determine appropriate measures for working and operational safety as well as stability.

Corresponding proof of stability can be provided by PERI on request if the risk assessment and resulting measures to be implemented are made available.

Before and after exceptional occurrences that may have an adverse effect on the safety of the formwork system, the contractor must immediately

- create another risk assessment, with appropriate measures for ensuring the stability of the formwork system being carried out based on the results,
- and arrange for an extraordinary inspection by a qualified and competent person. The aim of this inspection is to identify and rectify any damage in good time in order to guarantee the safe use of the formwork system.

Exceptional occurrences can include:

- accidents,
- longer periods of non-use,
- natural events, e.g. heavy rainfall, icing, heavy snowfall, storms or earthquakes.

### Assembly, modification and dismantling work

Assembly, modification or dismantling of formwork systems may only be carried out by qualified personnel under the supervision of an authorized person. The qualified personnel must have received appropriate training for the work to be carried out with regard to specific risks and dangers.

On the basis of the risk assessment and Instructions for Assembly and Use, the contractor must create installation instructions in order to ensure safe assembly, modification and dismantling of the formwork system.

The contractor must ensure that the personal protective equipment required for the assembly, modification or dismantling of the system, e.g.

- safety helmet,
- safety shoes,
- safety gloves,
- safety glasses,

is available and used as intended.

If personal protective equipment (PPE) is required or specified in local regulations, the contractor must determine appropriate load-bearing points on the basis of the risk assessment.

The personal protective equipment to be used is determined by the contractor.

The contractor must

- provide safe working areas for site personnel which can be reached through the provision of safe access ways. Areas of risk must be cordoned off and clearly marked,
- ensure the stability during all stages of construction, in particular during assembly, modification and dismantling of the formwork,
- ensure and prove that all loads are safely transferred.

### Utilization

Every contractor who uses or allows formwork systems or sections of the formwork to be used, has the responsibility to ensure that the equipment is in good condition.

If the formwork system is used successively or at the same time by several contractors, the health and safety coordinators must point out any possible mutual hazards and all work must be then coordinated.

## System-Specific

Retract components only when the concrete has sufficiently hardened and the person in charge has given the go-ahead for striking to take place.

Anchoring is to take place only if the anchorage has sufficient concrete strength.

During striking, do not tear off the formwork elements with the crane.

If a storm warning is given, additional push-pull props are to be attached or other bracing measures are to be carried out along with implementing the bracing specified in the PERI design tables.

## Storage and Transportation

Store and transport components ensuring that no unintentional change in their position is possible. Detach load-bearing devices and lifting gear from the components that have been set down only if they are in a stable position and no unintentional change is possible.

Do not drop the components.

Use PERI load-bearing devices and lifting gear as well as only those load-bearing points provided on the component.

During the moving procedure,

- ensure that components are picked up and set down so that unintentional falling over, falling apart, sliding, falling down or rolling is avoided,
- no persons are allowed to remain under the suspended load.

The access areas on the jobsite must be free of obstacles and tripping hazards as well as being slip-resistant.

For transportation, the surface must have sufficient load-bearing capacity.

Use original PERI storage and transport systems, e.g. crate pallets, pallets or stacking devices.

# A1 Storage and Transportation

PERI

## Transport



- The panels should never be treated with a concrete release agent immediately before transport due to safety reasons.
- Manually-created transport units must be correctly stacked and secured!
- Instructions for Use for PERI Pallet and Stacking Devices must be followed at all times!

PERI pallets and stacking devices are suitable for lifting by crane or forklift. They can also be moved with the PERI Pallet Lifting Trolley. All pallets and stacking devices can be lifted using both the longitudinal and front sides.

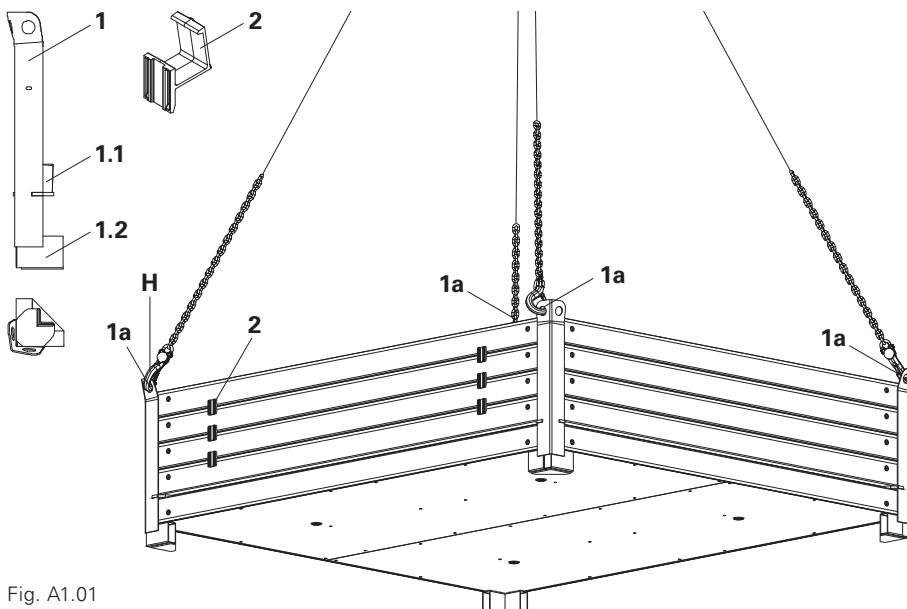


Fig. A1.01

Pos. Aids	Item no.
1 Stacking Device MX	115058
2 Stacking Aid MX	113019

## Stacking Device MX



- Only panels of the same size are to be transported in one stack!
- Use 4-sling lifting gear. On each stacking device, attach a hook (H) to one load-bearing point (1a).
  - Four load-bearing points

(Fig. A1.01)

### Perm. load-bearing capacity

650 kg/device = 2.6 t/stack.

### Number of panels per stack

2 – 5 MAXIMO panels of one size with all-round 6 cm edge profile.

### Crane sling angle ≤ 45°

4-sling lifting gear L = 3.0 m.  
(Fig. A1.01)

### Stacking height

3 stacks, one on top of the other.

### Putting loads into the stacking device

1. Place the first panel with the formlining facing downwards on the rectangular tube (1.2). (Fig. A1.02)
2. Place the second panel with the formlining facing upwards in the stacking device. (Fig. A1.03)
  - The vertical support plate (1.1) positions the panel and now allows safe transportation of the panels.
3. Position Stacking Aid MX (2) – 2 per longitudinal side.
  - Formlining is protected.
4. Place other panels with the formlining facing upwards.
5. Alternatively place stacking aids and panels until the maximum number of panels has been reached.

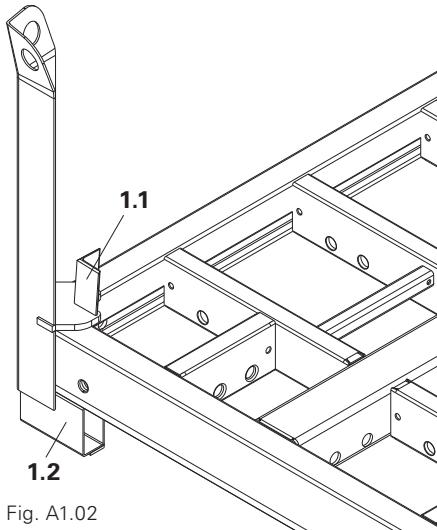


Fig. A1.02

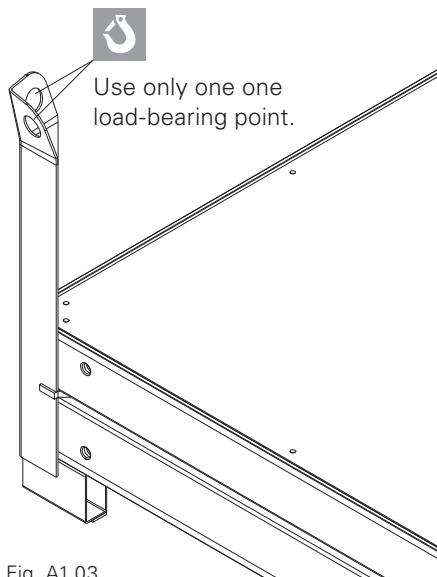


Fig. A1.03

### Panel removal

Remove panels individually with locking pins of the transport lifting gear.

# A1 Storage and Transportation

PERI

## Stacking Aids MXI, MXA, and MX Flat



### Stacking aids

- are not transport safety devices!
- are used as transport safety devices only in combination with transport belts.

Pos.	Component	Item no.
3	Stacking Aid R MXI	118112
4	Stacking Aid L MXI	118110
5	Stacking Aid R MXA	118105
6	Stacking Aid L MXA	118103
7	Stacking Aid MX Flat	118100

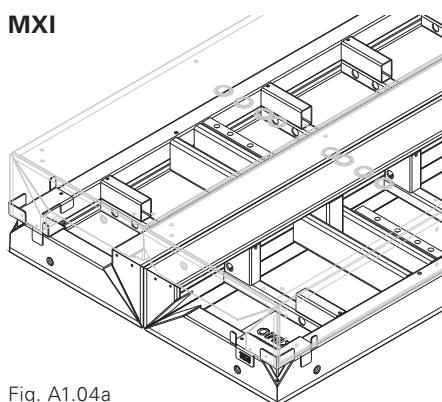


Fig. A1.04a

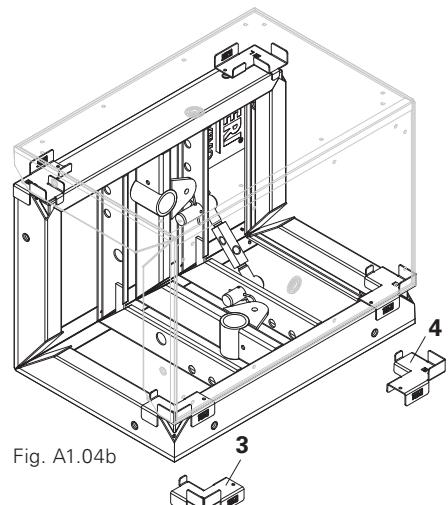


Fig. A1.04b

## Stacking Aid MXI



Take into account there are right and left versions.

### Inside Corners MXI 18, height x 50/20

Stack with

- two shaft corners (not shown),
- four shaft corners: install stacking aids only on the corners. (Fig. A1.04a)

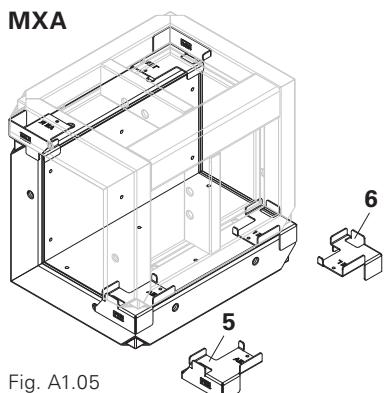


Fig. A1.05

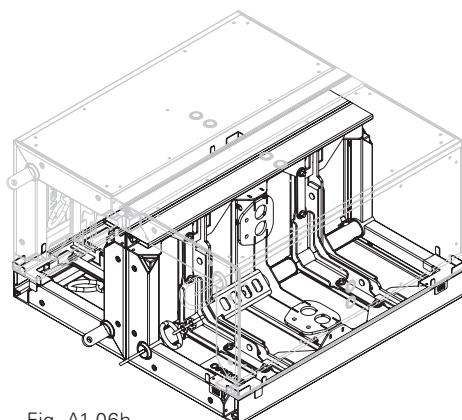


Fig. A1.06b

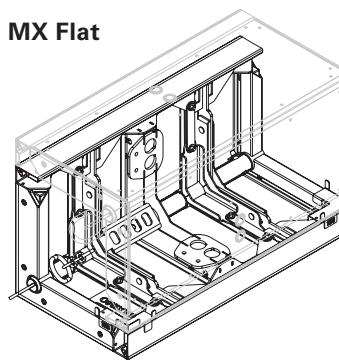


Fig. A1.06a

## Stacking Aid MXA



Take into account there are right and left versions.

### Outside Corners MXA height x 45 or MXA height x 35

(Fig. A1.05)

## Stacking Aid MX Flat

### For Shaft Corners MXSE 18 x height

Stack with

- two shaft corners:  
install stacking aids on the corners at the top and bottom, (Fig. A1.06a)
- four shaft corners:  
install Stacking Aids MX Flat (7) only on the corners at the bottom.  
(Fig. A1.06b + A1.06c)



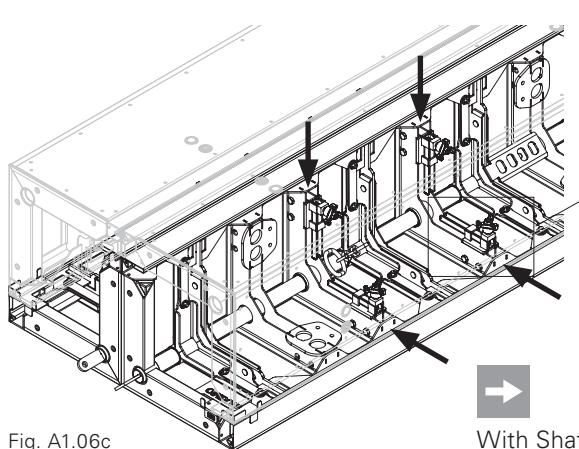


Fig. A1.06c

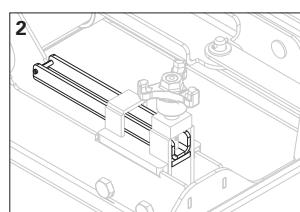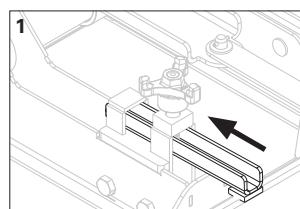

With Shaft Corners MXSE 18 height > 120, turn the top panel. (not shown)

Push back positioning waler for

stacking, and secure. (Fig. A1.06c)

## Assemble placing formwork



- Secure panels with push-pull props to prevent tipping over and counter wind forces!
- Secure push-pull props first, and then release crane lifting gear!

1. Insert all swivel nuts in the tie points. (Fig. A2.01)
2. Tighten eyebolts of the swivel nuts.
3. Mount push-pull props, see Section A6.
  - On the first panel:  
2 push-pull-props. (Fig. A2.02)
  - Second panel onwards:  
1 push-pull prop. (Fig. A2.05)
4. Mount Lifting Hook MAXIMO 1.5 t.
5. Attach the 2-sling lifting gear.
6. Transport panel to place of operation by crane. (Fig. A2.03)
7. Secure push-pull prop, see Section A6.
8. Release crane lifting gear.

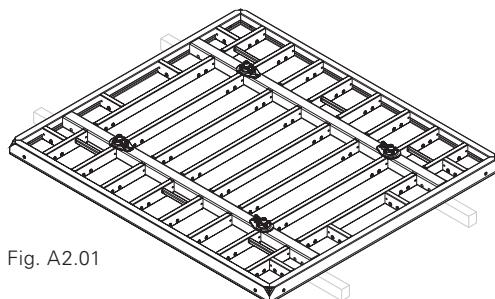


Fig. A2.01

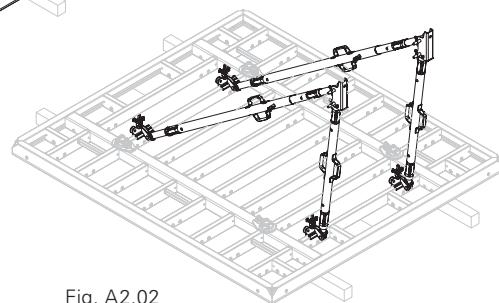


Fig. A2.02

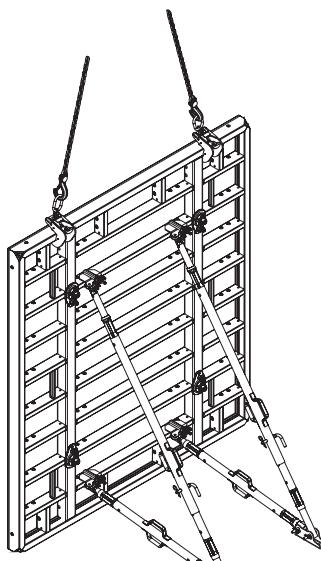


Fig. A2.03

## Mount closing formwork with work and concreting scaffold



**Install top anchor first, and then release the crane lifting gear!**

1. Mount the work and concreting scaffold on the horizontally-positioned panel, see Section A7.
2. Install decking and guardrails. (Fig. A2.04a + A2.04b)
3. Mount Lifting Hook MAXIMO 1.5 t.
4. Transport panel to place of operation by crane.
5. Install anchor, see Section A5.
6. Release crane lifting gear.

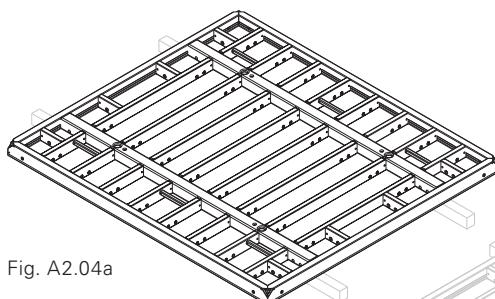


Fig. A2.04a

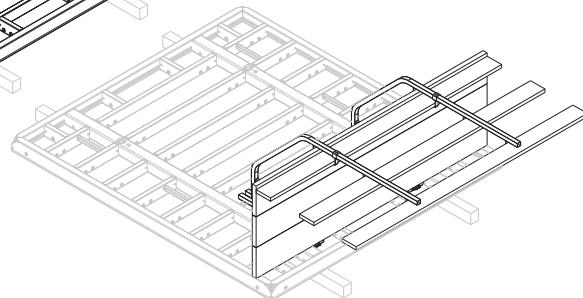


Fig. A2.04b

Forming from the external or internal corner in the direction of the compensation.

## Concreting

From a secure working scaffold.  
(Fig. A2.05)



- Wear personal protective equipment (PPE) to prevent falling from a height.
- Before moving, dismantle the work and concreting scaffold!
- Concrete strength must be taken into account!
- Secure panels against tipping over and wind forces!
- Secure push-pull props first, and then release crane lifting gear!

## Releasing the closing formwork

1. Dismantle work and concreting scaffold.
2. Mount Lifting Hook MAXIMO 1.5 t on the panel and attach to crane lifting gear.
3. Remove ties.
4. Release panel connection.
5. Release panel from the concrete, e.g. with a stripping bar.
6. Carefully lay the panel down and clean.

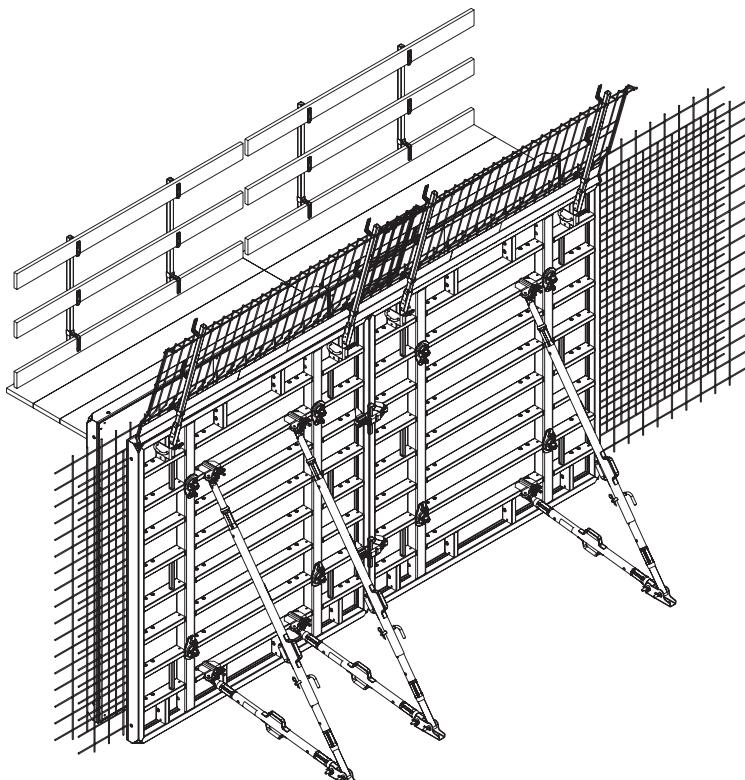


Fig. A2.05

## Moving the primary formwork

1. Dismantle opposing guardrails.
  2. Mount Lifting Hook on the panel and attach to the crane lifting gear.
  3. Release panel connection.
  4. Remove anchor bolts of the push-pull props.
  5. Release panel from the concrete, e.g. with a stripping bar.
  6. Carefully lay the panel down and clean.
  7. Move panel to place of installation by crane.
  8. Connect panel with the Alignment Coupler BFD, see Section A4.
  9. Secure push-pull props, see Section A6.
  10. Release crane lifting gear.
- (Fig. A2.06)

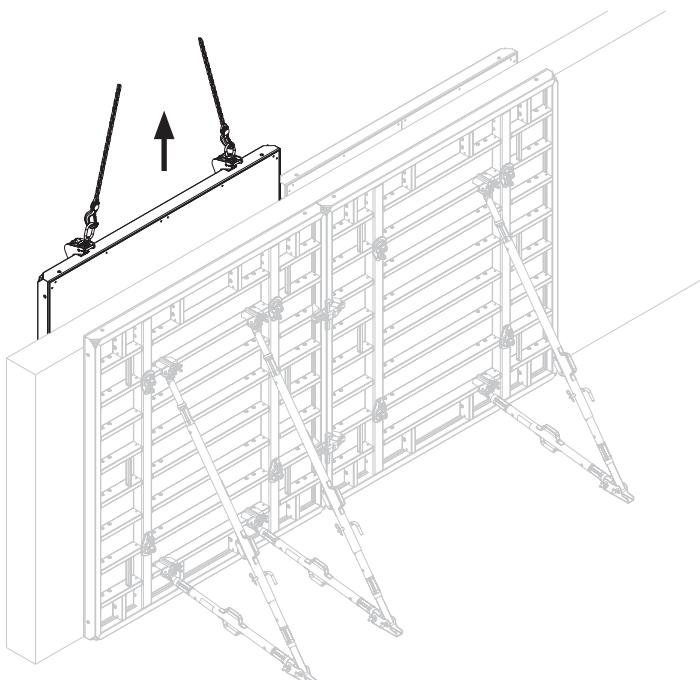


Fig. A2.06

## Closing the formwork

1. Move panel of the closing formwork to the place of installation by crane.
2. Connect panels.
3. Install anchors.
4. Release crane lifting gear.
5. Mount work and concreting scaffold.

## Cleaning

with PERI Bio Clean and release agent spraying equipment.





Consider PERI Bio Clean operating instructions!

# A3 Panels

**PERI**

		Width [cm]					
		240	120	90	60	45	30
Height [cm]		30	60	90	120	150	180
	30						
	60						
	90						
	120						
	150						
	180						
	210						
	240						
	270						
	300						
	330						

# A3 Panels

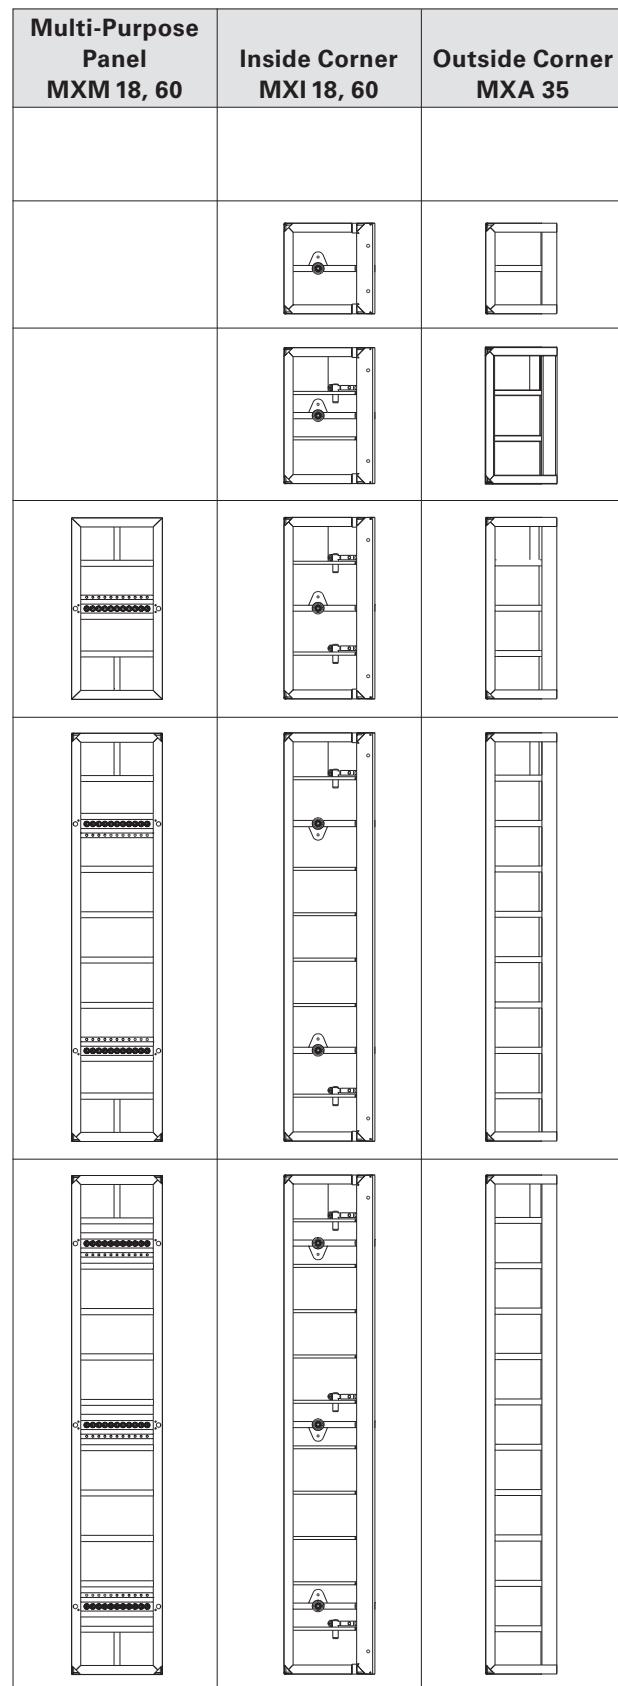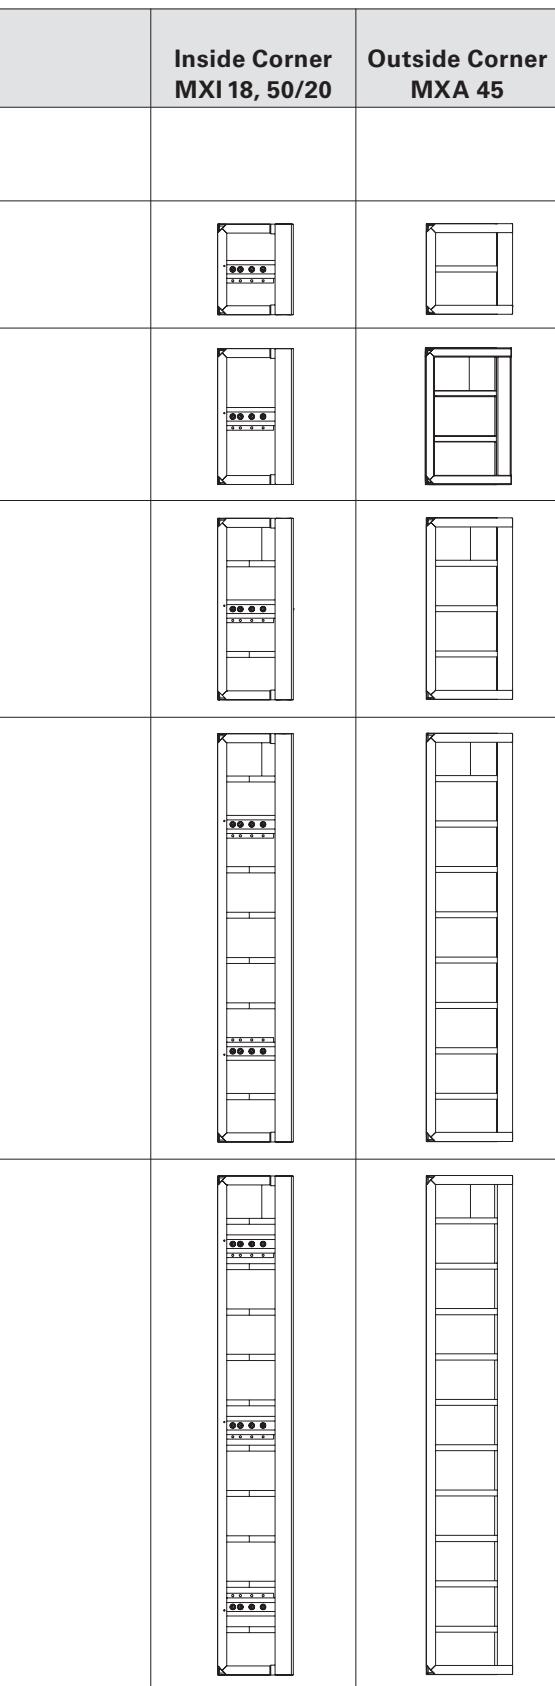


# A3 Panels

**PERI**





## Panel Width 240 cm



**Do not use the positioning strut (10.5) for transporting with the crane!**  
**Do not use the positioning strut as a climbing aid!**

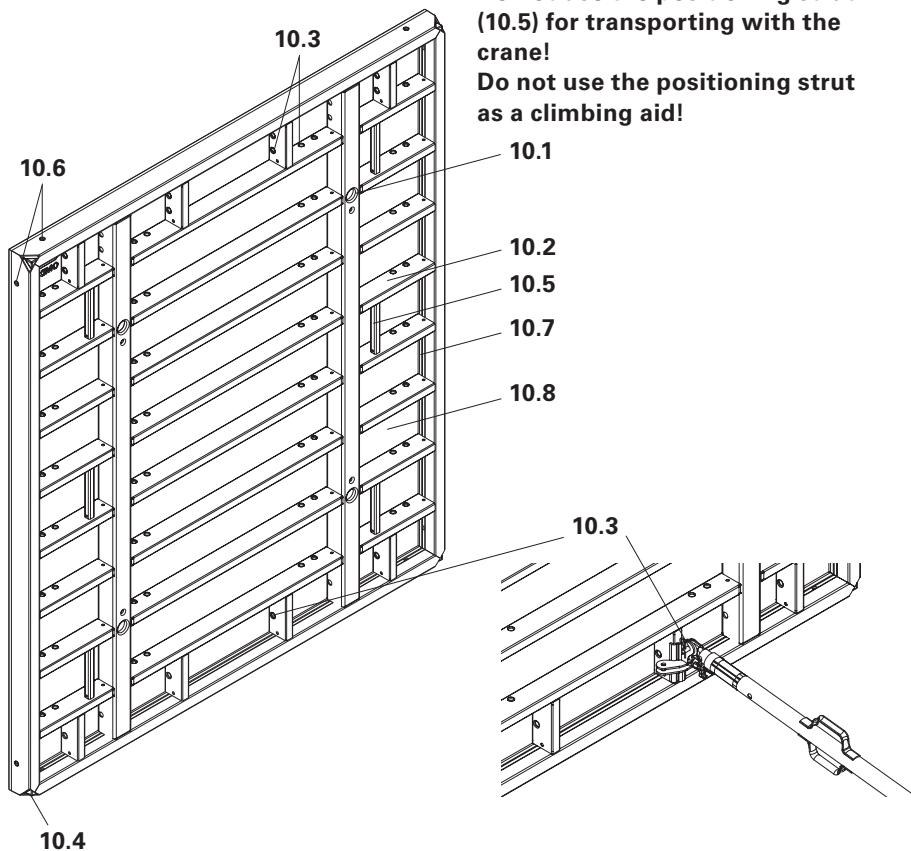

## Panel Width 120 cm

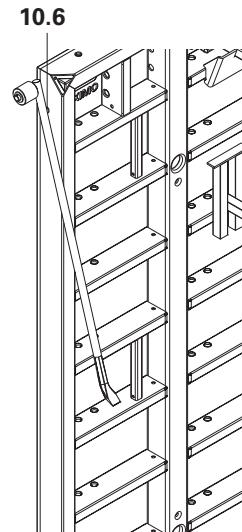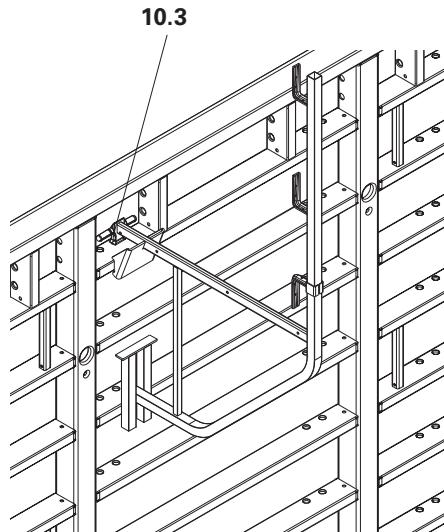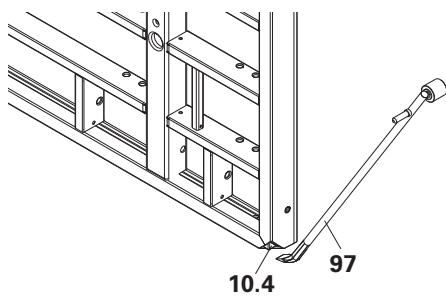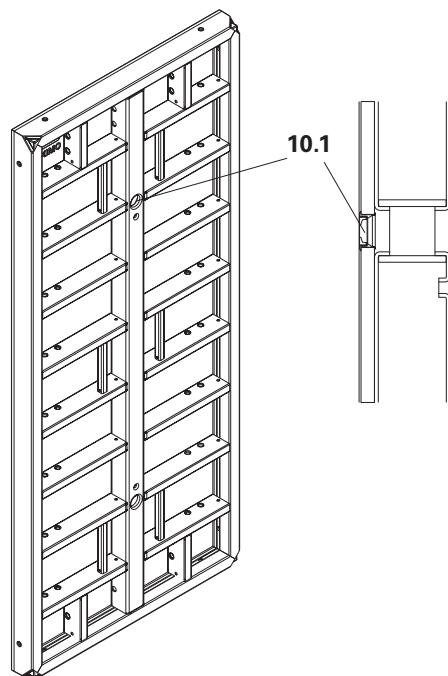

- (10.1) Tie point with sealing
- (10.2) Panel strut
- (10.3) Connecting hole possibilities for scaffold brackets, push-pull props and other accessories
- (10.4) Levering corner
- (10.5) Positioning strut for positioning the panel
- (10.6) Transportation opening, e.g. for stripping lever
- (10.7) Frame
- (10.8) Formlining
- (97) Stripping lever



# A4 Panel Connections

**PERI**

## Alignment Coupler BFD

Item No. 023500 (Fig. A4.01a)

BFD	MXI 18, H x 50/20	MXI 18, H x 60	Length com- pensations see Section	Stopend Formwork	Extensions
<b>Height (H) standard joint</b>					
<b>270 cm</b>	2 pieces	B1+B3	D2+D3	B5	B6
<b>330 cm</b>	3 pieces	C1+C3	D2+D3	C6	C7

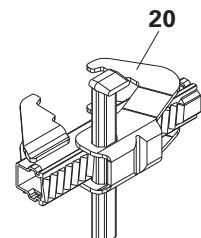


Fig. A4.01a

## Assembly

1. Place wedge in upper end position.
2. Open sliding part. (Fig. A4.01b)
3. Place BFD on panel strut.
4. Close sliding part.
5. Secure wedge. (Fig. A4.02a)  
→ The Alignment Coupler is now securely in position.

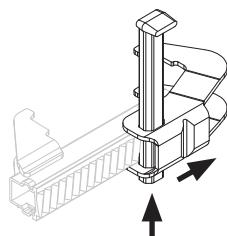


Fig. A4.01b

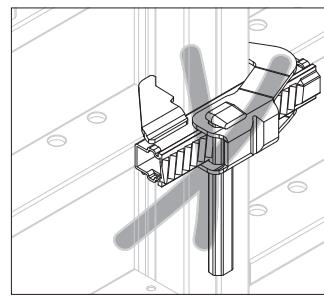


Fig. A4.02b

If the wedge head rests on the sliding part, there is no clamping effect! (Fig. A4.02b)

Then: release wedge, re-position the sliding part and secure once again with the hammer.

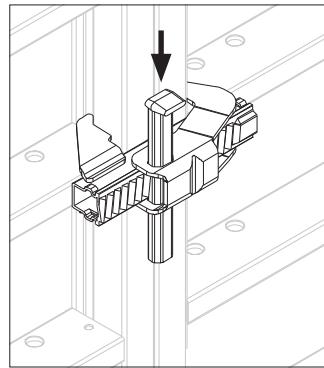


Fig. A4.02a

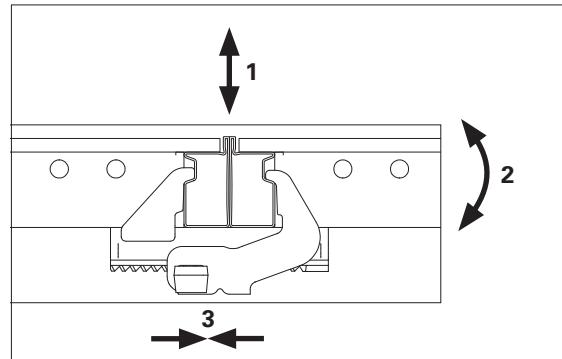


Fig. A4.03

When securing the wedge, the following effects occur due to the angle of the frame profile:

- **1** Panels are flush.
- **2** Panels are aligned.
- **3** Panels are tightly connected.

(Fig. A4.03)

## Arrangement of the Alignment Couplers

Height 270 cm, see Fig. A4.04a.

Height 330 cm, see Fig. A4.04b.

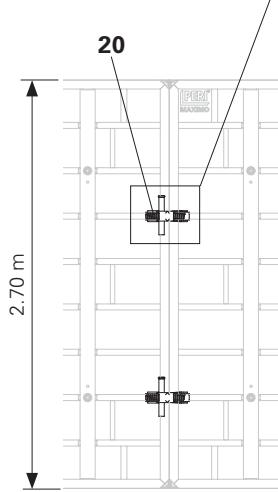


Fig. A4.04a

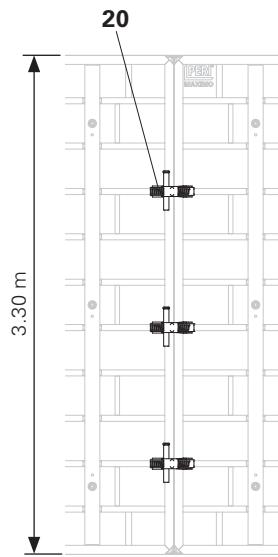


Fig. A4.04b

## Compensation Walers

### MAR 85 and MAR 170

(Fig. A4.05)

The Compensation Waler MAR have a triple function as panel connections: to brace, align, and transferring forces.

#### Areas of use:

- length compensation: see B5,
- corners with double Wall Thickness Compensator WDA,
- extensions at great heights: see B7,
- offset struts, see Fig. A4.06a.

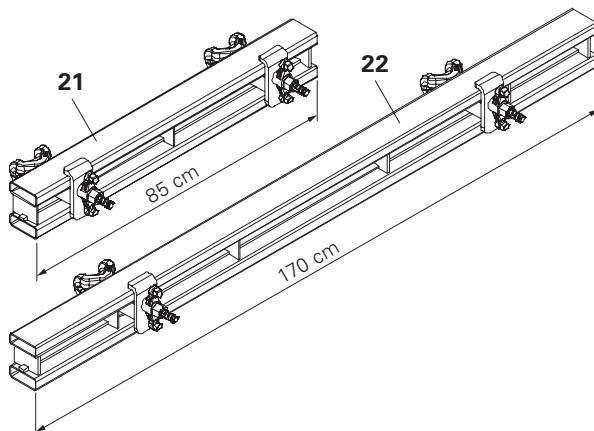


Fig. A4.05

#### Pos. Component – alternative Item no.

<b>21</b>	Compensation Waler MAR 85-3	124941
<b>22</b>	Compensation Waler MAR 170-3	124942

#### Assembly

1. Insert hook in the connecting holes of the panel.
  2. Tighten nut.
- (Fig. A4.06)

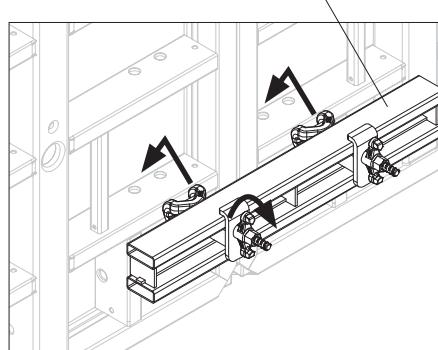


Fig. A4.06

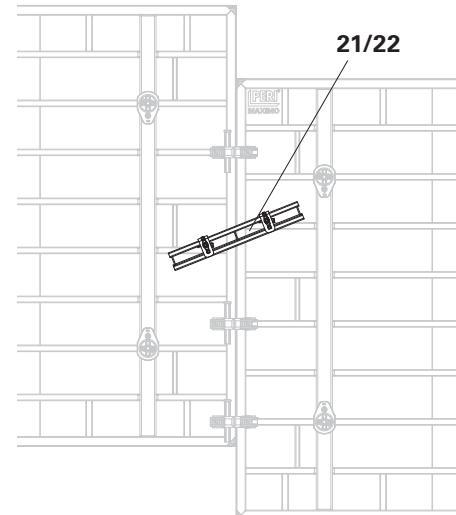


Fig. A4.06a



With T-junctions on the straight wall, install Compensation Waler MAR 170 (22) centrally to the outgoing wall. Attach the double hook of the compensation waler to the middle holes. (Fig. A4.07) 90° T-junctions, see Section D3.

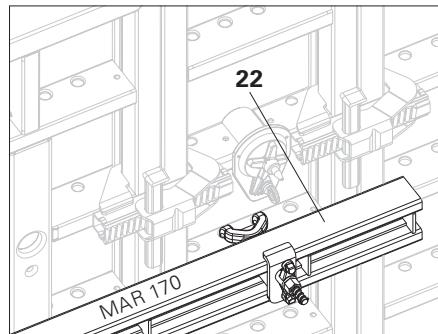


Fig. A4.07

## Tie System MX 18

Perm. tensile force of the tie rods:

**130 kN.**

### MX 18 Ties 15 – 25

Item no. 123901

Ties for wall thicknesses of 15, 17.5, 20, 22, 24 and 25 cm (30).  
(Fig. A5.01)

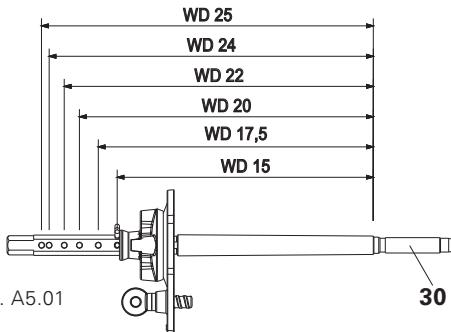


Fig. A5.01

### MX 18 Ties 20 – 30

Item no. 123902

Ties for wall thicknesses of 20, 22, 24, 25 and 30 cm (31).  
(Fig. A5.02)

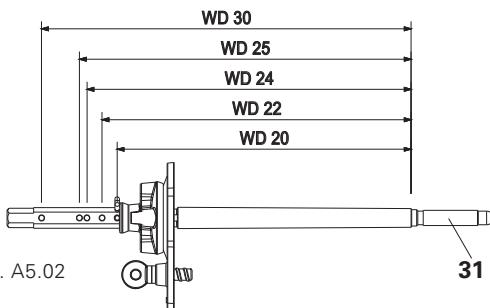


Fig. A5.02

### MX 18 Ties 30 – 40

Item no. 123903

Ties for wall thicknesses of 30, 35, 36 and 40 cm (32).  
(Fig. A5.03)

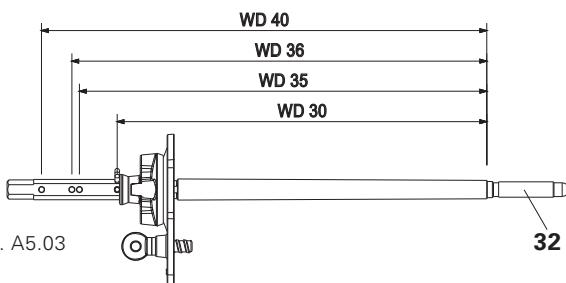


Fig. A5.03

### MX 18 Ties 40 – 50

Item no. 123904

Ties for wall thicknesses of 40, 45 and 50 cm (33).  
(Fig. A5.04)

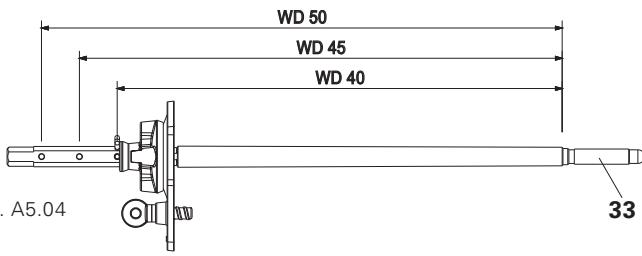


Fig. A5.04

### MX 18 Ties 50 - 60

Item no. 123905

Ties for wall thicknesses of 50, 55 and 60 cm (34).  
(Fig. A5.05)

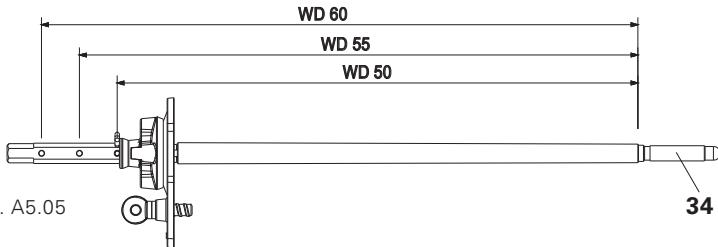


Fig. A5.05

## Mount ties

Pos.	Components	Item no.
10	MAXIMO MX 18 Panel	acc. to size
31	MX 18 Tie	acc. to size*
35	Swivel Nut MX 18	123900
40	TRH Tie Rod Spanner	108719
57	Scaffold ratchet	796061
	alternative: to Pos. 40	

\* size of tie is determined by wall thickness.

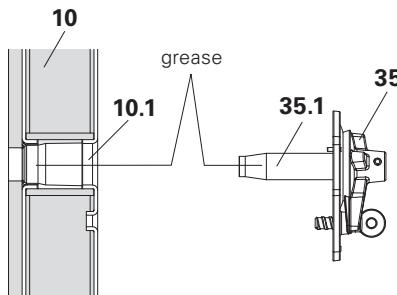


Fig. A5.04a

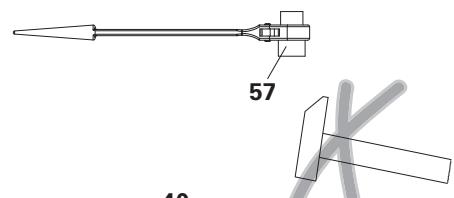


Fig. A5.04b

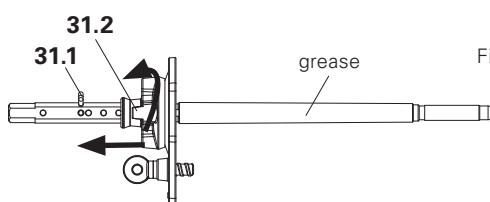


Fig. A5.05

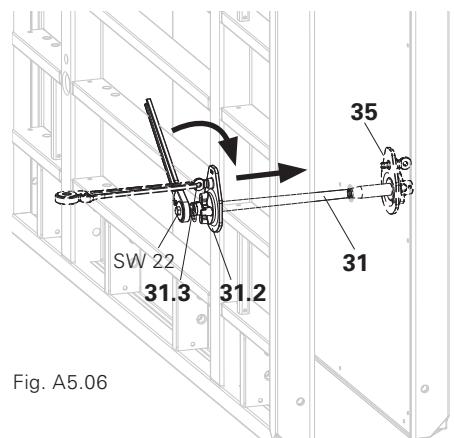


Fig. A5.06



**Before moving each time, tighten Swivel Nut MX 18 with the ring bolt.**



- Only use a Tie Rod Spanner (40) or scaffold ratchet (57).
- Do not attach any extensions – results in tie damage.
- Do not use any ties which are damaged.

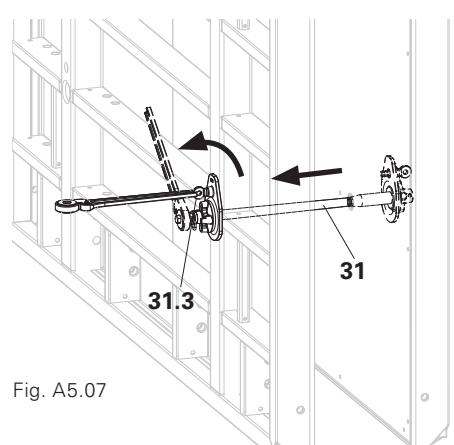


Fig. A5.07

## Prepare ties

1. Mark out wall thickness with cotter pin (31.1).
2. Turn nut (31.2) to the cotter pin. (Fig. A5.05)
3. Grease MX 18 Tie.

## Closing formwork

### Important: pay attention to the order!

1. Push MX 18 Tie (31) through the tie hole of the formwork and screw into Swivel Nut MX 18 (35).
  2. Turn the plate with the ring spanner so that it can be fixed in position.
  3. Screw in MX 18 Tie with the Tie Rod Spanner as far as possible.  
→ The nut (31.2) is lying flush on the formwork.
  4. Slightly tighten the ring bolt (31.3) by means of the Tie Rod Spanner or scaffold ratchet (57).
- (Fig. A5.06)

## Release ties.

### Important: pay attention to the order!

1. Release ring bolt (31.3) using the Tie Rod Spanner or scaffold ratchet (57).
  2. Screw out MX 18 Tie (31) with the Tie Rod Spanner.
- (Fig. A5.07)

## Closures

### Plug MXM 18, D = 26 mm

Item no. 125099

Closing of tie holes in the formlining, e.g. Multi-Purpose Panel MXM 18, height x 60, Inside Corner MXI 18, height x 50/20 and tie hole.

(Fig. A5.08 + A5.08a)



Fig. A5.08

Example:  
Inside Corner MXI 18,  
height x 50/20

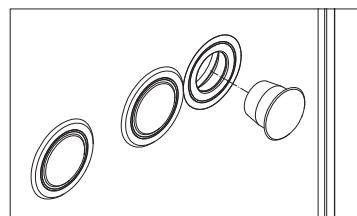


Fig. A5.08a



Fig. A5.09

### Plug MX Ø 24 – 28 mm

Item no. 125300

Visually-attractive closure of the tie point in the concrete. (Fig. A5.09)

## Miscellaneous

Tie Rod Wrench (41) for one-man tie point operations from one side of the formwork. (Fig. A5.10)




Fig. A5.10

## Alternative tie system

### Tie System DW

#### DW 20

For high formwork pressure.

Permissible load of the tie rod according to DIN 18216: 150 kN.

(Fig. A5.11)

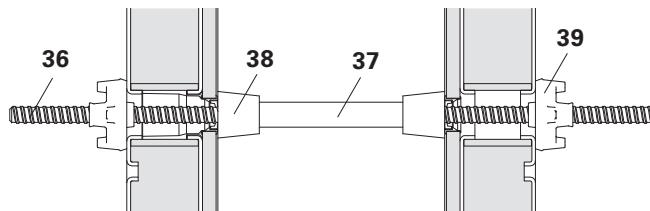


Fig. A5.11

Pos.	Components	Qty
36	Tie Rod DW 20	1x
37	Spacer Tube DR 28	1x
38	DK Sealing Cone	2x
39	Swivel Nut DW 20	2x

## Inclined Ties



- The conical tie hole allows inclined anchoring of up to 4° on all sides. (Fig. A5.11 + A5.15)
- Inclined anchoring is possible with both vertically and horizontally-positioned panels.
- Secure panel against lifting!

For the MX 18 Tie and Tie Rod DW 20, there are further areas of application:

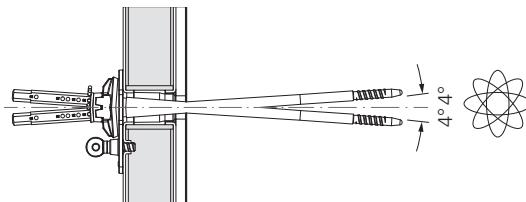


Fig. A5.11

### MX 18 Tie

Inclined on one side: max. 4°.  
(Fig. A5.12)

Inclined on both sides: max. 2 x 4°.  
(Fig. A5.13)

Height offset: max. 1 cm per 10 cm wall thickness.  
(Fig. A5.14)




Fig. A5.12




Fig. A5.13




Fig. A5.14

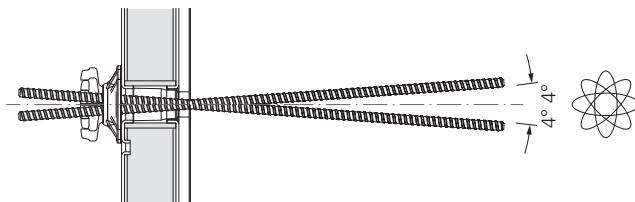


Fig. A5.15

### Tie Rod DW 20

Inclined on one side: max. 4°.  
(Fig. A5.16)

Inclined on both sides: max. 2 x 4°.  
(Fig. A5.17)

Height offset: max. 1 cm per 10 cm wall thickness.  
(Fig. A5.18)

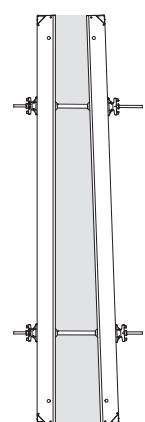


Fig. A5.16

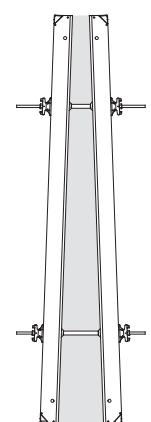


Fig. A5.17

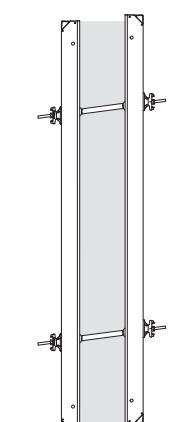


Fig. A5.18

## Closing Tie Points

Sealing against pressing water and non-pressing water for waterproof tie points as well as fire and soundproof tie points.

**There are three types of plugs:**

**1. Stopper MX 18-50 MF LS (90)**

Against non-pressing water and sound.

**2. Stopper MX 18-50 OF LS (91)**

Against non-pressing water, fire and sound.

**3. Stopper MX 18-75 MF-S (92)**

**Stopper MX 18-75 MF-L (93)**

Against pressing water, fire and sound.


**4. Stopper MX 18-75 OF-S (94)**

**Stopper MX 18-75 OF-L (95)**


Against pressing water, fire and sound.

(Fig. A5.19)


MX 18-50 MF LS

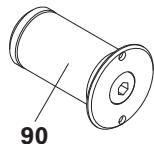

MX 18-75 MF-S  
MX 18-75 MF-L

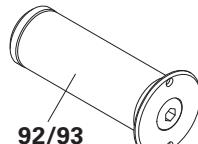

MX 18-50 OF LS

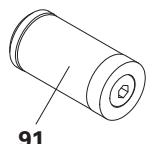

MX 18-75 OF-S  
MX 18-75 OF-L

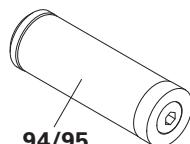


Fig. A5.19



Stoppers are **not** suitable for use in aggressive water or similar, e.g. sewage treatment plants!

## Possible uses of the Stopper MX 18 for tie points with special requirements

Pos.	Stopper	Item no.	Sealing against water	Fire-resistance	Soundproofing
90	MX 18-50 MF LS	127589	Sealing against non-pressing water. Plugs fitted on the water side.	Walls with Fire Resistance F90. <b>Test report available.</b> Plugs on both sides.	Walls with sound protection function. <b>Test report available.</b> Plugs on one side or both sides.
91	MX 18-50 OF LS	127590	Sealing against non-pressing water. Plugs fitted on the water side.	Walls with Fire Resistance F90. <b>Test report available.</b> Plugs on both sides.	Walls with sound protection function. <b>Test report available.</b> Plugs on one side or both sides.
92	MX 18-75 MF-S	127430	For waterproof components, <b>Test report available.</b>	Walls with Fire Resistance F90. <b>Test report available.</b>	Walls with sound protection function. <b>Test report available.</b>
93	MX 18-75 MF-L	127488	Plug on both sides.	Plugs on both sides.	Plugs on one side or both sides.
94	MX 18-75 OF-S	127432	For waterproof components, <b>Test report available.</b>	Walls with Fire Resistance F90. <b>Test report available.</b>	Walls with sound protection function. <b>Test report available.</b>
95	MX 18-75 OF-L	127490	Plug on both sides.	Plugs on both sides.	Plugs on one side or both sides.

### Stopper MX 18-50

**Stoppers MX 18-50 MF LS (90) and MX 18-50 OF LS (91) can be installed in tie holes with small as well as large diameters. (Fig. A5.20)**

90 MX 18-50 MF LS

or  
91 MX 18-50 OF LS  
(red)

Side of the  
large tie hole

90 MX 18-50 MF LS

or  
91 MX 18-50 OF LS  
(red)

Side of the  
small tie hole

Fig. A5.20

93 MX 18-75 MF-L  
or  
95 MX 18-50 OF-L  
(yellow)

92 MX 18-75 MF-S  
or  
94 MX 18-75 OF-S  
(red)


Fig. A5.21

### Stopper MX 18-75

Always install Stopper MX 18-75 MF-S (red) (92) in tie holes with small diameters and Stopper MX 18-75 MF-L (yellow) (93) in tie holes with large diameters. (Fig. A5.21)


## Assembly

1. If necessary, pre-tension Stopper (91 / 92 / 93) 5 mm by means of an allen key.
2. Insert Stopper into the tie opening up to the level of the flange.
3. Attach Stud Spanner MX 18.
4. Tension the Stopper with 10 Nm. (Fig. A5.22)

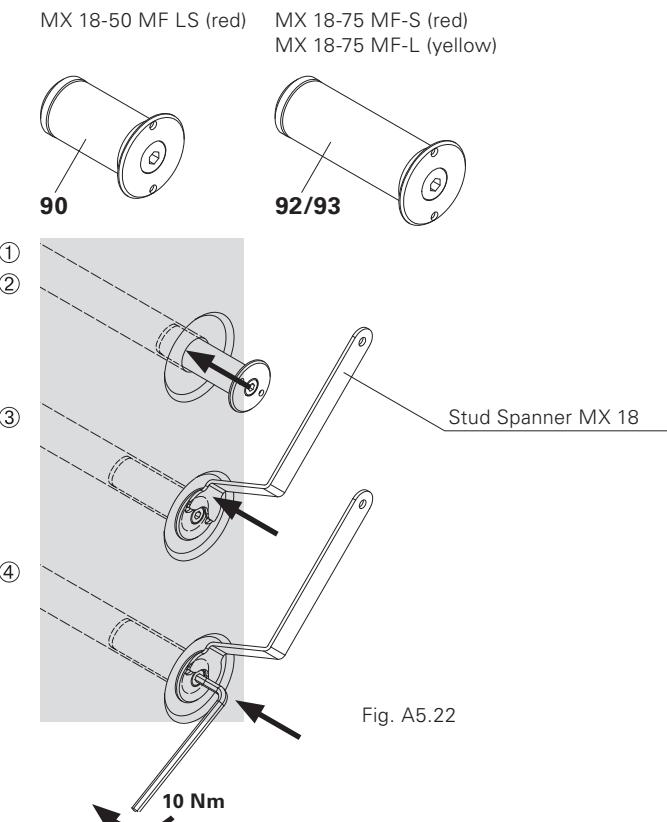

## Assembly

1. Pre-tension Stopper (91) 5 mm by means of an allen key in order that it can be pushed into the tie opening.
2. Insert Stopper using an allen key up to the length of the Stopper.
3. When tensioning, make sure the allen key is at an angle.  
→ Overtightening of the Stopper is therefore prevented.
4. Tension the Stopper with 10 Nm. (Fig. A5.23)

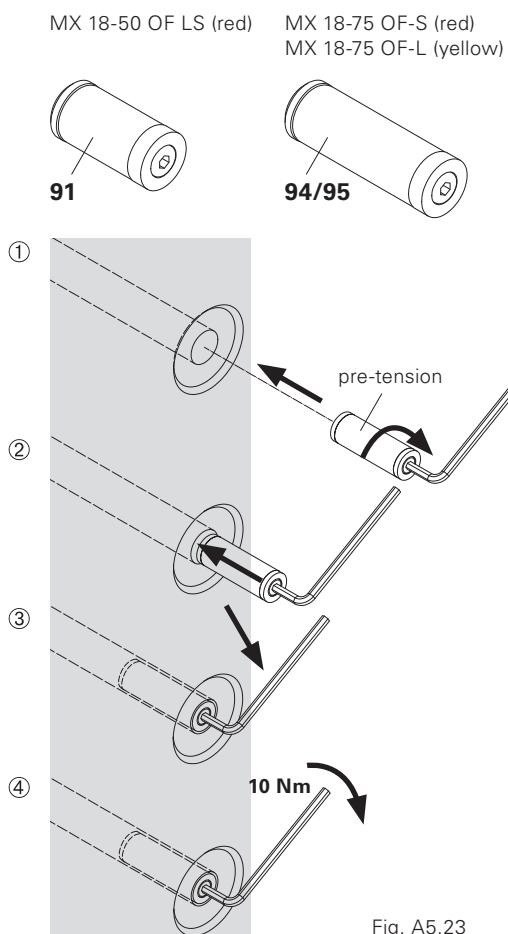

# A6 Push-Pull Props, Kickers

PERI

## Standard application

		Formwork height h [m] System 1						Formwork height h [m] System 2			
		3.00	4.00	5.00	6.00	7.00	8.00	9.00	10.00	11.00	12.00
<b>Permissible width of influence [m]</b>	<b>EB<sub>ref</sub></b>	<b>4.41</b>	<b>3.42</b>	<b>2.69</b>	<b>2.22</b>	<b>2.02</b>	<b>1.74</b>	<b>2.45</b>	<b>2.07</b>	<b>1.80</b>	<b>1.52</b>
Actual push-pull prop load [kN]	<b>F<sub>RS1</sub></b>	11.5	11.5	11.5	11.5	11.5	11.5	11.5	11.0	11.5	11.5
Actual kicker load [kN]	<b>F<sub>RS2</sub></b>							10.9	11.5	11.2	10.5
	<b>F<sub>AV</sub></b>	2.7	2.9	2.8	2.7	3.2	3.5	4.2	3.6	3.4	3.1
<b>Base plate</b> Resulting force [kN]	(1)	13.7	13.7	13.5	13.4	13.7	13.9	11.5	11.0	11.5	11.5
	(2)							14.2	14.3	13.7	12.8
Resulting angle of attack [°]	(1)	52.4	51.1	51.1	51.1	49.4	48.2	60.0	60.0	60.0	60.0
	(2)							47.9	49.8	49.9	49.8
Lifting force V <sub>Wind</sub> [kN/m]		2.5	3.1	3.9	4.7	5.1	5.9	8.4	9.9	11.4	13.0
x = Distance of base plate from rear edge of formwork [m]	<b>x<sub>1</sub></b>	1.2	1.6	2.0	2.4	3.0	3.6	4.2	4.7	5.1	5.5
	<b>x<sub>2</sub></b>							2.6	2.6	2.8	3.0
y = Top connection point from top of formwork [m]	<b>y<sub>1</sub></b>	1.0	1.2	1.5	1.8	1.8	1.8	1.5	1.8	2.1	2.4
	<b>y<sub>2</sub></b>							4.5	5.5	6.2	6.9
q(z=h) = q <sub>h</sub> [kN/m <sup>2</sup> ]		0.59	0.59	0.59	0.59	0.59	0.61	0.64	0.66	0.69	0.71


### Load assumptions:

- Wind loads according to DIN 1055-4:2005-03  $w = q(z) \times c_p \times \kappa$  [kN/m<sup>2</sup>]
- Inland, Wind Load Zone 2
- Assumed aerodynamic coefficient  $c_p = 1.8$  (see graphic, below)
- Formwork in vertical position on ground
- Service life factor  $\kappa = 0.6$
- $q(z) =$  peak velocity pressure
- Inclination of the Push-Pull Prop to the horizontal 60°
- Values are characteristic values

### Note:

Anti-lift off protection is to be provided if the lifting force  $F_A = 1.5 \times V_{Wind} - 0.9 \times G \times h > 0$   $G =$  surface area weight of the formwork including platforms.

### System 2

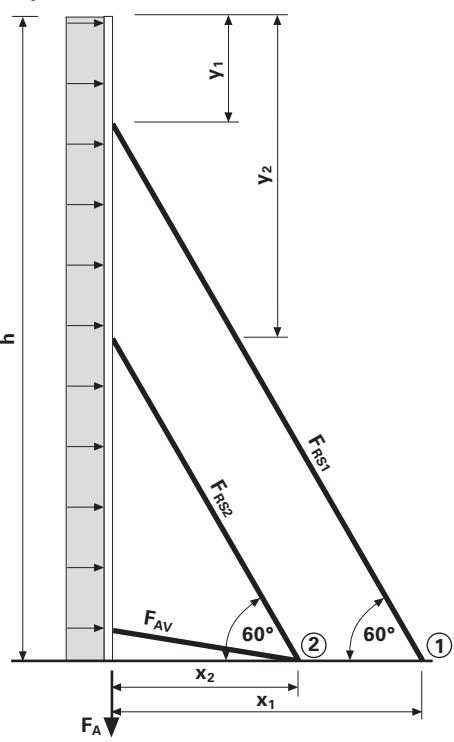

### In the end area $L_E$ , the following $c_p$ -values or wind loads are assumed:

$L/h \leq 3: c_p, End = 2.3^*$

$L/h = 5: c_p, End = 2.9^*$


$L/h \geq 10: c_p, End = 3.4^*$

$L_E =$  length of end area ( $0.3 \times h$ )

$h =$  formwork height

$L =$  formwork length

\*intermediate values are interpolated

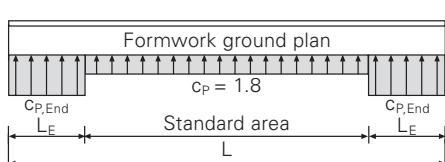

# A6 Push-Pull Props, Kickers

## Brace Connector

Item no. 023660 (Fig. A6.01)

Push-pull props and kickers are attached to the panel with the Brace Connector. Connecting to both horizontal and vertical panel struts is possible. (Fig. A6.02 + A6.03)

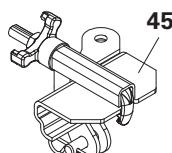


Fig. A6.01

## Assembly

1. Attach the Brace Connector (45) to the panel strut so that the Hook Tie is securely fixed in a connecting hole.
2. Tighten Brace Connector by means of a Triple Wingnut.

Horizontal section (Fig. A6.02a)

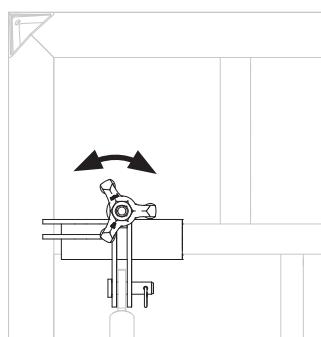


Fig. A6.02

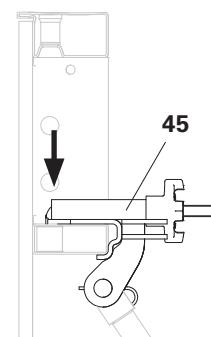


Fig. A6.02a

Vertical section (Fig. A6.03a)

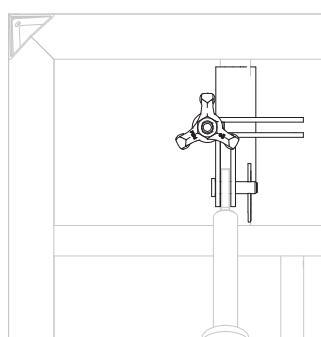


Fig. A6.03

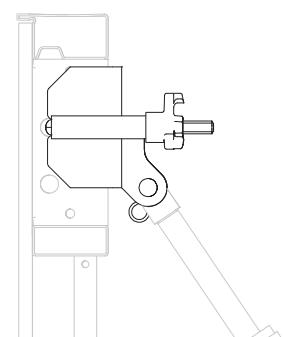


Fig. A6.03a

## Push-Pull Props and Kickers

### Assembly

1. Fix Push-Pull Prop or Kicker (46) to the connection lugs by means of pins and cotter pins. (Fig. A6.04 + A6.04a)
2. Fix Base Plate (47), e.g. with PERI Anchor Bolt 14/20x130. (Fig. A6.04b)



When using the PERI Anchor Bolt 14/20x130, take data sheet into consideration!

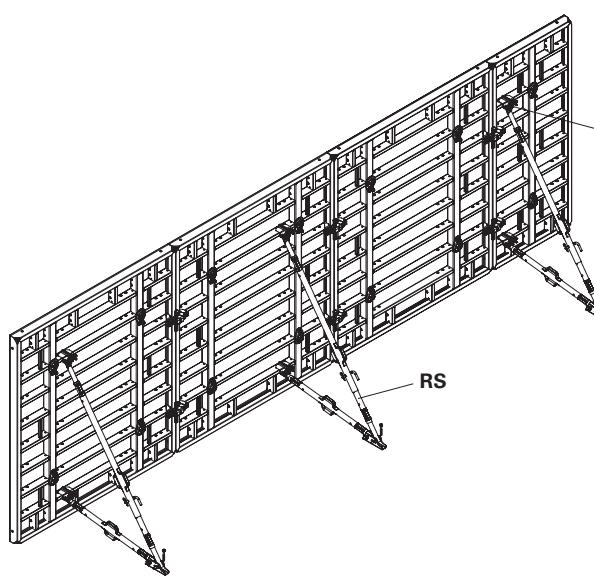


Fig. A6.04

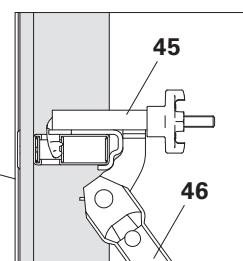


Fig. A6.04a

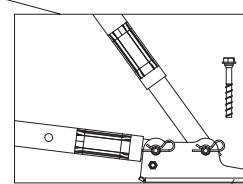


Fig. A6.04b

47

# A7 Work and Concreting Scaffolds

PERI

## Concreting Platform 120/270

Pos.	Component	Item no.
60	Concreting Platform 120/270	022950

**Perm. load: 150 kg/m<sup>2</sup>**

Load Class 2 according to  
DIN EN 12811-1.

### Assembly

1. Fold up guardrails (60.1) and secure with bolts (60.2).  
(Fig. A7.01)
2. Fold up Suspension Beam (60.3) until it engages.



The Sliding Sleeve (60.4) must be in position above.  
(Fig. A7.02)

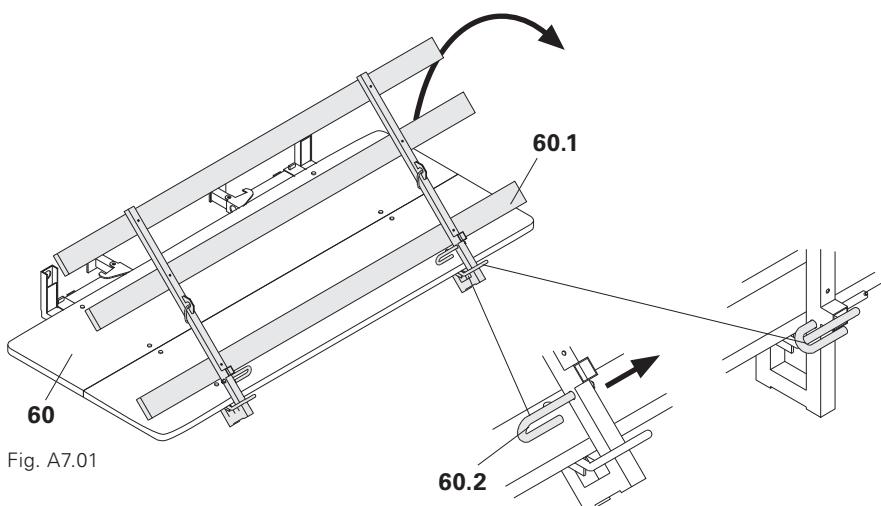


Fig. A7.02

3. Attach 4-sling lifting gear to the concreting platform.  
(Fig. A7.03)



The suspension points (load-bearing points) are coloured yellow.  
Concreting Platform 120/270.

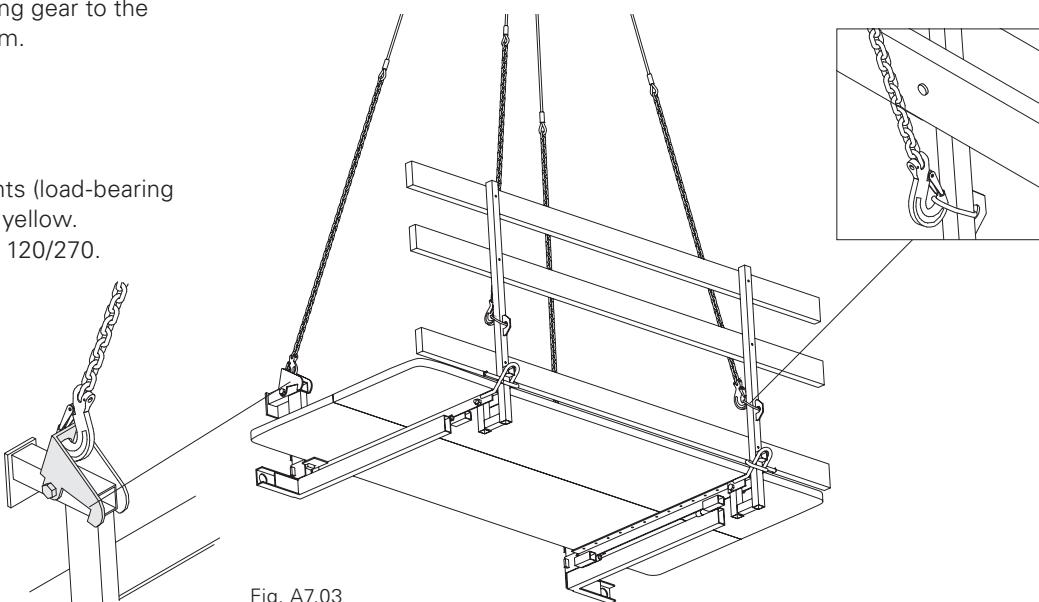


Fig. A7.03

# A7 Work and Concreting Scaffolds

PERI

4. Attach concreting platform to the top edge of the formwork by means of the Suspension Beam. Guide from below using guide rope. (Fig. A7.04)

**Example: height 2.70 m**

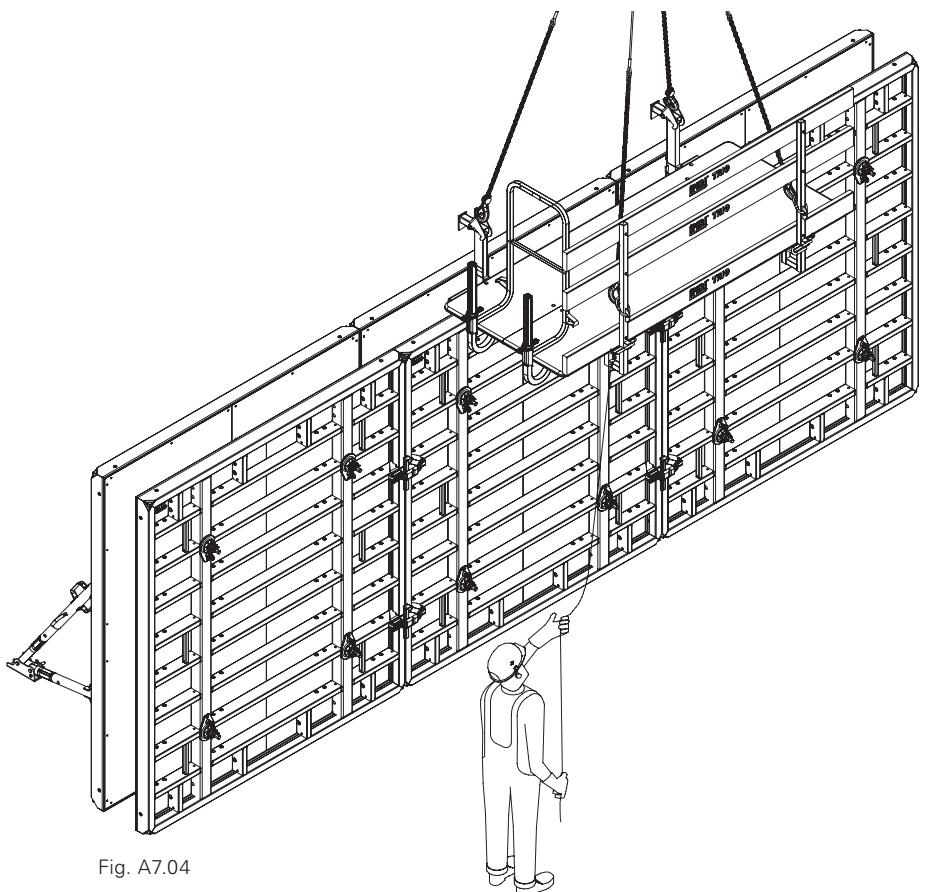


Fig. A7.04

5. Remove 4-sling lifting gear.  
→ The Retaining Claw (60.5) grips the frame profile and secures.  
(Fig. A7.05)



Visual check is carried out on the Retaining Claw.

6. Attach side protection, e.g. End Guardrail Frame 55.



The concreting platform must be dismantled during temporary storage of the element.

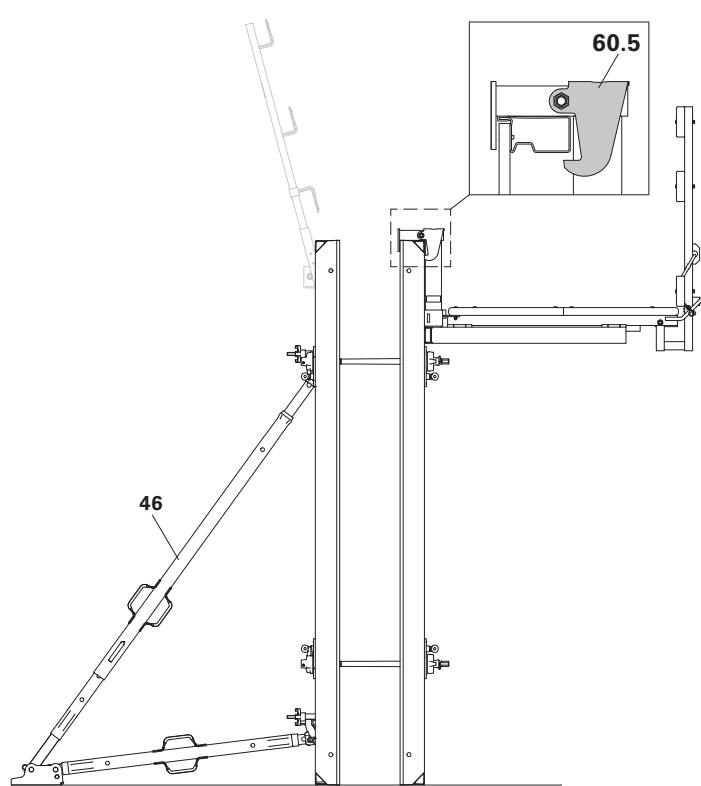



Fig. A7.05

## Place guardrail in an inclined position



Place guardrail in an inclined position before moving with the crane!

1. Remove securing pin and cotter pin (60.2).

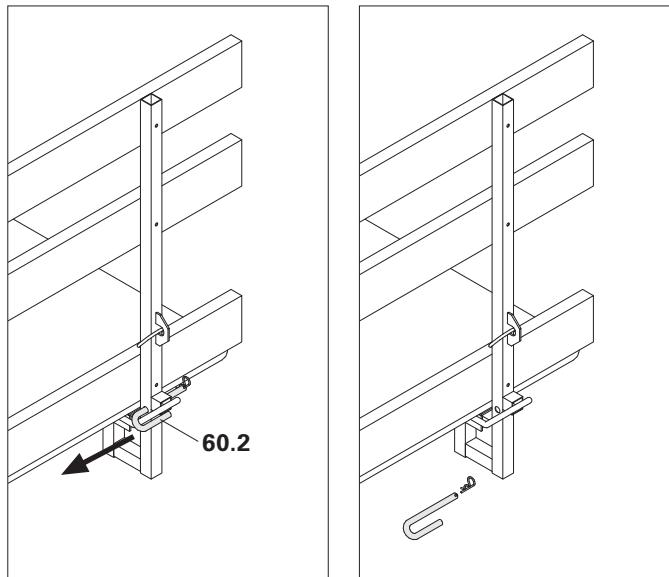

2. Guardrail frame is placed in an inclined position to the rear, max. 15°.
3. Install securing pins and secure with cotter pins.  
→ Guardrail frame is placed in an inclined position.

(Fig. A7.06)

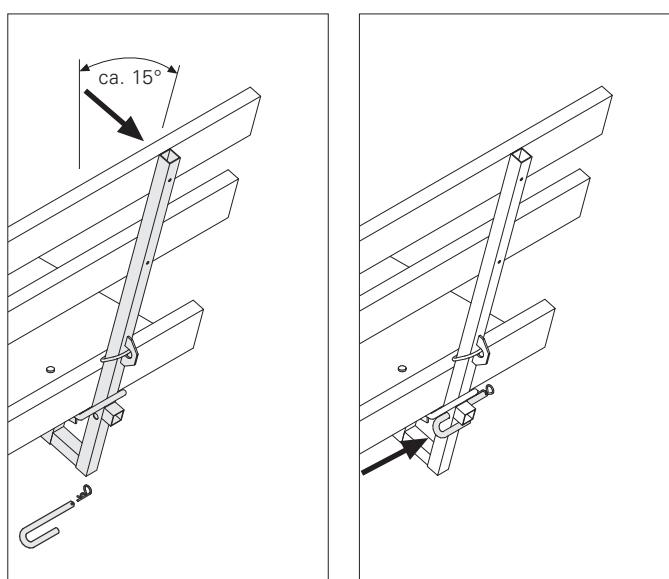


Fig. A7.06

## Scaffold Bracket TRG


TRG 80 or TRG 120

Pos.	Component	Item no.
63	Scaffold Bracket TRG 80	023670
64	Scaffold Bracket TRG 120	023680
65	End Guardrail Frame FTF	104018

A concreting scaffold is erected on the formwork by means of the scaffold brackets.

(Fig. A7.07)

Example: height 2.70 m.

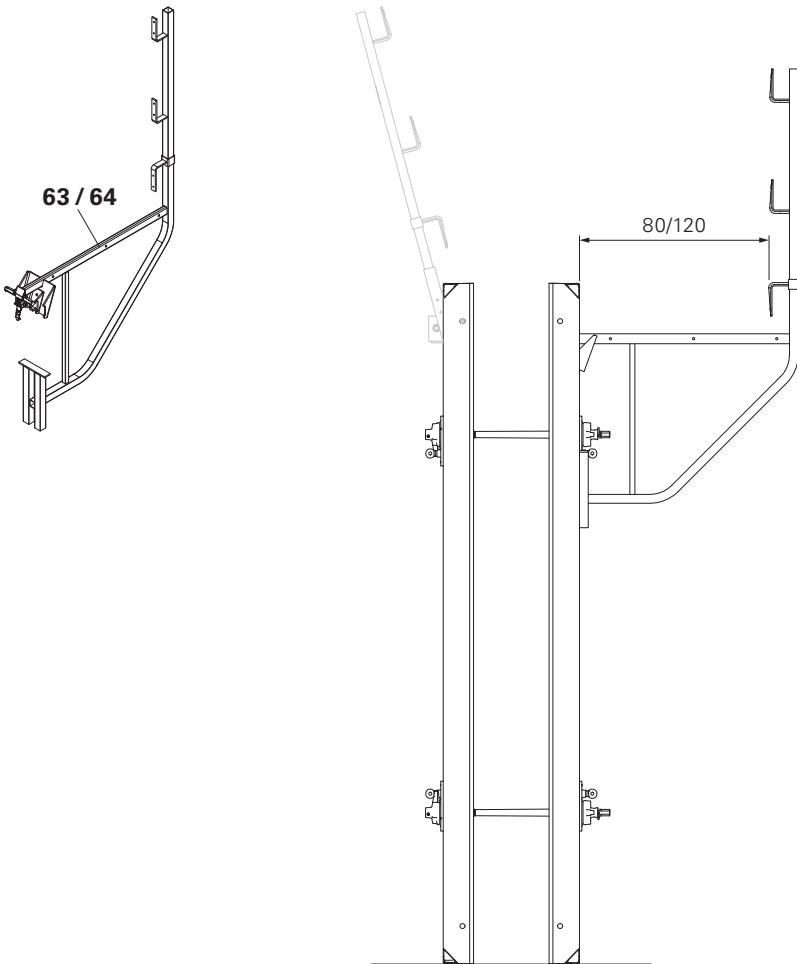

### Technical data

- Perm. load: 150 kg/m<sup>2</sup> Load Class 2 according to DIN EN 12811-1.
- Max. width of influence 1.35 m.



- **Secure planking!**
- **Decking components and guard-rails must be securely mounted in position at all times.**



With extended formwork units, the work scaffold is mounted as part of the pre-assembly process.

Fig. A7.07

# A7 Work and Concreting Scaffolds

PERI

## Assembly of the Scaffold Bracket

**TRG**

1. Hook in Scaffold Brackets (63 / 64) into the connecting holes of the panels. It is possible to use both the horizontal and vertical panel struts. (Fig. A7.08)



Visual check of the mounting equipment.

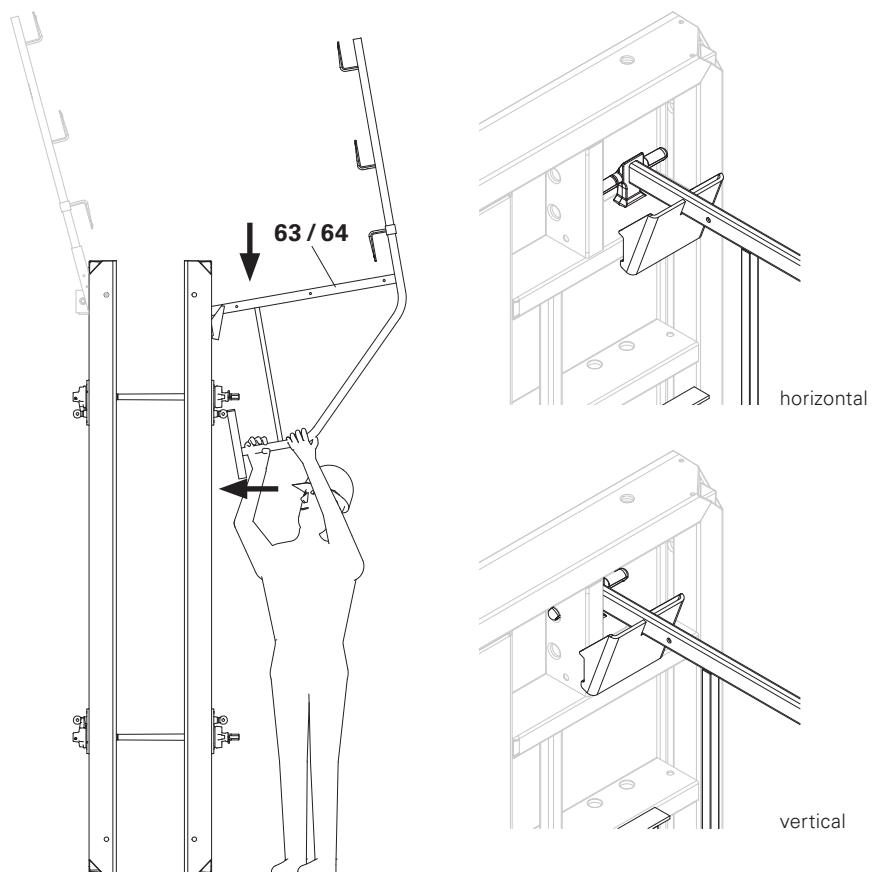


Fig. A7.08

2. Install planking from below over the complete width of the brackets and secure in position.
3. Install guardrails and secure with nails.
4. Attach side protection, e.g. End Guardrail Frame 55 (65).  
(Fig. A7.09)

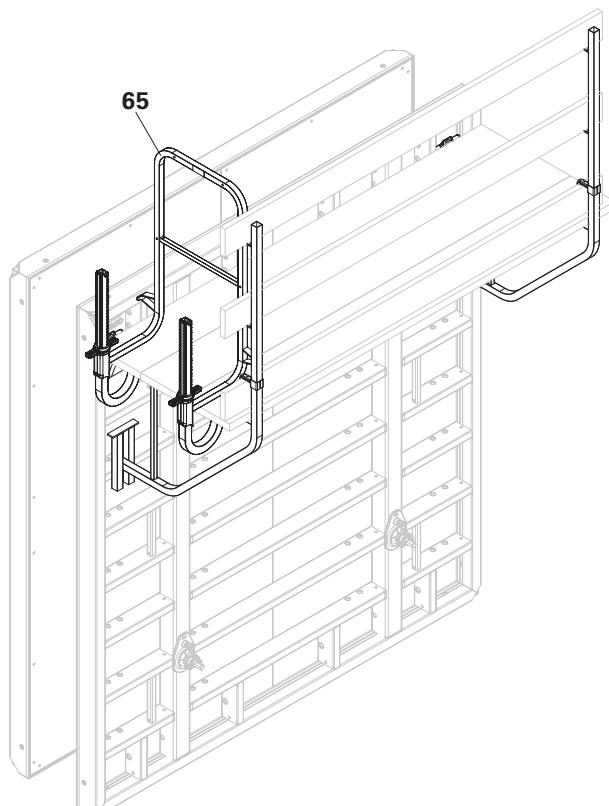


Fig. A7.09

## Guardrails

Pos.	Component	Item no.
66	Guardrail Post Holder	101592
67	Guardrail Post HSGP-2	116292

Mount guardrails on the side opposite to the concreting scaffold. (Fig. A7.10) Assembly is carried out horizontally. In cases of vertical assembly from a safe position, use a mobile scaffold, for example.

### Technical data

Max. width of influence 1.80 m.



**Secure boards with nails!**



- Assembly is only possible on vertical struts!
- With extended formwork units, the guardrails are mounted as part of the pre-assembly process.

### Assembly

1. Hook in Guardrail Post Holder (66) into the connecting holes of the panels.
2. Secure with cotter pins.
3. Insert Guardrail Post HSGP-2 (67).
4. Mount Side Mesh Barrier PMB or install guardrail boards and then secure with nails.  
→ Opposing guardrails  
(Fig. A7.11)

When erecting, make sure that the guardrails are not damaged by the lifting gear.

### Dismantling

Do not lay the formwork unit on the Guardrail Post Holder.

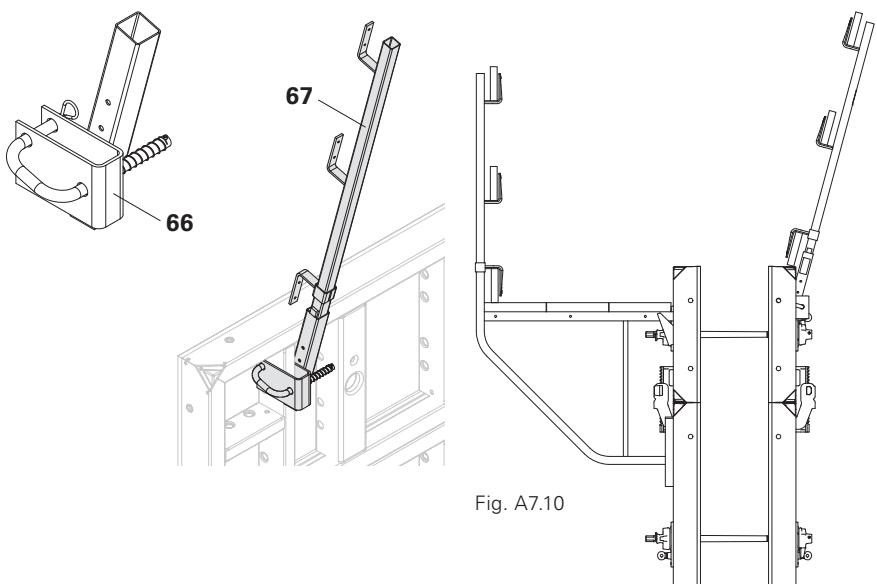


Fig. A7.10

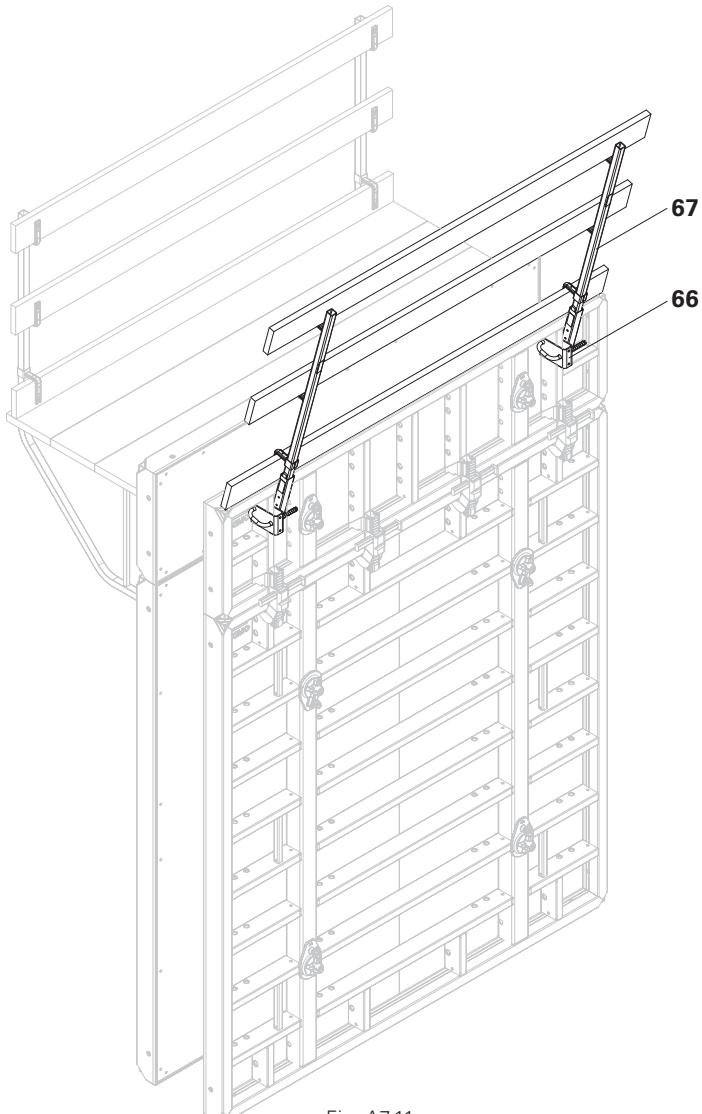


Fig. A7.11

# A8 Downward Extensions

PERI

## Horizontal downward extension panels up to 2.10 m high

### MX 18...30

(Fig. A8.01)

Note: Install 4 BFD Alignment Couplers as panel connections with Downward Extension Panel MX 18...30.

(Fig. A8.01)

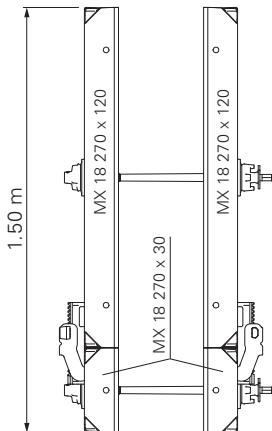


Fig. A8.01

### MX 18...60

(Fig. A8.02)

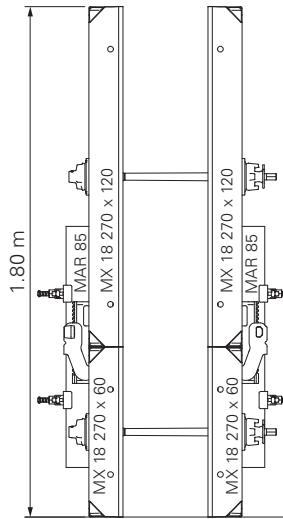
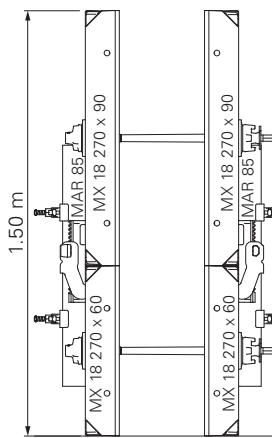


Fig. A8.02

### MX 18...90

(Fig. A8.03)

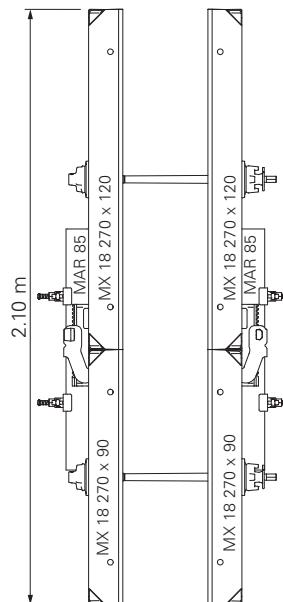
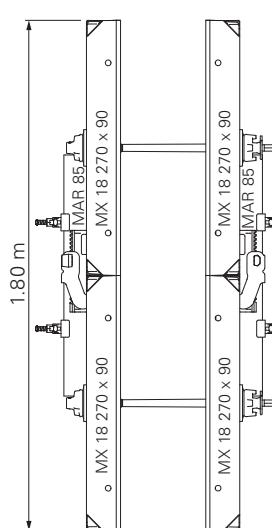


Fig. A8.03

# A8 Downward Extensions

Arrangement of the Alignment Coupler BFD and Waler MAR 85.

Example: MX 18...60 und MX 18...90.

(Fig. A8.04)

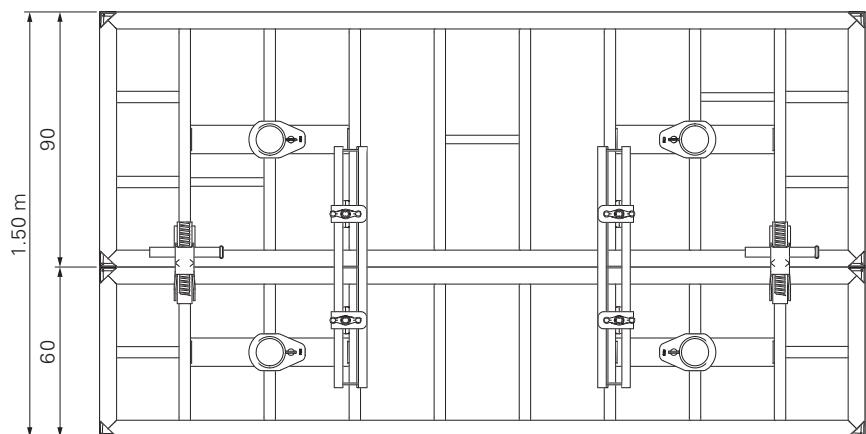


Fig. A8.04

## Tension and Compression Brace

**MX15-40 and MX15-100**

For heights  $\leq 1.20$  m, e.g. parapets.

Adjust Tension and Compression Brace to:

**Setting dimension = wall thickness + 5 mm.**



**Perm. tension and compression force = 9 kN.**

Depending on the wall thickness, the following table shows which Tension and Compression Brace and anchor fastenings can be used.

Wall thickness	Tension and Compression Brace MX 15-40	Tension and Compression Brace MX 15-100	Tie MX 18	Tie Rod DW 20*
$\leq 40$ cm	x	x	x	x
$\leq 60$ cm	-	x	x	x
$\leq 100$ cm	-	x	-	x

\* Swivel Nut DW 20 (Item no. 115571) is used with the Tie Rod DW 20

### Preparation

1. Adjust Mounting Shoe (70.2) of the Tension and Compression Brace to required setting dimension:

- Remove cotter pin from bolt.
- Pull bolt out of Spacer Rack.
- Slide holes of the Mounting Shoe (70.2) and Spacer Rack (70.3) on top of each other according to the setting dimension.
- Insert bolts through holes.
- Insert cotter pin into the hole of the bolt.

2. Pivot the securing hook (70.1) of the Tension and Compression Brace upwards. (Fig. A9.01a)

→ Tension and Compression Brace is opened for positioning.

### Assembly

1. Place Tension and Compression Brace on the panel in the area of the tie point; at the same time, mount the Mounting Shoe (70.2) in the edge profile of the formwork.


2. Press the securing hook (70.1) downwards over the edge profile and the panel strut of the formwork.

→ Tension and Compression Brace is locked in position.

### Wall thickness


$\leq 40$  cm: MX 15-40 – Fig. A9.01

$\leq 100$  cm: MX 15-100 – Fig. A9.02

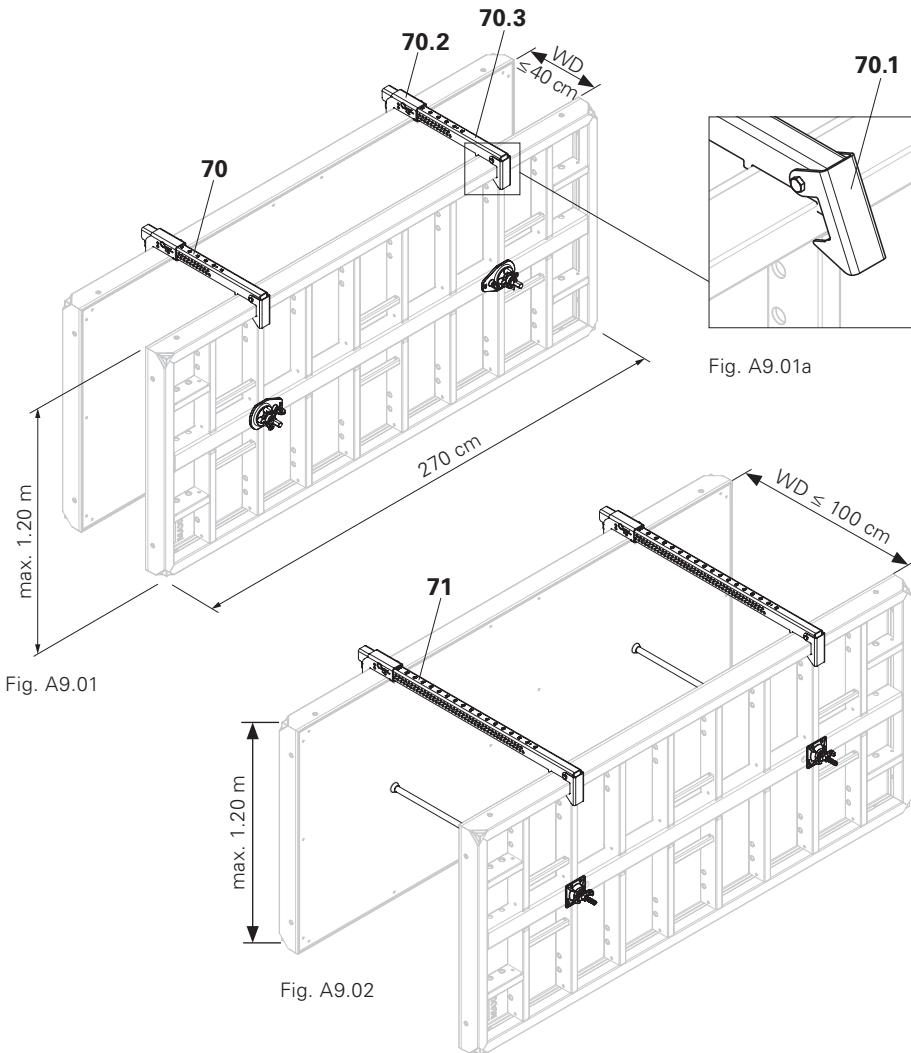

## Alternative Tie System DW 15

1. Mount Tie System DW 15 (54) and Foundation Tie Clamp TRIO (73). (Fig. A9.03)
2. Close all open tie holes on the formlining side with Plugs (74), Item no. 125099.

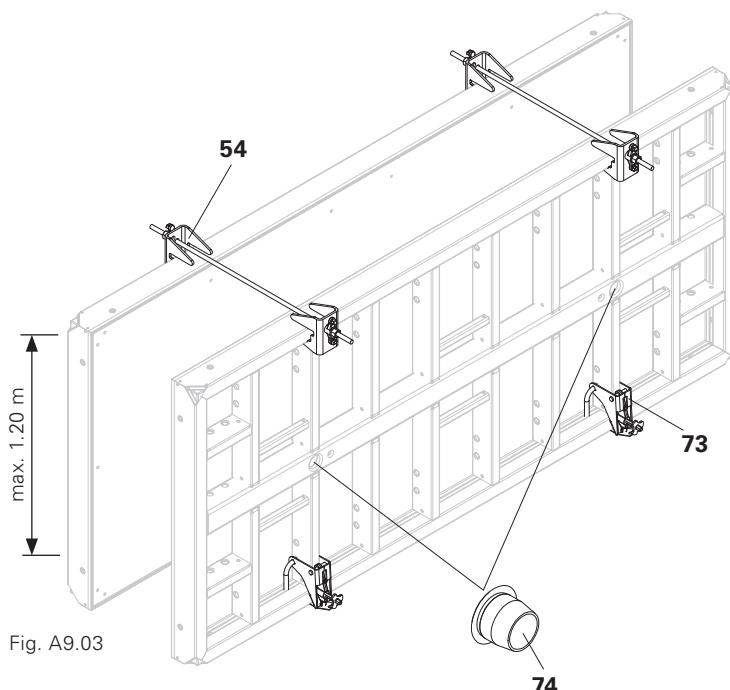


## Foundation Strap

Item no. 023800

The Foundation Strap (75) is used for forming individual foundations using the "windmill configuration". (Fig. A9.04)

H [cm]	perm. W [cm]
60	255
90	200

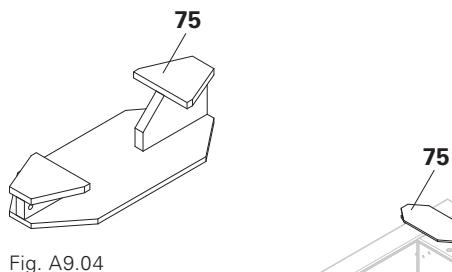


### Assembly

1. Secure limiting board (76) on the formlining with nails – at a distance perm. W + 12 cm.
  2. Place Foundation Strap at the butt point on the panel.
  3. Slide Foundation Strap as far as possible on the offset panel.
  4. Upper web rests against the panel.
  5. Install Foundation Strap at top and bottom (8x in total).
- (Fig. A9.05 + A9.05a)



The Foundation Strap must rest against the panel.

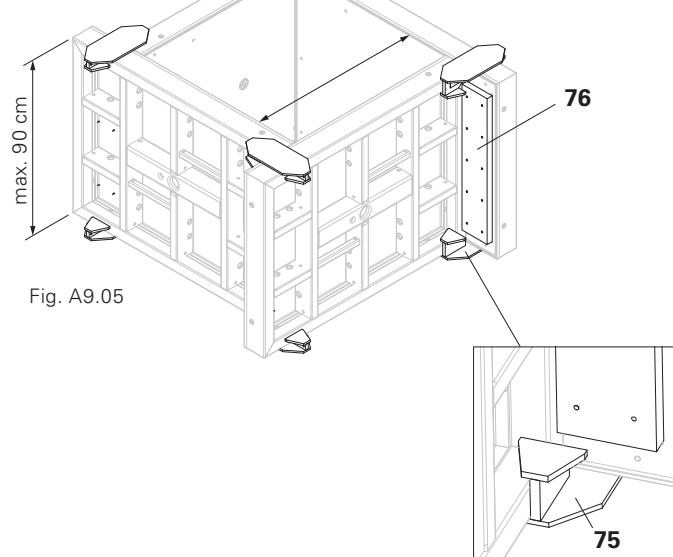

# A10 Height Offsets A11 Wall Connections

PERI

## Height Offsets

With height offsets – and depending on the offset – the Alignment Couplers BFD are installed alternatively on the panel struts of the right and left panels. (Fig. A10.01)

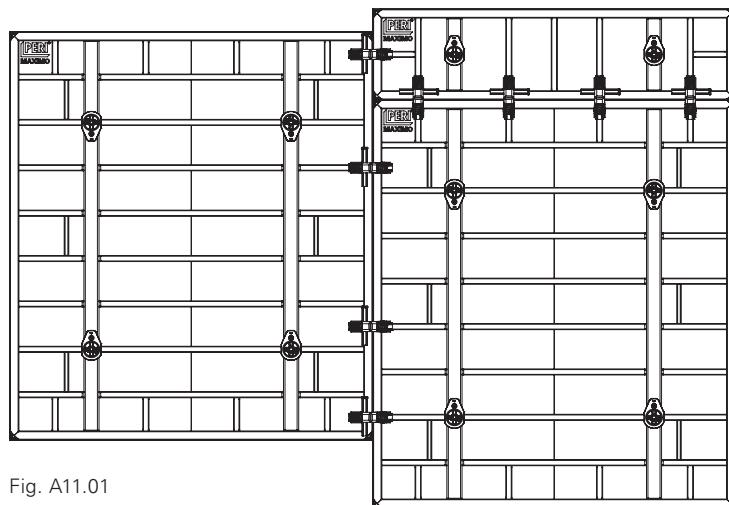


Fig. A11.01

## Obtuse Wall Connection

With MX 18 270 x 240 large panel  
(Fig. A11.01a)

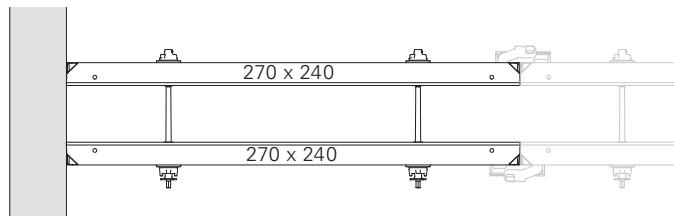


Fig. A11.01a

With Panel MX 18...x ≥ 60  
(Fig. A11.01b)

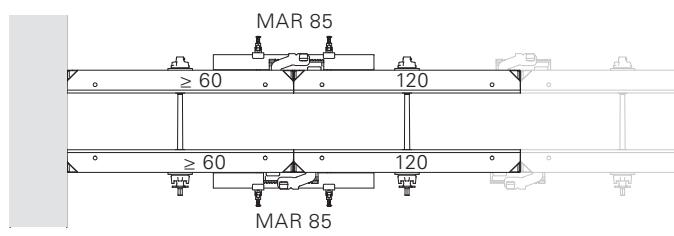


Fig. A11.01b

With Panel MX 18...x ≤ 60  
(Fig. A11.01c)

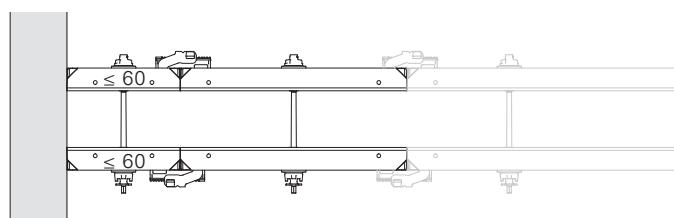


Fig. A11.01c



**With vertical and horizontal wall connections, the MX Tie must be tightly installed towards the wall connection in the specified order!**

## Vertical Wall Connection

(Fig. A11.02)

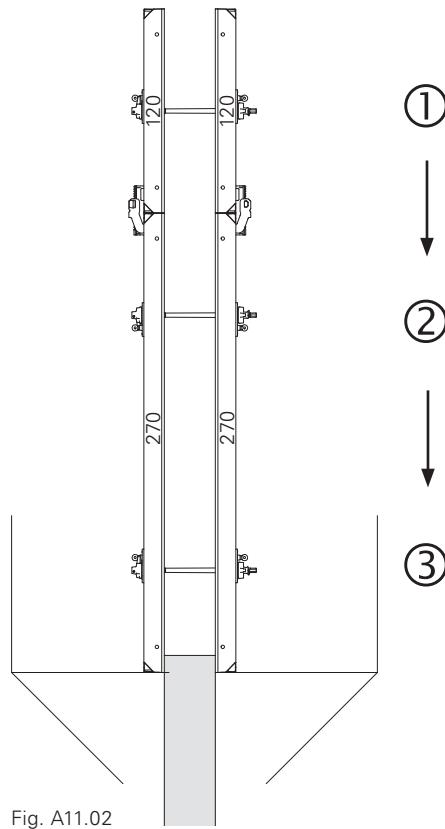


Fig. A11.02

## Horizontal Wall Connection

Plan view (Fig. A11.03a + A11.03b)

### Horizontal Wall connection

Section (Fig. A11.03c)

Waler MAR 85 (21) installed below.

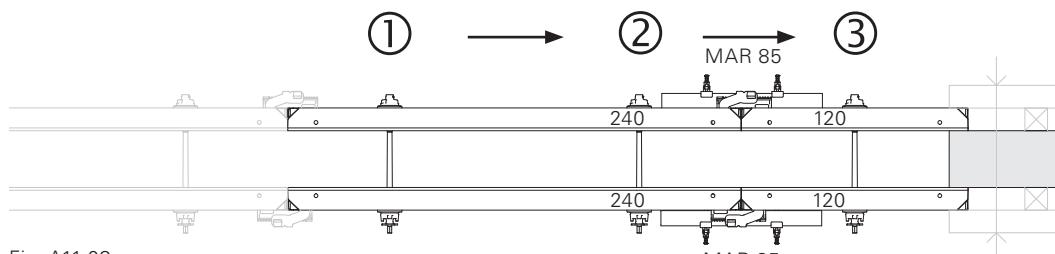


Fig. A11.03a

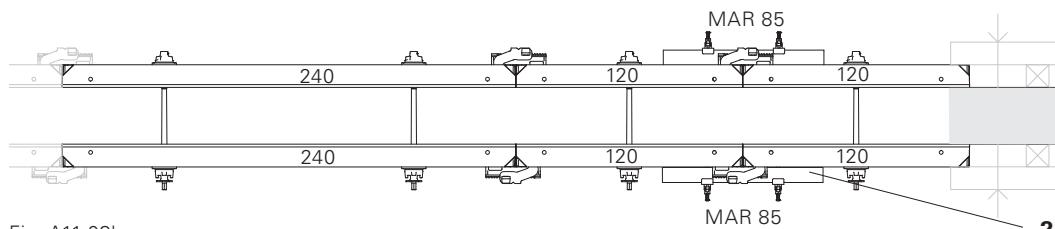


Fig. A11.03b

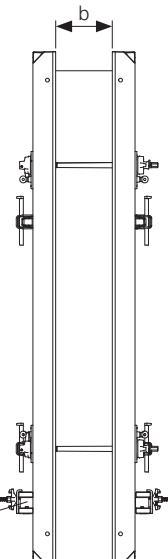


Fig. A11.03c

**On the first panel joint, a Compensation Waler MAR 85 (21) must always be mounted in the bottom area.  
Exception: Panel b > 120 cm.**

# **B1 90° Corners with Inside Corner MXI 18, 270 x 50/20**



## **Wall Thicknesses 15 – 40 cm**

## **Outside Corner MXA 270 x 45**



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

## Components

<b>20</b>	Alignment Coupler BFD
<b>100</b>	Panel MXM 18, 270 x 60
<b>101</b>	Panel MX 18, 270 x 30
<b>102</b>	Panel MX 18, 270 x 45
<b>106</b>	Panel MX 18, 270 x 240
<b>140</b>	Wall Thickness Compensator WDA MX 270 or filler timber supplied by contractor ≤10 cm
<b>151</b>	Outside Corner MXA 270 x 45
<b>153</b>	Inside Corner MXI 18, 270 x 50/20

### Examples

- Wall thickness 15:  
Fig. B1.01 + B1.05a + B1.05b
  - Wall thickness 17.5:  
Fig. B1.02 + B1.05a + B1.05b
  - Wall thickness 20:  
Fig. B1.03 + B1.05a + B1.05b
  - Wall thickness 24 / 25:  
Fig. B1.04 + B1.05a + B1.05b
  - Wall thickness 30:  
Fig. B1.05 + B1.05a + B1.05b
  - Wall thickness 35 / 36:  
Fig. B1.06 + B1.05a + B1.05b
  - Wall thickness 40:  
Fig. B1.07 + B1.05a + B1.05b

## Compensations

- Wall thickness 25 + 36 + 40 cm:  
without compensation
  - Wall thickness 15 + 17.5 cm:  
internal and external compensation
  - Wall thickness 20 + 24 cm:  
internal compensation
  - Wall thickness 30 + 35 cm:  
external compensation

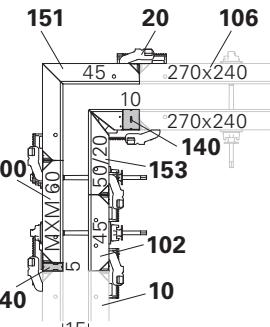


Fig. B1.01

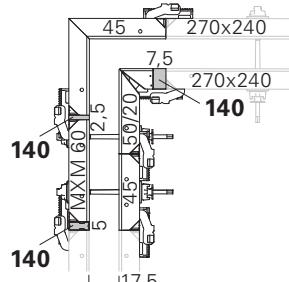


Fig. B1.02

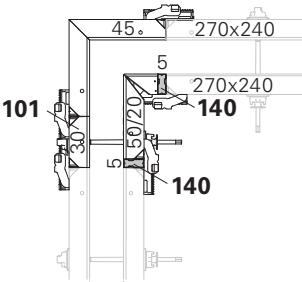


Fig. B1.03

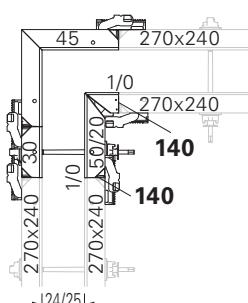


Fig. B1.04

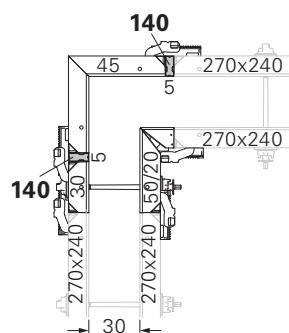


Fig. B1.05

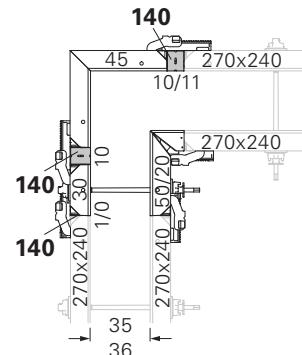


Fig. B1.06

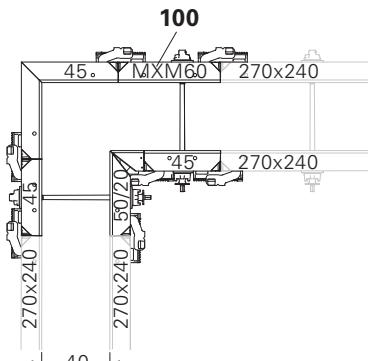


Fig. B1.07

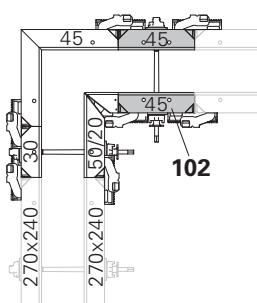


Fig. B1.08



90° Corners with Inside Corner  
MXI 18, ... x 60, see D2.

**Alternatively – panel width 45**

Max. panel width between corner and subsequent panel is 45 cm – MX 18, 270 x 45 (102). (Fig. B1.08)

# B1 90° Corners with Inside Corner MXI 18, 270 x 50/20

PERI

## Arrangement of the Alignment Cougles

Valid for wall thicknesses 15 – 40 cm.

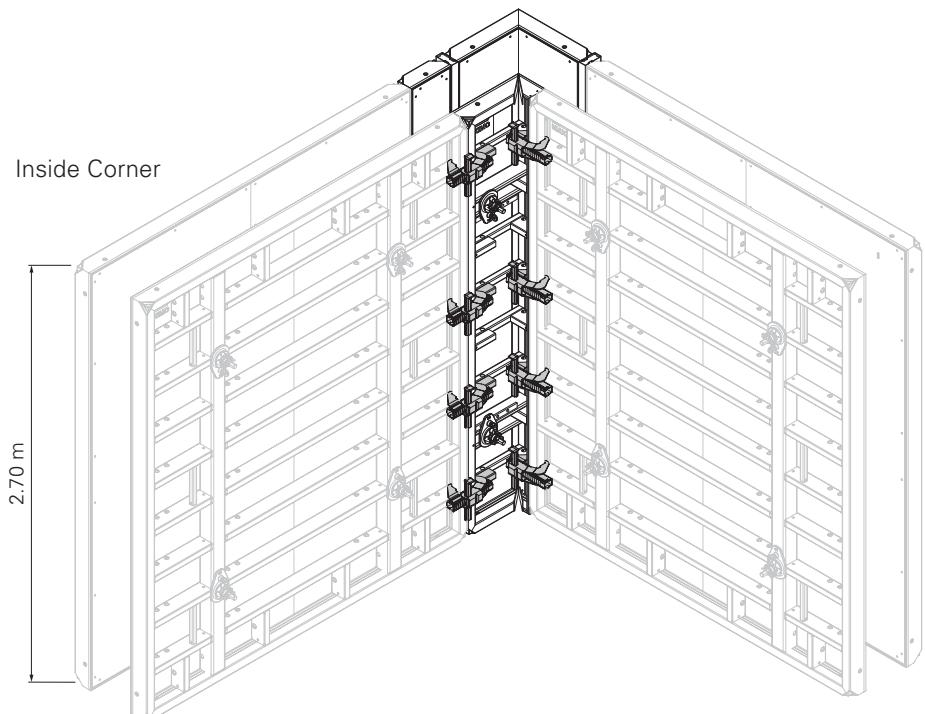


Fig. B1.05a

## Outside Corner

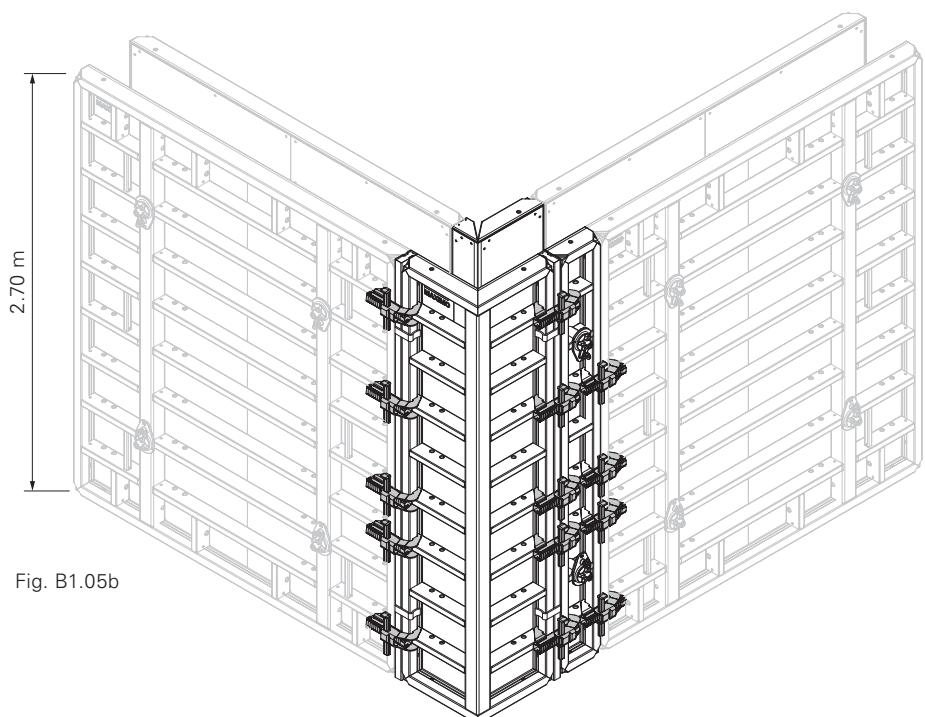


Fig. B1.05b

# B1 90° Corners with Inside Corner MXI 18, 270 x 50/20

**PERI**

## Wall Thicknesses > 40 – 60 cm

### Outside Corner MXA 270 x 45



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

**10** Panel MX 18, 270 x 240

**20** Alignment Coupler BFD

**21** Compensation Waler MAR 85/3

**22** Compensation Waler MAR 170/3

**100** Panel MXM 18, 270 x 60

**101** Panel MX 18, 270 x 30

**102** Panel MX 18, 270 x 45

**140** Wall Thickness Compensator

WDA MX 270 or filler timber  
supplied by contractor ≤ 10 cm

**151** Outside Corner MXA 270 x 45

**153** Inside Corner MXI 18, 270 x 50/20

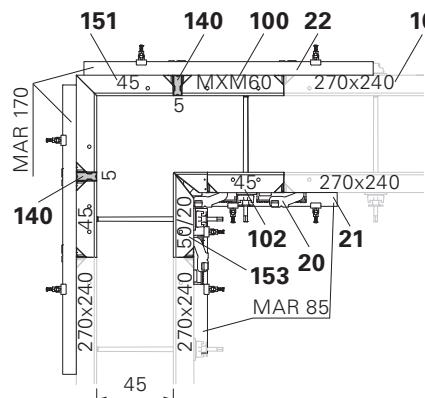


Fig. B1.09

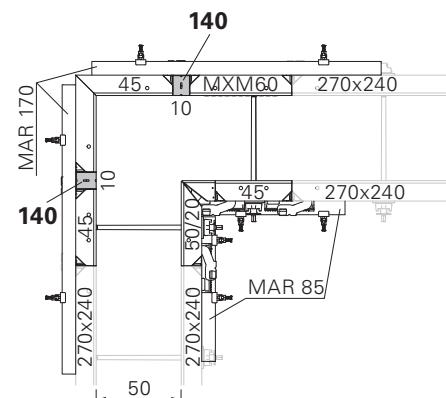


Fig. B1.10

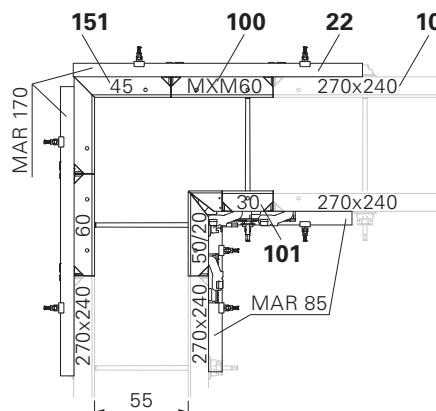


Fig. B1.11

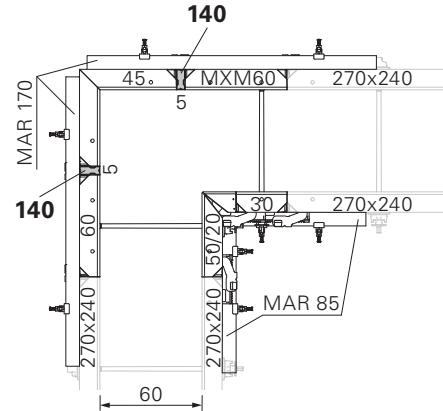


Fig. B1.12

### Examples

- Wall thickness 45:  
Fig. B1.09 + B1.09a + B1.09b
- Wall thickness 50:  
Fig. B1.10 + B1.09a + B1.09b
- Wall thickness 55:  
Fig. B1.11 + B1.11a + B1.11b
- Wall thickness 60:  
Fig. B1.12 + B1.11a + B1.11b

### Compensations

- Wall thickness 45 + 50 + 60 cm:  
External compensation
- Wall thickness 55 cm:  
without compensation



Offset mounting of BFD Alignment  
Couples between  
 - Corner 50/20,  
 - Panel ... x 30,  
 - as well as the next Panel ... x 240.

**„X“**  
of Fig. B1.11a

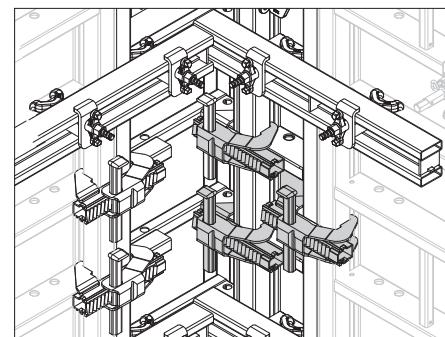


Fig. B1.11c

# B1 90° Corners with Inside Corner MXI 18, 270 x 50/20

## Arrangement of the Alignment Couplers and Compensation Walers

Valid for wall thicknesses > 40 – 50 cm.

(Fig. B1.09a + B1.09b)

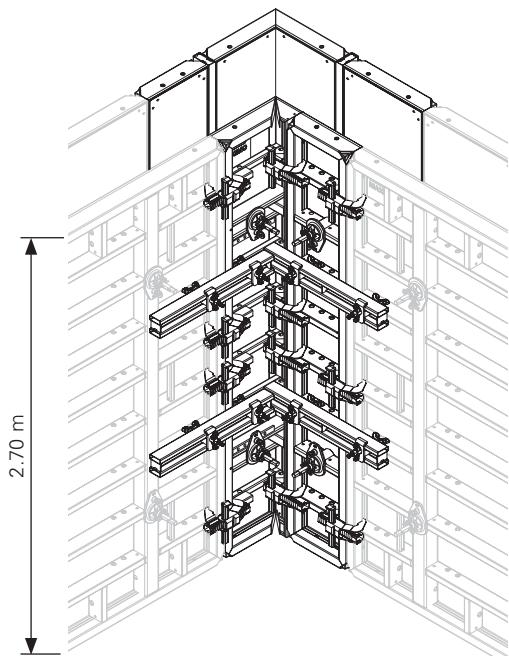


Fig. B1.09a

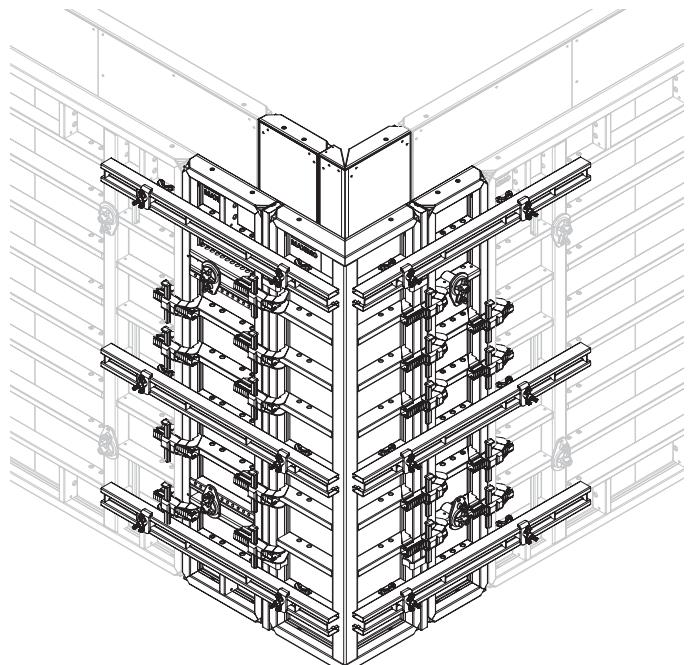


Fig. B1.09b

Valid for wall thicknesses > 50 – 60 cm  
(Fig. B1.11a + B1.11b)

**„X“**  
see Fig. B1.11c

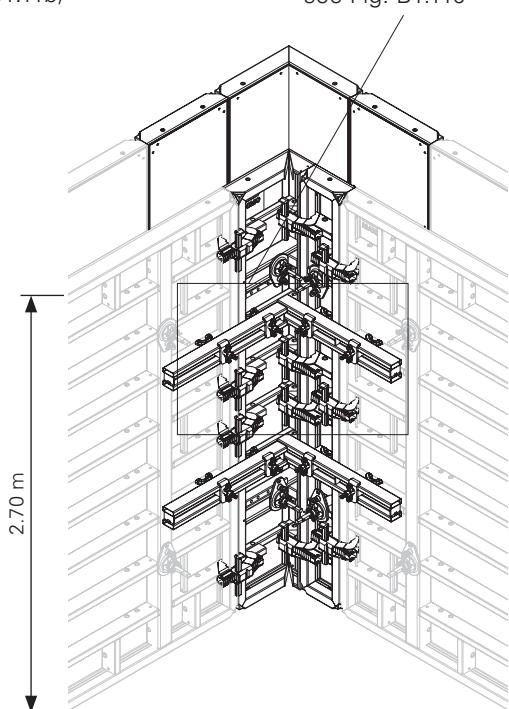


Fig. B1.11a

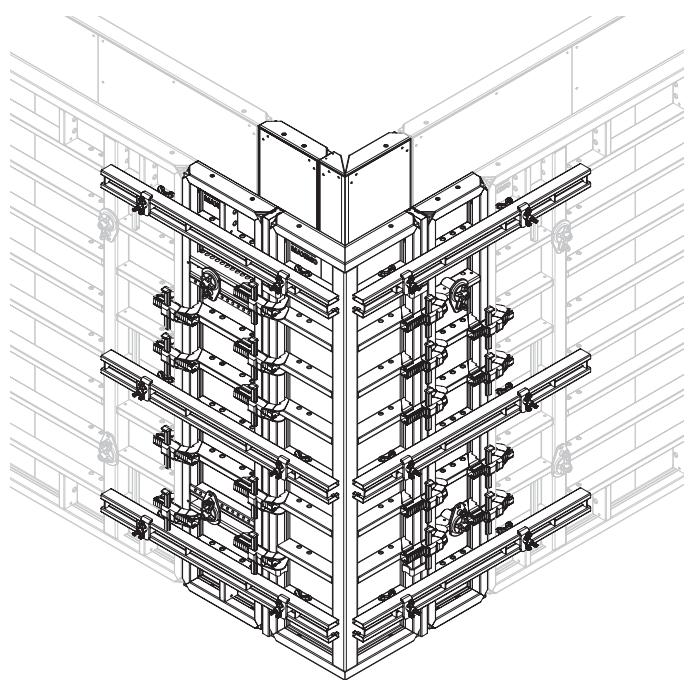


Fig. B1.11b

# B2 Panel Connections following 90° Corners

PERI

## Panel connections

For panels with widths  $b \leq 120$  following 90° corners, these must be strengthened at the next panel joint by means of a Compensation Waler MAR 85 (21).

With extensions, a second Compensation Waler MAR 85 is required on the panel joint (shown as a dotted line). (Fig. B2.01 + B2.01a + B2.01b)

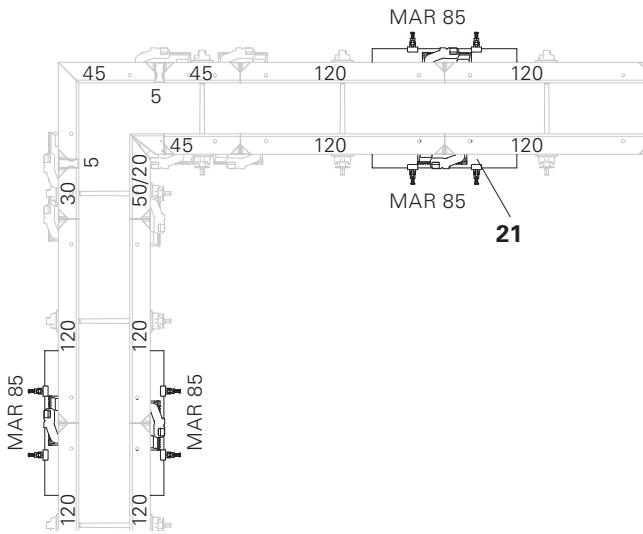


Fig. B2.01

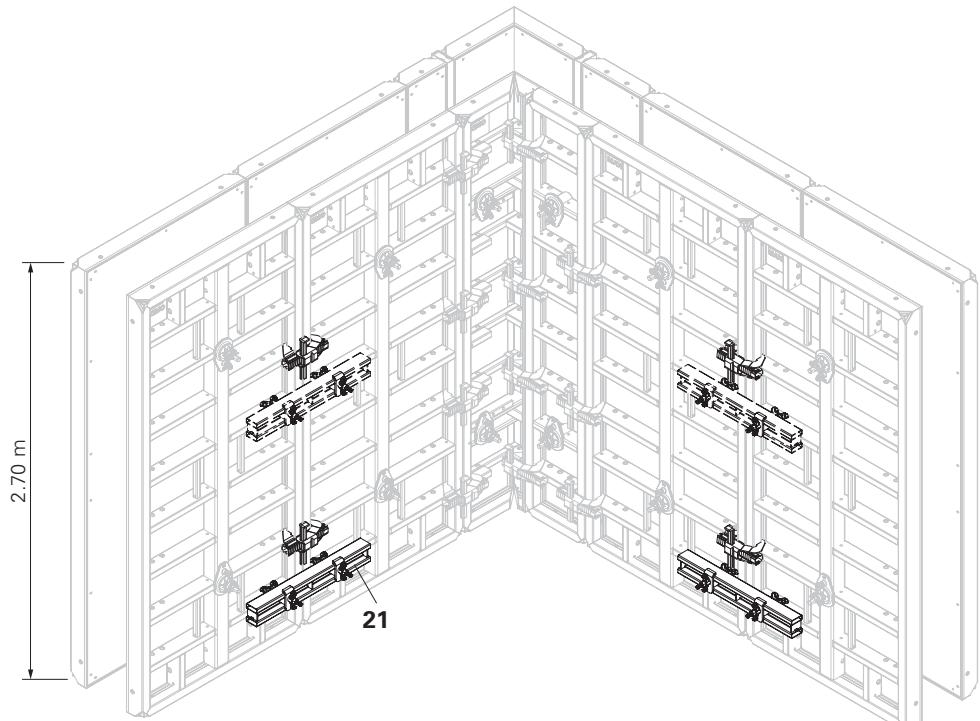


Fig. B2.01a

# B2 Panel Connections following 90° Corners

PERI

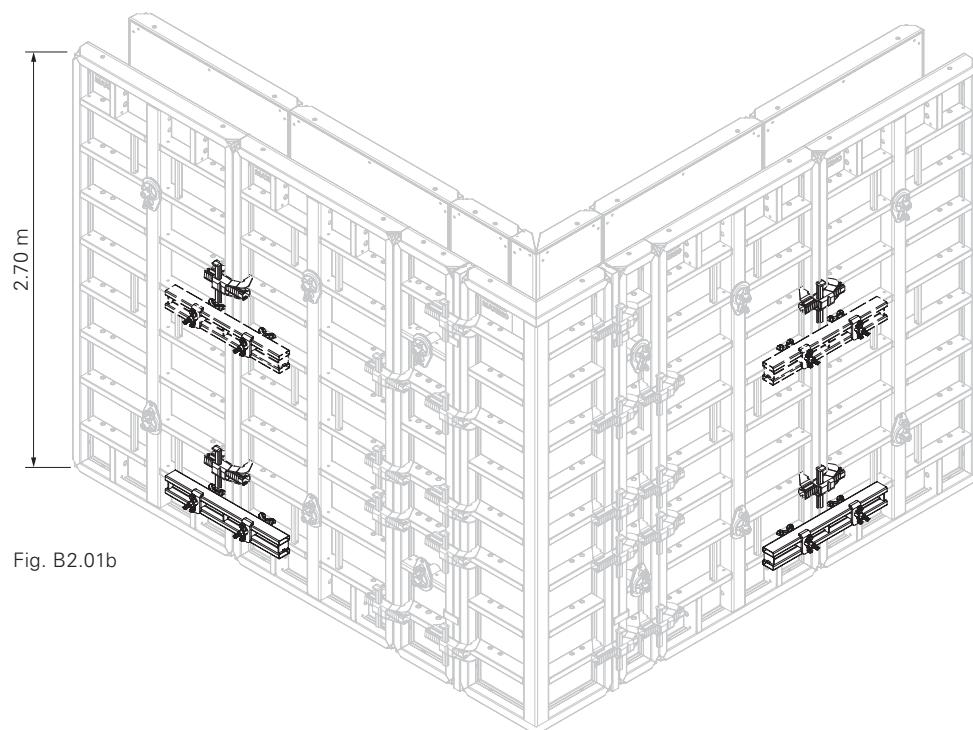


Fig. B2.01b

# B3 90° T-junctions with Inside Corner MXI 18, 270 x 50/20

PERI

## Wall Thicknesses 15 – 40 cm



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

### Components

**10** Panel MX 18, 270 x 240

**20** Alignment Coupler BFD

**100** Panel MXM 18, 270 x 60

**102** Panel MX 18, 270 x 45

**103** Panel MX 18, 270 x 60

**140** Wall Thickness Compensator

WDA MX 270 or filler timber  
supplied by contractor  $\leq 10$  cm

**153** Inside Corner MXI 18, 270 x 50/20

### Assembly

1. Form the T-junction with Inside Corner MXI 18, 50/20 (153).
2. Form the opposite straight wall with Panels MX 18, 45 (102), MX 18, 60 (103), or MXM 60 (100) – according to the wall thickness.
3. Install compensation (140) according to the wall thickness.

### Examples

- Wall thickness 15:  
Fig. B3.01 + B3.05a + B3.05b
- Wall thickness 17.5:  
Fig. B3.02 + B3.05a + B3.05b
- Wall thickness 20:  
Fig. B3.03 + B3.05a + B3.05b
- Wall thickness 24/25:  
Fig. B3.04 + B3.05a + B3.05b
- Wall thickness 30:  
Fig. B3.05 + B3.05a + B3.05b
- Wall thickness 35/36:  
Fig. B3.06 + B3.05a + B3.05b
- Wall thickness 40:  
Fig. B3.07 + B3.05a + B3.05b

### Compensations

- Wall thickness 15 + 17.5 + 24 + 25 + 30 + 35 + 36 + 40 cm:  
external compensation
- Wall thickness 20:  
without compensation



90° T-junctions with Inside Corners MXI 18, ... x 60, see D3.

### Alternatively – panel width 45

Max. panel width at the T-junction between corner and subsequent panel is 45 cm – MX 18, 270 x 45 (102).

(Fig. B3.08)

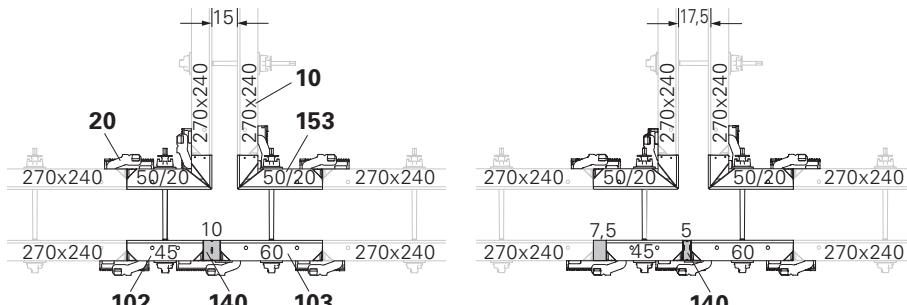


Fig. B3.01

Fig. B3.02

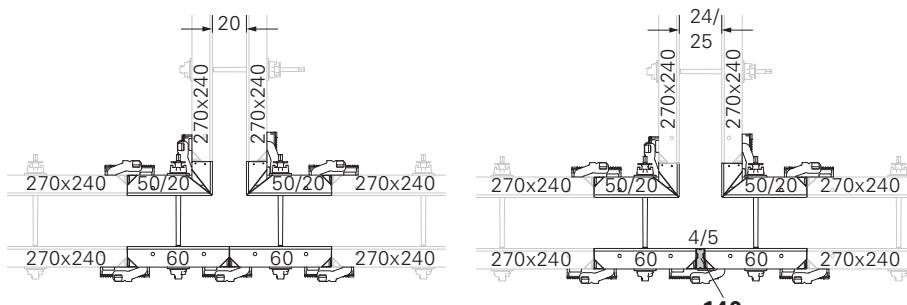


Fig. B3.03

Fig. B3.04

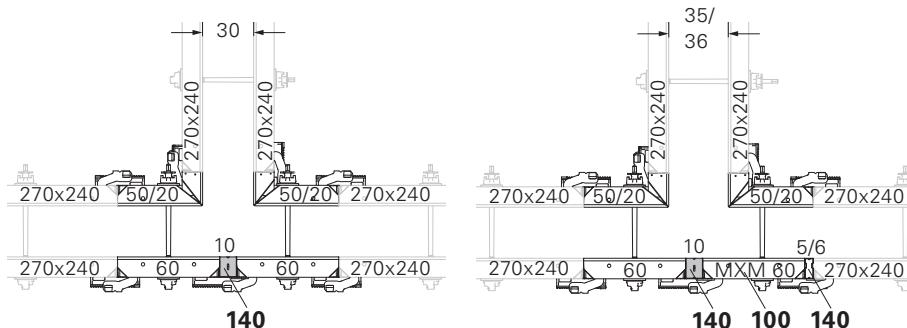


Fig. B3.05

Fig. B3.06

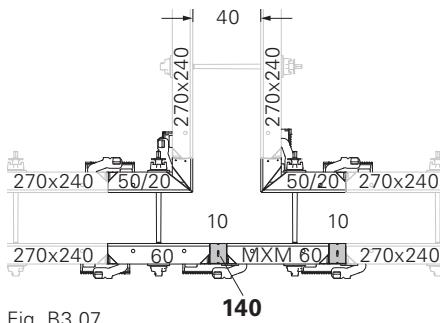


Fig. B3.07

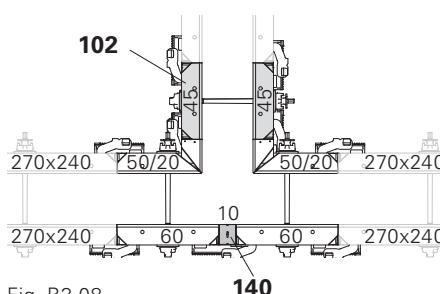


Fig. B3.08



# B3 90° T-junctions with Inside Corner MXI 18, 270 x 50/20

PERI

## Arrangement of the Alignment Cougles

Valid for wall thicknesses 15 – 40 cm.

(Fig. B3.05a + B3.05b)

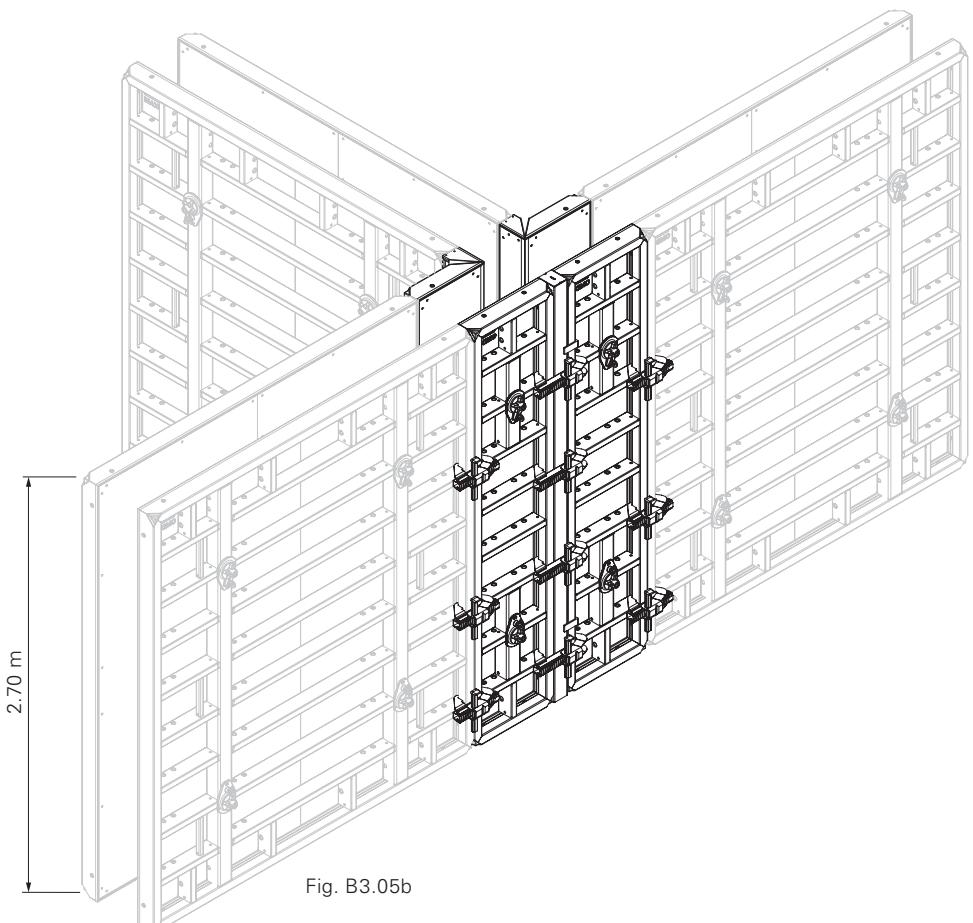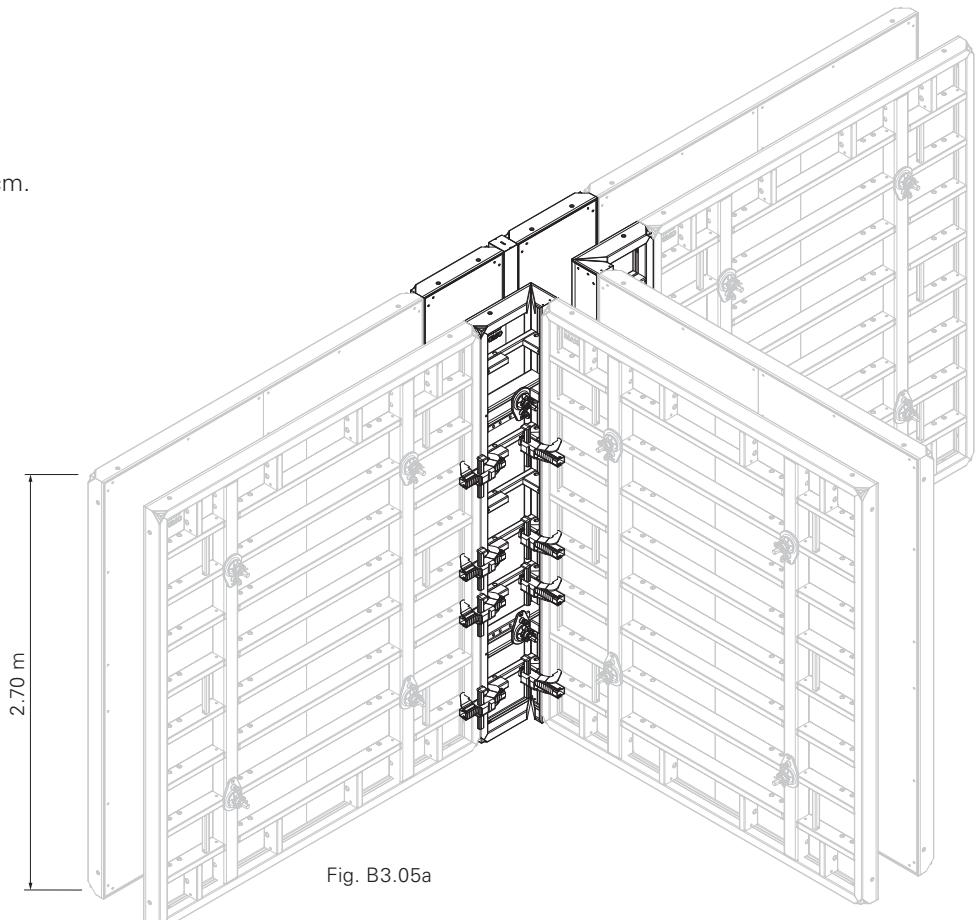

# B3 90° T-junctions with Inside Corner MXI 18, 270 x 50/20

**PERI**

## Wall thicknesses > 40 – 60 cm



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

<b>10</b>	Panel MX 18, 270 x 240
<b>20</b>	Alignment Coupler BFD
<b>22</b>	Compensation Waler MAR 170-3
<b>102</b>	Panel MX 18, 270 x 45
<b>103</b>	Panel MX 18, 270 x 60
<b>140</b>	Wall Thickness Compensator WDA MX 270 or filler timber supplied by contractor ≤ 10 cm
<b>153</b>	Inside Corner MXI 18, 270 x 50/20

### Assembly

1. Form the T-junction with Inside Corner MXI 50/20 (153).  
Form the opposite straight wall with Panels MX 18, 45 (102) or MX 18, 60 (103) – according to the wall thickness.
2. Install compensation (140) according to the wall thickness.
3. On the straight wall, install Compensation Waler MAR 170 (22) centrally to the outgoing wall.

### Examples





- Wall thickness 45:  
Fig. B3.09 + B3.09a + B3.09b
- Wall thickness 50:  
Fig. B3.10 + B3.09a + B3.09b
- Wall thickness 55:  
Fig. B3.11 + B3.09a + B3.09b
- Wall thickness 60:  
Fig. B3.12 + B3.09a + B3.09b

### Compensations

- Wall thickness 45 + 55 + 60 cm:  
external compensation
- Wall thickness 50:  
without compensation



90° T-junctions with Inside Corner MXI 18, ... x 60, see Section D3.

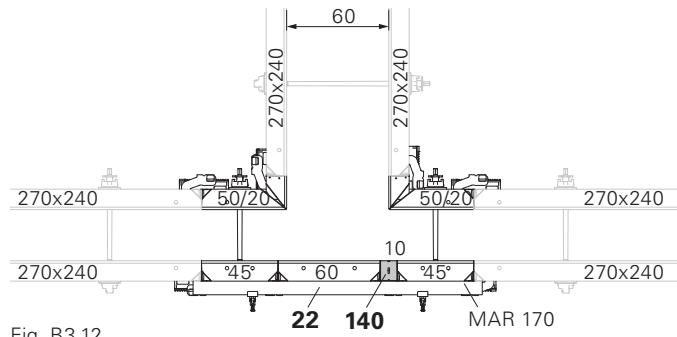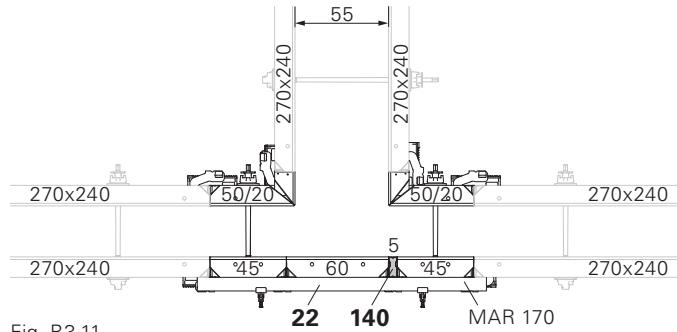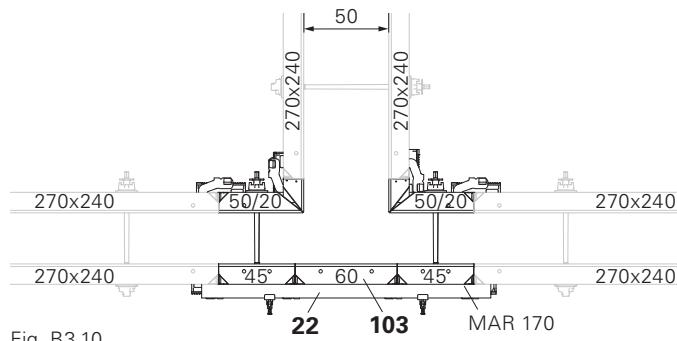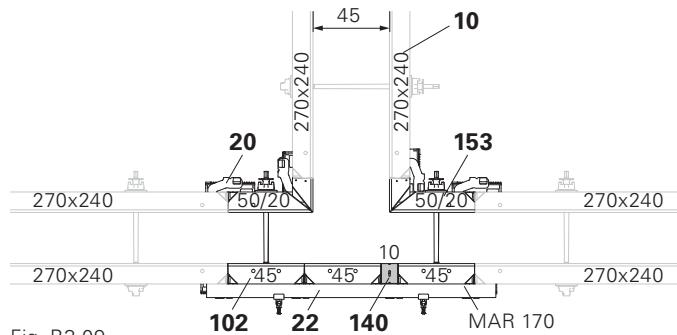

# B3 90° T-junctions with Inside Corner MXI 18, 270 x 50/20

PERI

## Arrangement of the Alignment Couples and Compensation Walers

Valid for wall thicknesses 45 – 60 cm.  
(Fig. B3.09a + B3.09b)

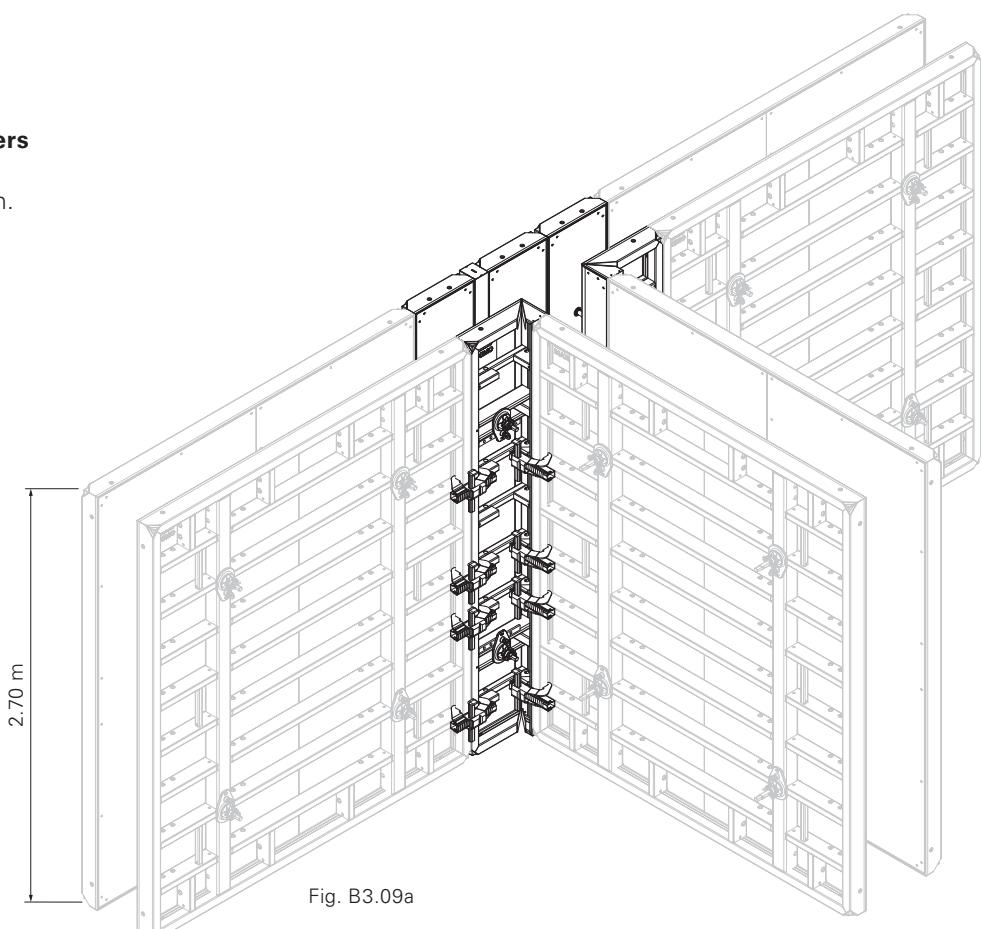


Fig. B3.09a

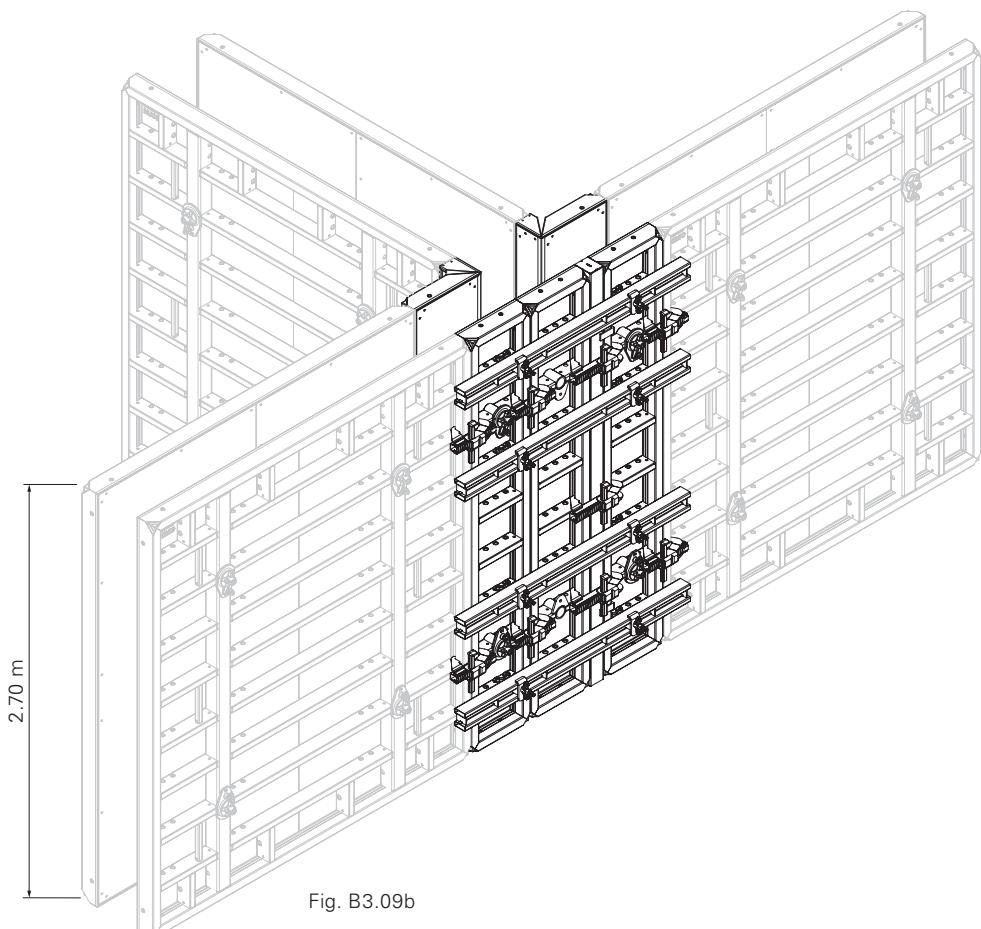


Fig. B3.09b

# B4 Panel Connections following 90° T-junctions

PERI

## Panel connections

For panels with widths  $b \leq 120$  following 90° T-junctions, these must be strengthened at the next panel joint by means of a Compensation Waler MAR 85 (21).

With extensions, a second Compensation Waler MAR 85 is required on the panel joint (shown as a dotted line).

(Fig. B4.01 + B4.01a + B4.01b)

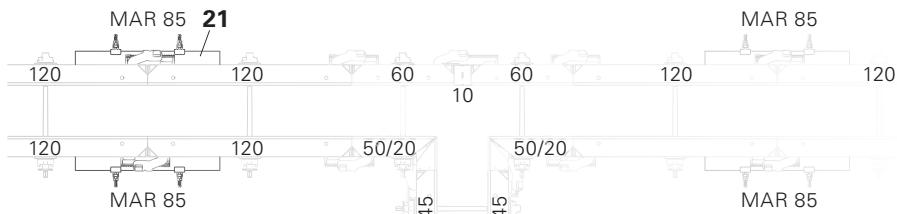


Fig. B4.01

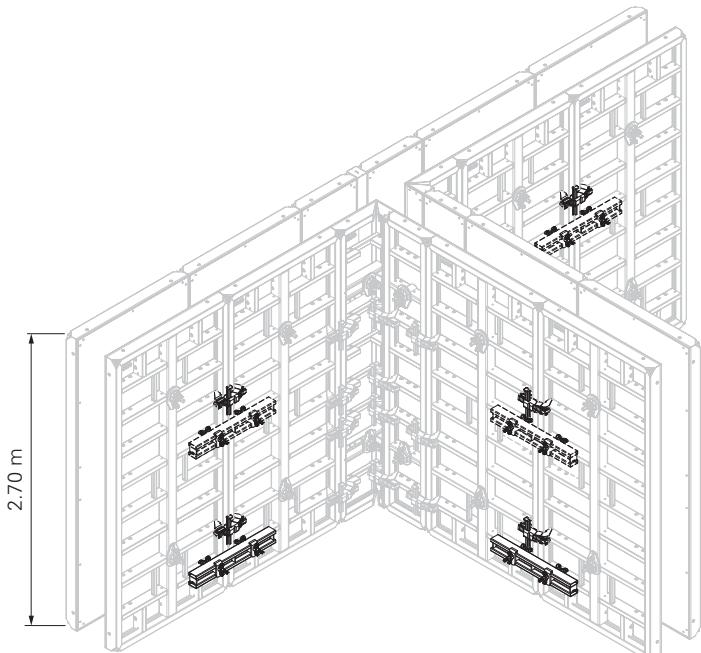
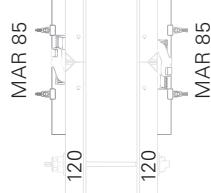


Fig. B4.01a

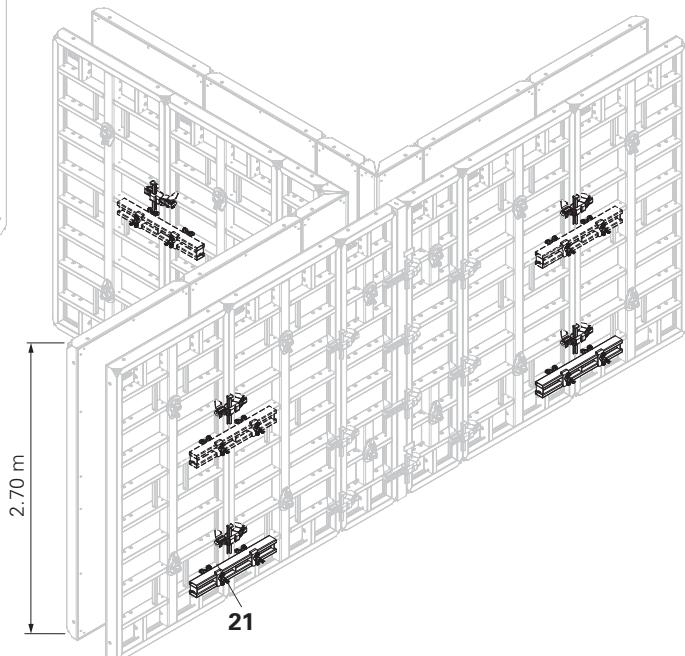


Fig. B4.01b

# B5 Length Compensations

PERI

## Wall Thickness Compensator WDA MX 270

Length compensation up to 10 cm.

### Components

<b>20</b> Alignment Coupler BFD	3x
<b>50</b> Timber	1x



No ties required!

The length is compensated with Wall Thickness Compensator MX or using timber which has been cut to size (50). Note: number and arrangement of the BFD Alignment Couplers (20). (Fig. B5.01)

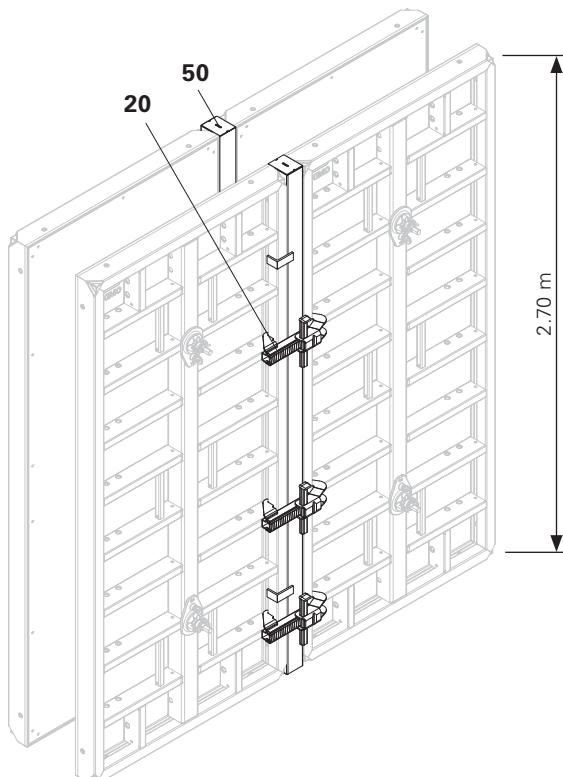


Fig. B5.01

## Filler Profile TPP

Length compensation (b) from 10 to 36 cm.



- Perm. fresh concrete pressure 80 kN/ m<sup>2</sup> for:  
 $b \geq 10$  and  $b < 30$  mm.
- Perm. fresh concrete pressure: 60 kN/ m<sup>2</sup> for:  
 $b \geq 30$  and  $b \leq 36$  mm.

### Components

<b>20</b> Alignment Coupler BFD	4x
<b>21</b> Compensation Waler MAR 85	2x
<b>51</b> Plywood filler 21 mm	1x
<b>52</b> Filler Profile TPP	2x

When anchoring, ensure that the anchor forces are transferred centrally through the Compensation Waler MAR 85 (21) to the adjacent panels. (Fig. B5.02b)

Installation (Fig. B5.02 + B5.02a)

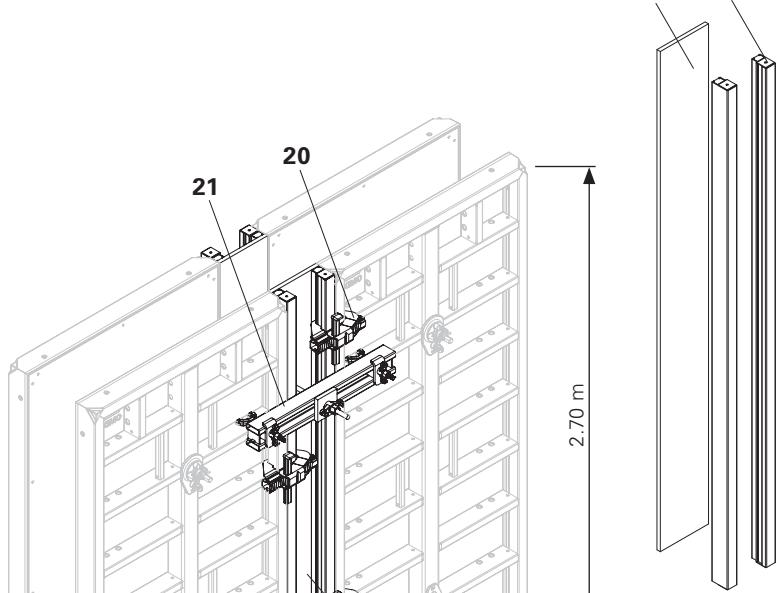


Fig. B5.02a

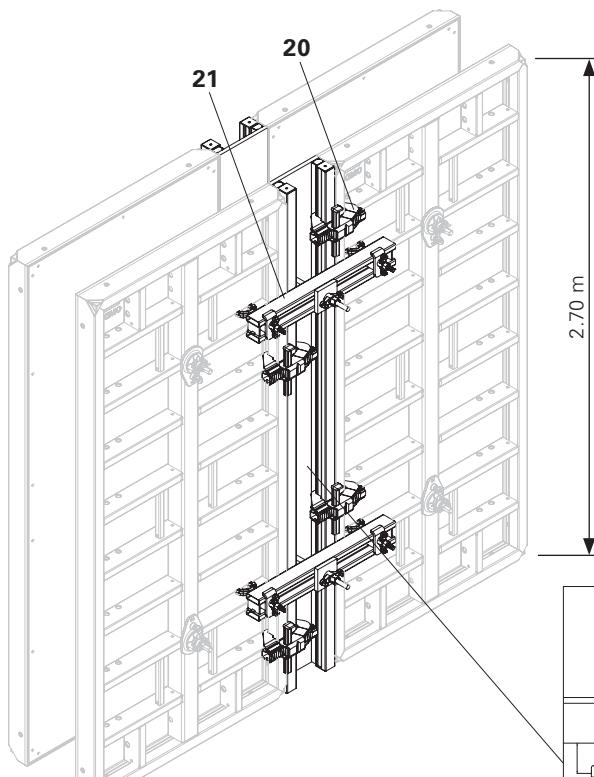


Fig. B5.02

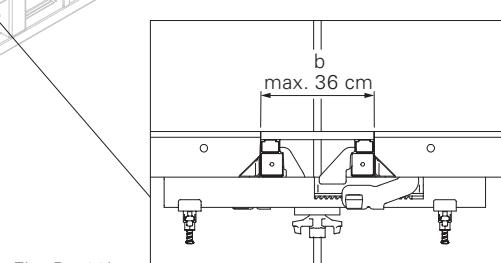


Fig. B5.02b

## Stopend Formwork with Panel MX 18, 270 x 30

As Stopend Panel (101) for a  
wall thickness of 30 cm.  
(Fig. B6.01)

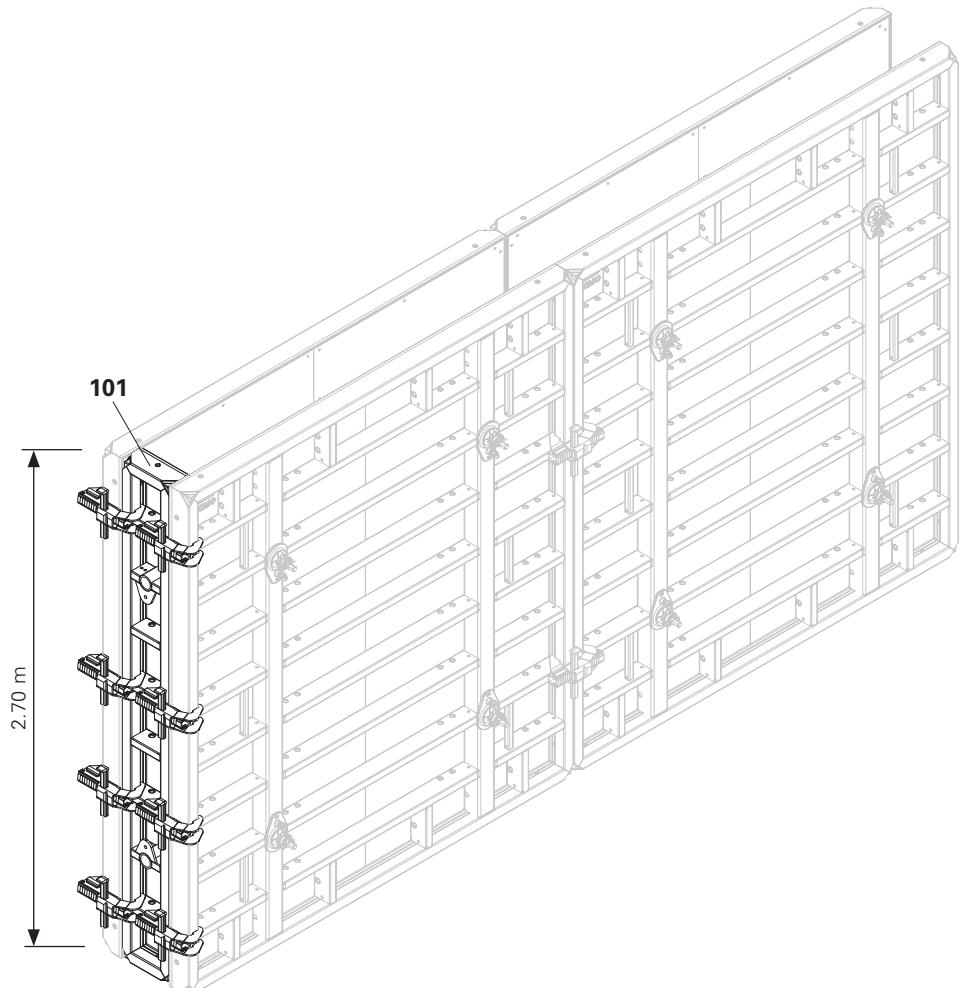


Fig. B6.01

## Stopend Formwork with timber and plywood fillers

For wall thicknesses  $\leq 40$  cm.



The fresh concrete pressure of the stopend formwork is transferred to the MAXIMO Panels via the stopend ties and Waler 85.

With Panel **MX 18, 270 x 120** at the end of the wall. (Fig. B6.02 + B6.03)

Also valid for the following panels:

MXI MX 18, 270 x 30

MXI MX 18, 270 x 45

MXI MX 18, 270 x 60

MXI MX 18, 270 x 90

### Connecting parts

<b>21</b>	Compensation Waler MAR 85 / alternatively: Waler 85	4x
<b>23</b>	Wingnut Pivot Plate DW 15	12x
<b>25</b>	Tie Rod DW 15	2x
<b>26</b>	Timber	2x
<b>27</b>	Top Tie Bracket-2 AH	4x
<b>28</b>	Stopend Tie TS	8x
<b>51</b>	Plywood filler 21 mm	1x

- Compensation Waler MAR 85 (21) with Stopend Tie (28) and Wingnut Pivot Plate (23), see Fig. B6.03b.
- Top Tie Bracket-2 AH with Tie Rod (25) and Wingnut Pivot Plate (23), see Fig. B6.03a.

With Panel **MX 18, 270 x 240** at the end of the wall. (without illustration)

### Connecting parts

<b>21</b>	Compensation Waler MAR 85 / alternatively: Waler 85	4x
<b>23</b>	Wingnut Pivot Plate DW 15	8x
<b>26</b>	Timber	8x
<b>28</b>	Stopend Tie TS	2x
<b>51</b>	Plywood filler 21 mm	1x

Compensation Waler MAR 85 (21) with Stopend Tie (28) and Wingnut Pivot Plate (23), see Fig. B6.03b.

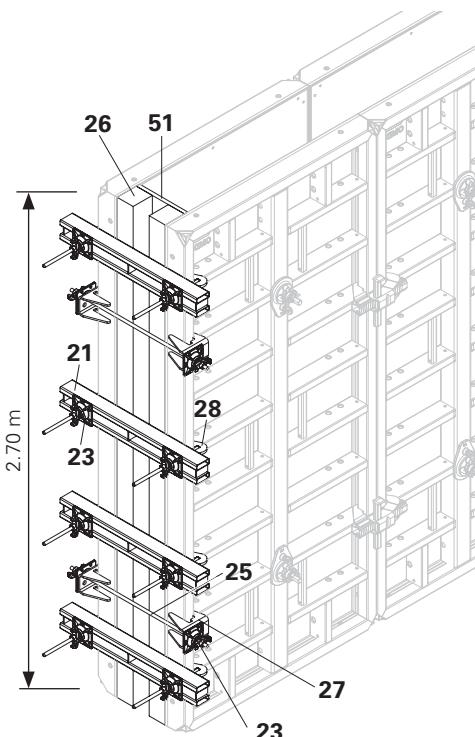


Fig. B6.02

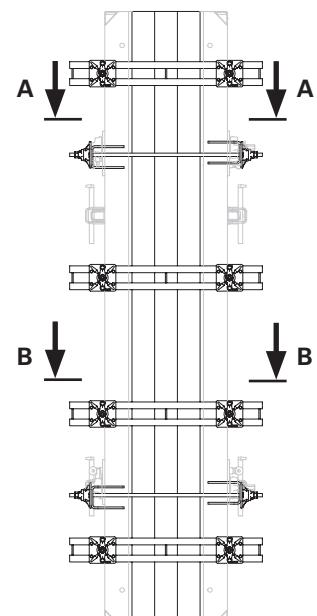


Fig. B6.03

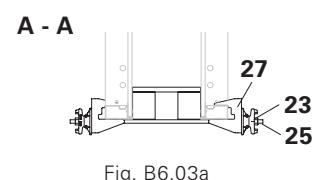


Fig. B6.03a

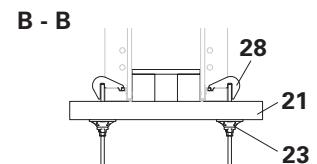


Fig. B6.03b

## Stopend Panel Reinforcement

There are three possibilities available in order to install the stopend panel reinforcement.

- **without water bar Installation – MT**
- **with water bar Installation – MTF**
- **with expandable water bar**

### Stopend panel reinforcement

#### without water bar Installation MT

Height 2.70 m (Fig. B6.04a)

Height 1.20 m (Fig. B6.04b)

Consisting of:

- 2 x Outside Pieces AT 3 (55) for approx. 2.5 cm concrete cover or
  - 2 x Outside Pieces AT 5 for approx. 5 cm concrete covering.
  - 1 x Middle Piece MT (56).
- (Fig. B6.05)



The rubber lip (55.1) allows a continuous reinforcement thickness of 16 mm.

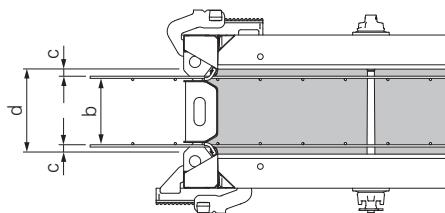


Fig. B6.06

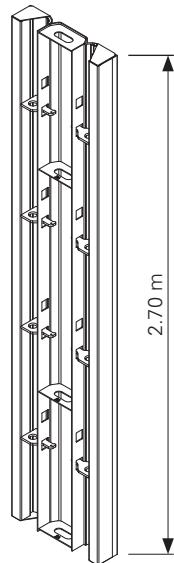


Fig. B6.04a

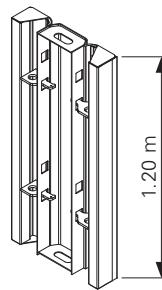


Fig. B6.04b

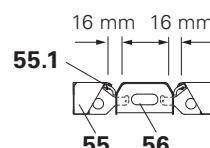


Fig. B6.05

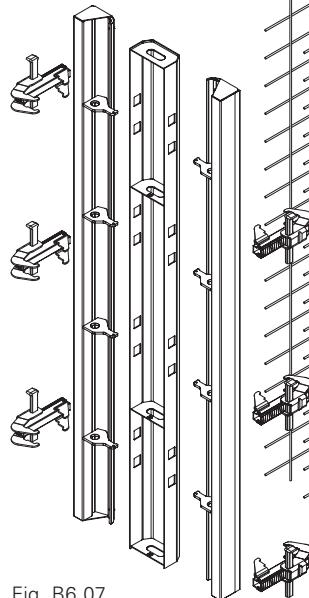


Fig. B6.07



### Perm. fresh concrete pressure

dependent on the wall thickness,  
80 kN/m<sup>2</sup> for wall thickness ≤ 30 cm,  
70 kN/m<sup>2</sup> for wall thickness > 30 and  
wall thickness ≤ 35 cm,  
60 kN/m<sup>2</sup> for wall thickness > 35 and  
wall thickness ≤ 40 cm.

# B6 Stopend Formwork

**PERI**

## Stopend panel reinforcement with water bar Installation MTF

Height 2.70 m (Fig. B6.08a)

Height 1.20 m (Fig. B6.08b)

Consisting of:


- 2 x Outside Pieces AT 3 for approx. 2.5 cm concrete cover or
- 2 x Outside Pieces AT 5 for approx. 5 cm concrete covering.
- 1 x Centre Piece MTF (58). (Fig. B6.09)



The rubber lip allows a continuous reinforcement thickness of 16 mm.

### Concrete cover c:

$$c = \frac{d - b}{2} - \text{Ø Reinforcement}$$

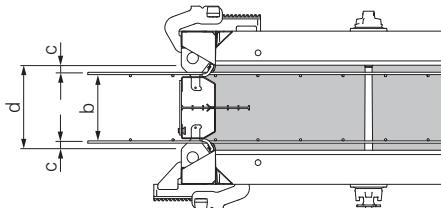

### Assembly

1. Position primary formwork.
  2. Fix Outside Piece AT (56) to the primary formwork by means of Alignment Coupler BFD (20).
  3. Install first row of reinforcement.
  4. Position Centre Piece MTF (57) and install water bar.
  5. Install second row of reinforcement.
  6. Insert Outer Part AT into Centre Part MT and secure by means of Alignment Coupler BFD.
  7. Position closing formwork.
  8. Close formwork, and insert ties to secure.
- (Fig. B6.10)

## Stopend panel reinforcement with expandable water bar

Consisting of:

- 2 x Outside Pieces AT (56)
- 1 x Centre Piece MTF (58)
- Filler plates (51) supplied by the contractor

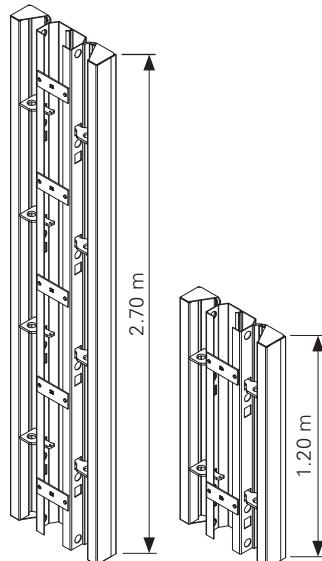
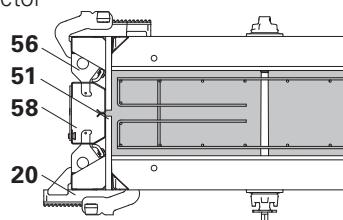


Fig. B6.08a

Fig. B6.08b

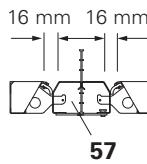


Fig. B6.09

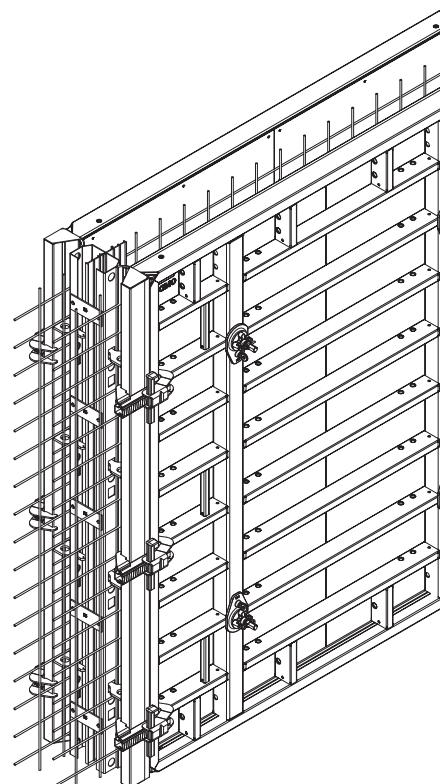


Fig. B6.10

### Height: 2.70 m

**AT 270x3**  
**AT 270x5**

**MT 270x20**

**MT 270x24/25**

**MT 270x30**

**MT 270x35/36**

**MTF 270x20**

**MTF 270x24/25**

**MTF 270x30**

**MTF 270x35/36**

### Height: 1.20 m

**AT 120x3**  
**AT 120x5**

**MT 120x20**

**MT 120x24/25**

**MT 120x30**

**MT 120x35/36**

**MTF 120x20**

**MTF 120x24/25**

**MTF 120x30**

**MTF 120x35/36**

<b>b</b> [mm]	<b>Wall thickness d [cm]</b>							
	Concrete cover approx. 25 mm				Concrete cover approx. 50 mm			
20	24/25	30	35	24/25	30	35	40	
—	2	2	2	2				
—					2	2	2	2
without water bar								without water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1
with water bar								with water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1

—	2	2	2	2	2	2	2	2
—					2	2	2	2
without water bar								without water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1

—	2	2	2	2	2	2	2	2
—					2	2	2	2
without water bar								without water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1

—	2	2	2	2	2	2	2	2
—					2	2	2	2
without water bar								without water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1

—	2	2	2	2	2	2	2	2
—					2	2	2	2
without water bar								without water bar
118	1				1			
158		1				1		
218			1				1	
268				1				1

## Extension Guidelines

**Horizontal pre-assembly  
up to 5.40 m high**



**Swivel nuts of the tie points must be mounted on the primary formwork!**

### Panel connections

For extension units height  $\leq 5.40$  m,  
Alignment Couplers BFD (20) are to be  
used on panel joints.  
(Fig. B7.01a – B7.01d)

**MX 18, 270 x  
30 / 45 / 60**

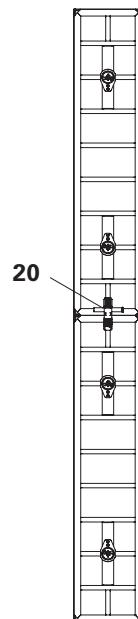


Fig. B7.01a

**MX 18, 270 x  
90 / 120**




Fig. B7.01b

**MX 18, 270 x 240**

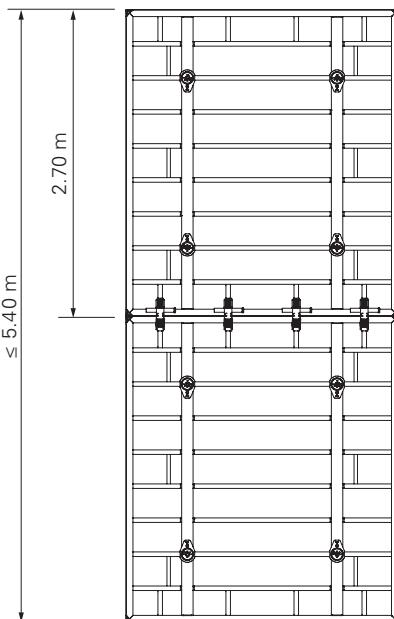


Fig. B7.01c

### Assembly information

The assembly surface must be level.

- Place timbers or planks in position as support.
- Pre-assemble extension units in a horizontal position, with the form-lining facing downwards.

Fig. B7.01a

Fig. B7.01b

Fig. B7.01c

### Erection with the crane

(Fig. B7.02)



- Do not exceed the permissible load-bearing capacity of the MAXIMO Lifting Hook and crane!
- Note: Instructions for Use for the MAXIMO Lifting Hook 1.5 t!

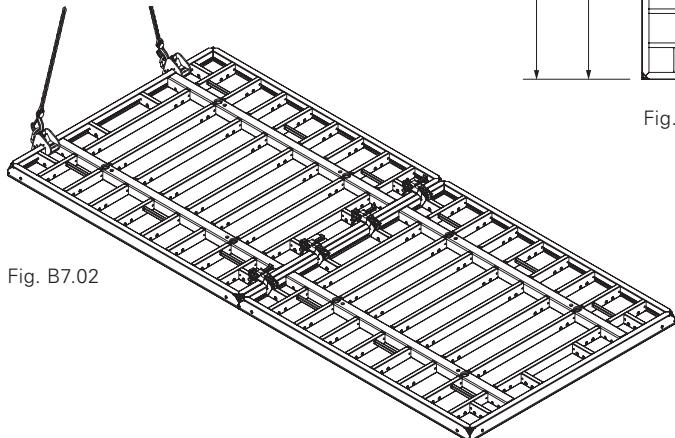


Fig. B7.02

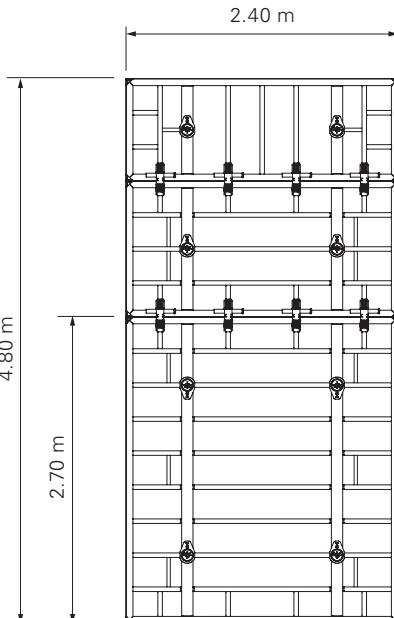


Fig. B7.01d

## Extension Guidelines

**Horizontal pre-assembly up to 8.10 m high**



**Swivel nuts of the tie points must be mounted on the primary formwork!**

### Panel connections

For extension units height  $\leq 5.40$  m, Alignment Couplers BFD (20) and Compensation Waler MAR 85 (21) are to be used on panel joints.

(Fig. B7.03a – B7.03c)

### Assembly information

- The assembly surface must be level.
- Place timbers or planks in position as support.
- Pre-assemble extension units in a horizontal position, with the form-lining facing downwards.

**MX 18, 270 x  
60 / 90 / 120**

**MX 18, 270 x 240**




Fig. B7.03a

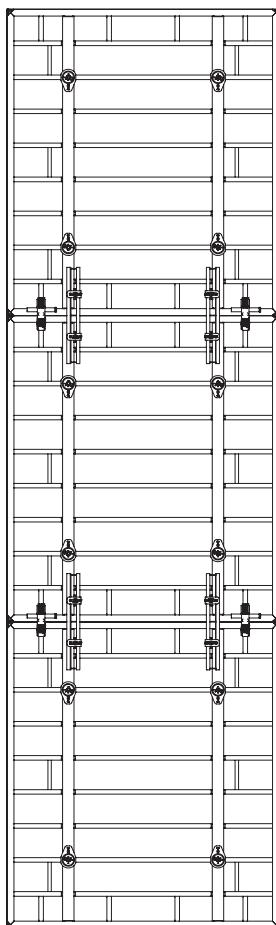


Fig. B7.03b

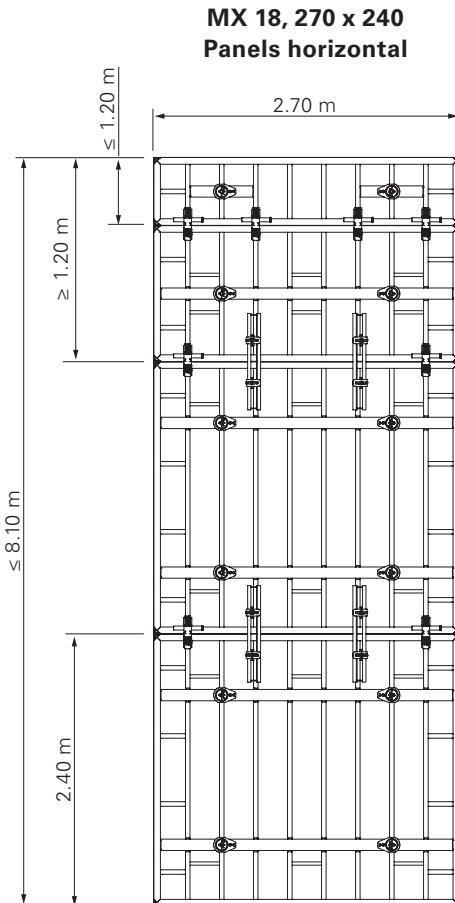


Fig. B7.03c

## Erection with the crane

(Fig. B7.04)



- Do not exceed the permissible load-bearing capacity of the MAXIMO Lifting Hook and crane!
- Note: Instructions for Use for the MAXIMO Lifting Hook 1.5 t!

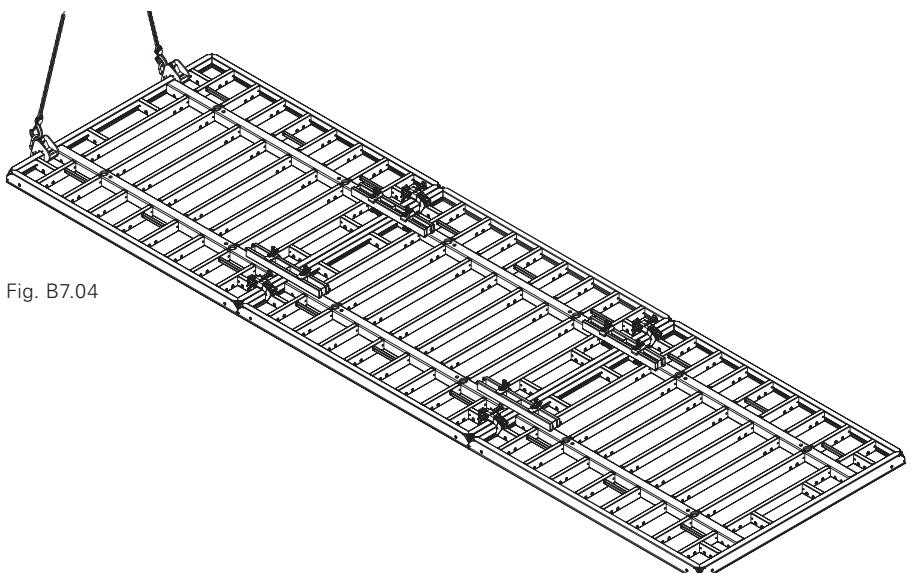


Fig. B7.04

# C1 90° Corners with Inside Corner MXI 18, 330 x 50/20

**PERI**

## Wall Thicknesses 15 – 40 cm

### Outside Corner MX 330 x 45



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

### Components

**20** Alignment Coupler BFD

**120** Panel MXM 18, 330 x 60

**122** Panel MX 18, 330 x 45

**126** Panel MX 18, 330 x 240

**142** Wall Thickness Compensator WDA (18) or filler timber supplied by contractor ≤ 10 cm

**159** Outside Corner MXA 330 x 45

**161** Inside Corner MXI 18, 330 x 50/20

### Examples

- Wall thickness 15
  - Fig. C1.01 + C1.05a + C1.05b
- Wall thickness 17.5
  - Fig. C1.02 + C1.05a + C1.05b
- Wall thickness 20
  - Fig. C1.03 + C1.05a + C1.05b
- Wall thickness 24 / 25
  - Fig. C1.04 + C1.05a + C1.05b
- Wall thickness 30
  - Fig. C1.05 + C1.05a + C1.05b
- Wall thickness 35 / 36
  - Fig. C1.06 + C1.05a + C1.05b
- Wall thickness 40
  - Fig. C1.07 + C1.05a + C1.05b

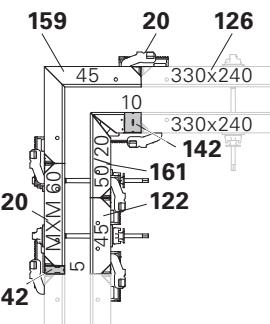


Fig. C1.01

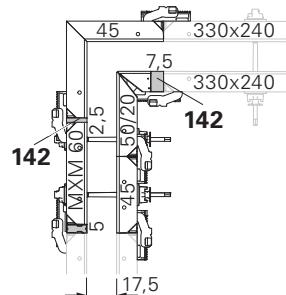


Fig. C1.02

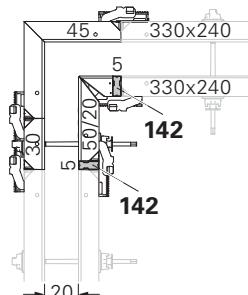


Fig. C1.03

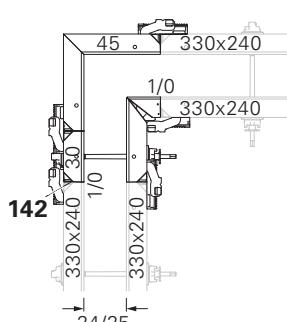


Fig. C1.04

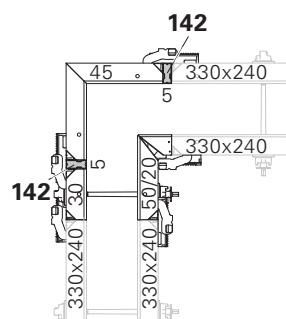


Fig. C1.05

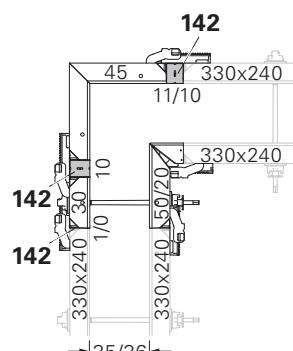


Fig. C1.06

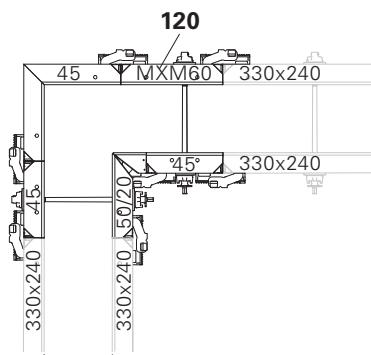


Fig. C1.07

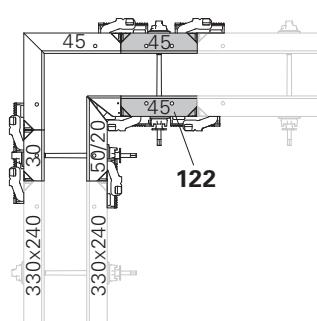


Fig. C1.08

90° Corners with Inside Corner MXI 18, ... x 60, see D3.

### Alternatively – panel width 45

Max. panel width between corner and subsequent panel is 45 cm – MX 18, 330 x 45 (122). (Fig. C1.08)

# C1 90° Corners with Inside Corner MXI 18, 330 x 50/20

PERI

## Arrangement of the Alignment Cougplers

Valid for wall thicknesses 15 – 40 cm.

(Fig. C1.05a + C1.05b)

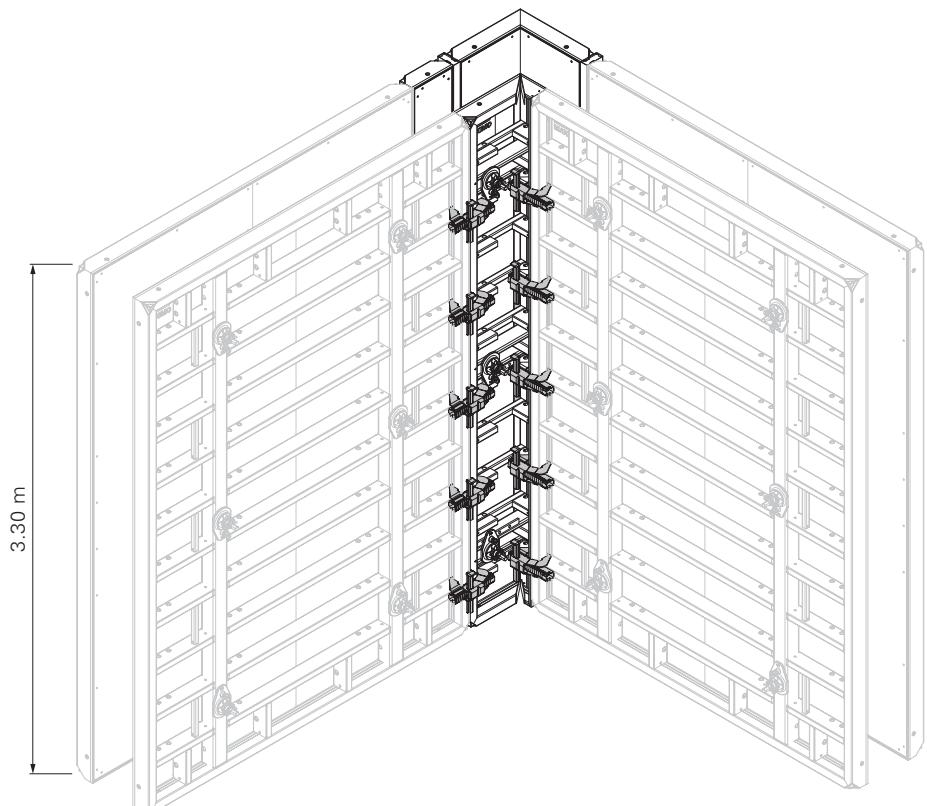


Fig. C1.05a

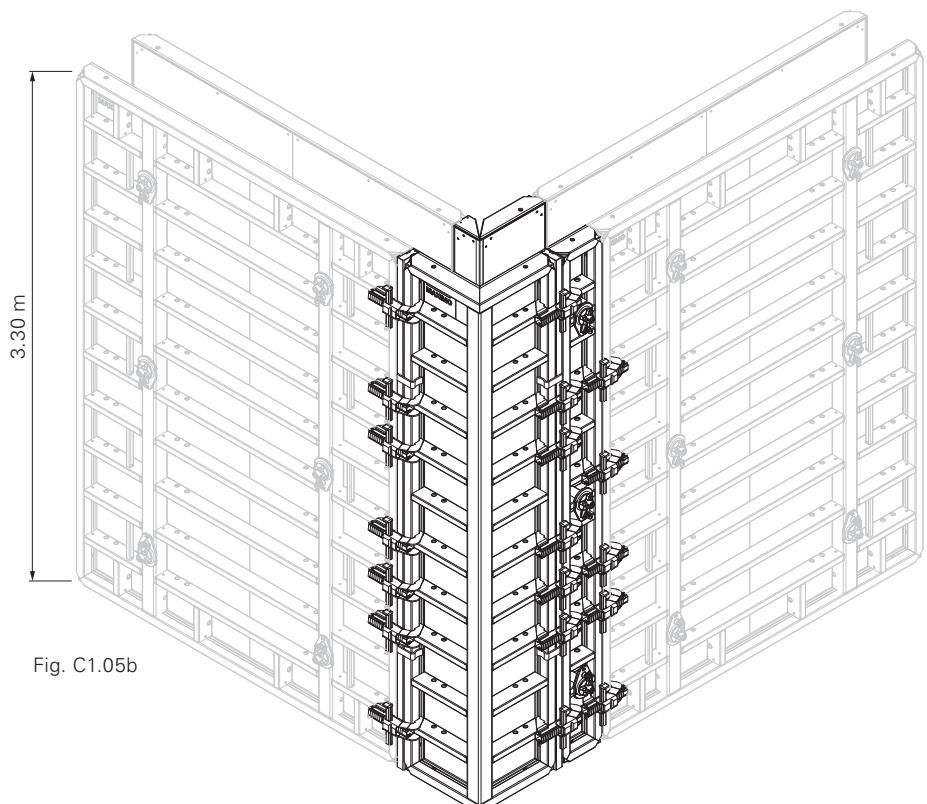


Fig. C1.05b

# C1 90° Corners with Inside Corner MXI 18, 330 x 50/20

**PERI**

## Wall Thicknesses > 40 – 60 cm

### Outside Corner MXA 330 x 45



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

**20** Alignment Coupler BFD

**21** Compensation Waler MAR 85

**22** Compensation Waler MAR 170

**120** Panel MXM 18, 330 x 60

**121** Panel MX 18, 330 x 30

**122** Panel MX 18, 330 x 45

**126** Panel MX 18, 330 x 240

**142** Wall Thickness Compensator

WDA MX 330 or filler timber supplied by contractor ≤ 10 cm

**159** Outside Corner MXA 330 x 45

**161** Inside Corner MXI 18, 330 x 50/20

### Examples

- Wall thickness 45:

Fig. C1.10 + C1.10a + C1.10b

- Wall thickness 50:

Fig. C1.11 + C1.10a + C1.10b

- Wall thickness 55:

Fig. C1.12 + C1.12a + C1.12b

- Wall thickness 60:

Fig. C1.13 + C1.12a + C1.12b

### Compensations

Wall thickness 45 + 50 + 60 cm:

external compensation.

Wall thickness 55 cm:

without compensation.

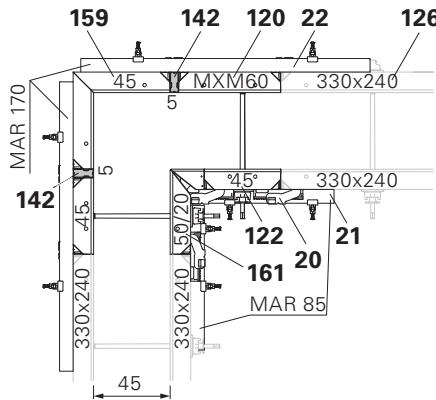


Fig. C1.10

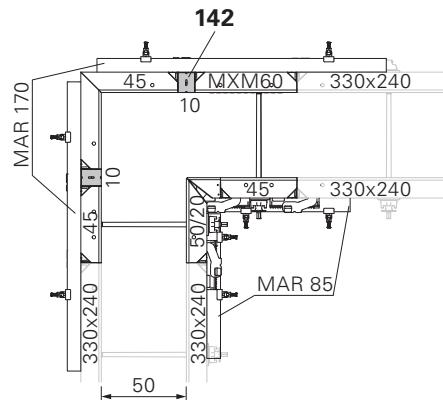


Fig. C1.11

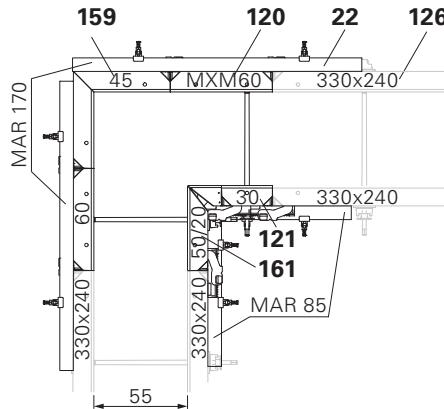


Fig. C1.12

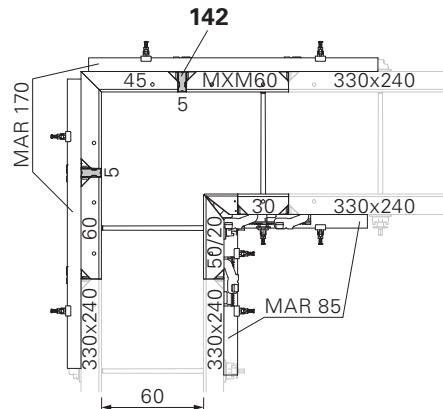


Fig. C1.13



Offset mounting of BFD Alignment Couplers between

- Corner 50/20,
- Panel ... x 30,
- as well as following panel ... x 240.

**„X“**  
from Fig. C1.12a

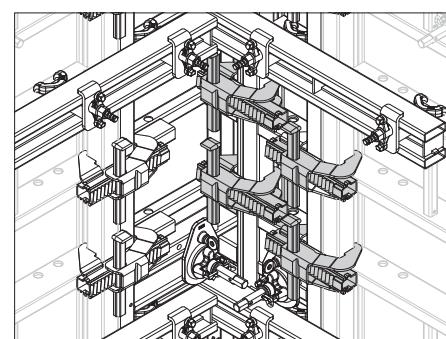


Fig. C1.12b



# C1 90° Corners with Inside Corner MXI 18, 330 x 50/20

PERI

## Arrangement of the Alignment Couplers and Compensation Walers

Valid for wall thicknesses > 40 – 50 cm.



(Fig. C1.10a + C1.10b)

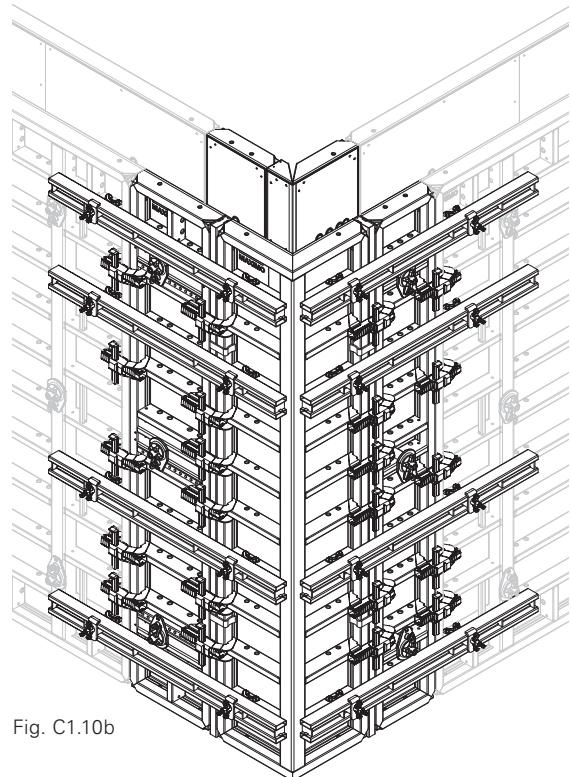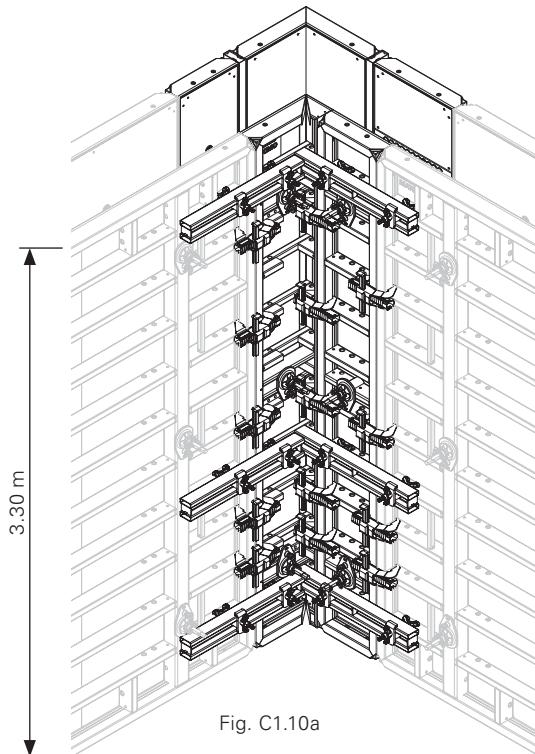

Valid for wall thicknesses > 50 – 60 cm.

(Fig. C1.12a + C1.12b)

„X“  
see Page 58

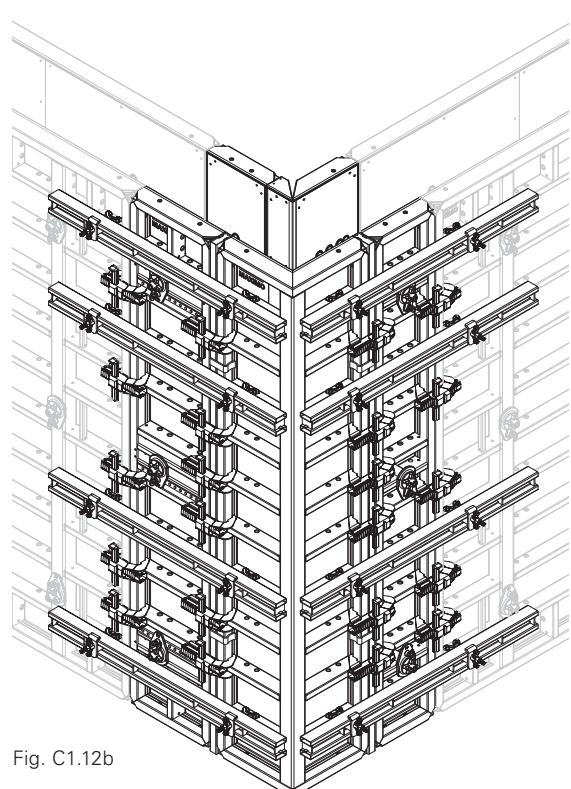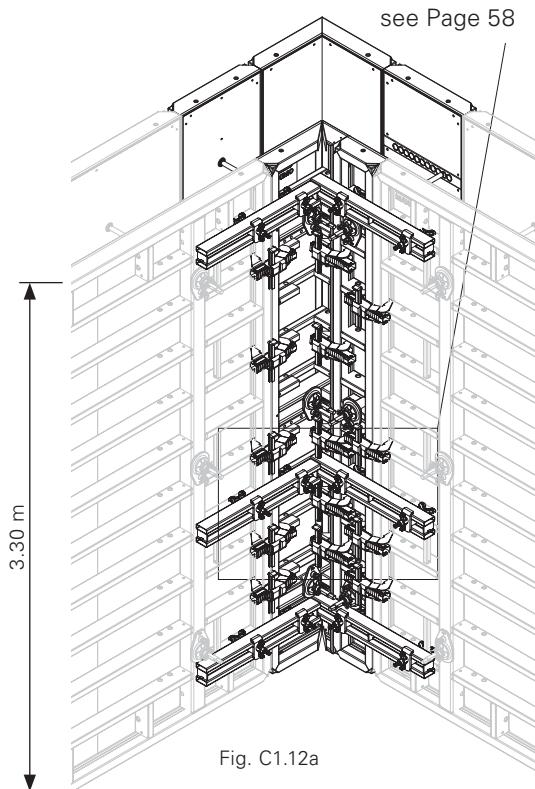

# C2 Panel Connections following 90° Corners

PERI

## Panel connections

With 90° corners, these must be strengthened at the next panel joint by means of a Compensation Waler MAR 85 (21).

This applies to panels with widths  $b \leq 120$ .

With extensions, a second Compensation Waler MAR 85 is required on the panel joint.

(Fig. C2.01a + C2.01b)

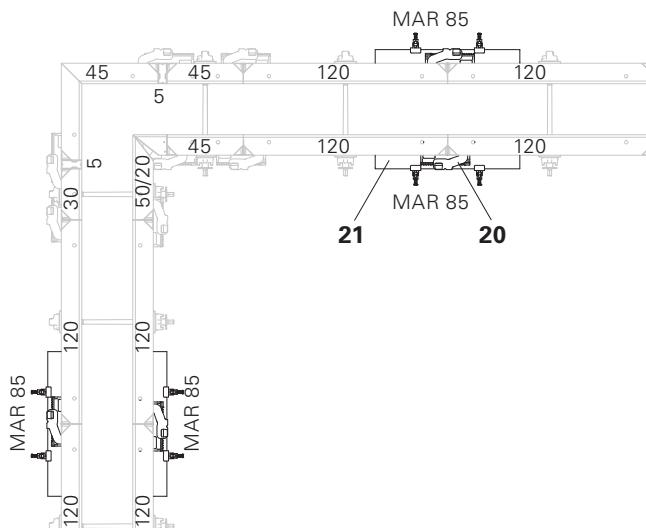


Fig. C2.01

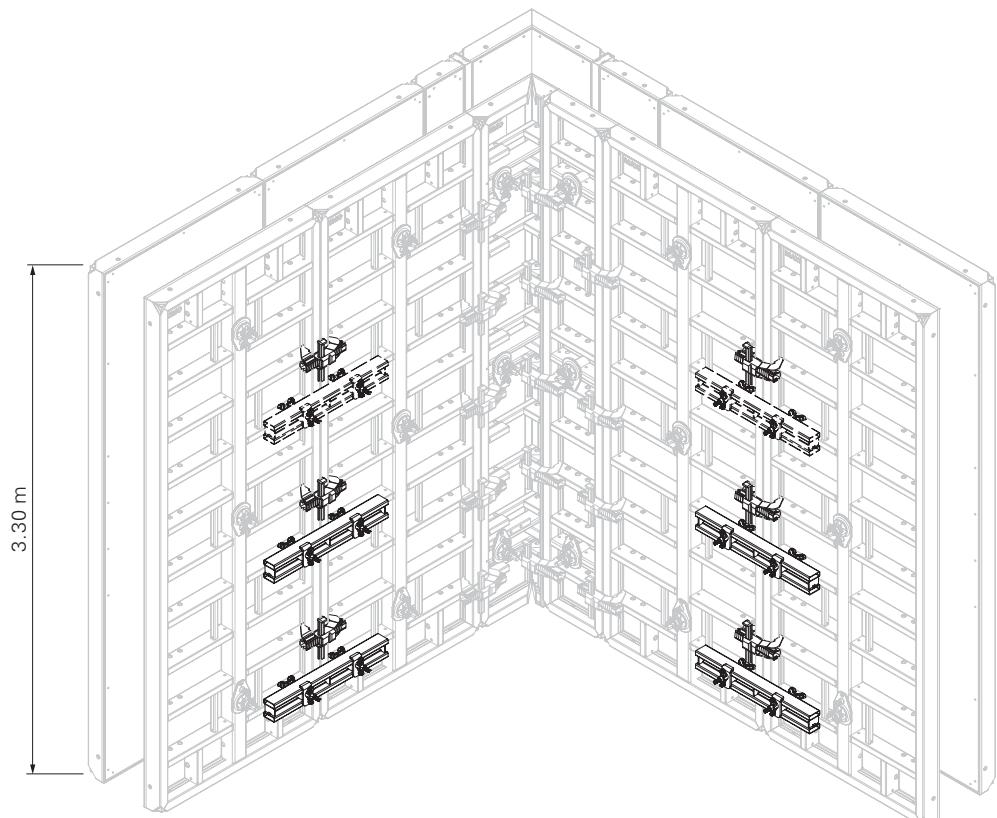


Fig. C2.01a

# C2 Panel Connections following 90° Corners

PERI

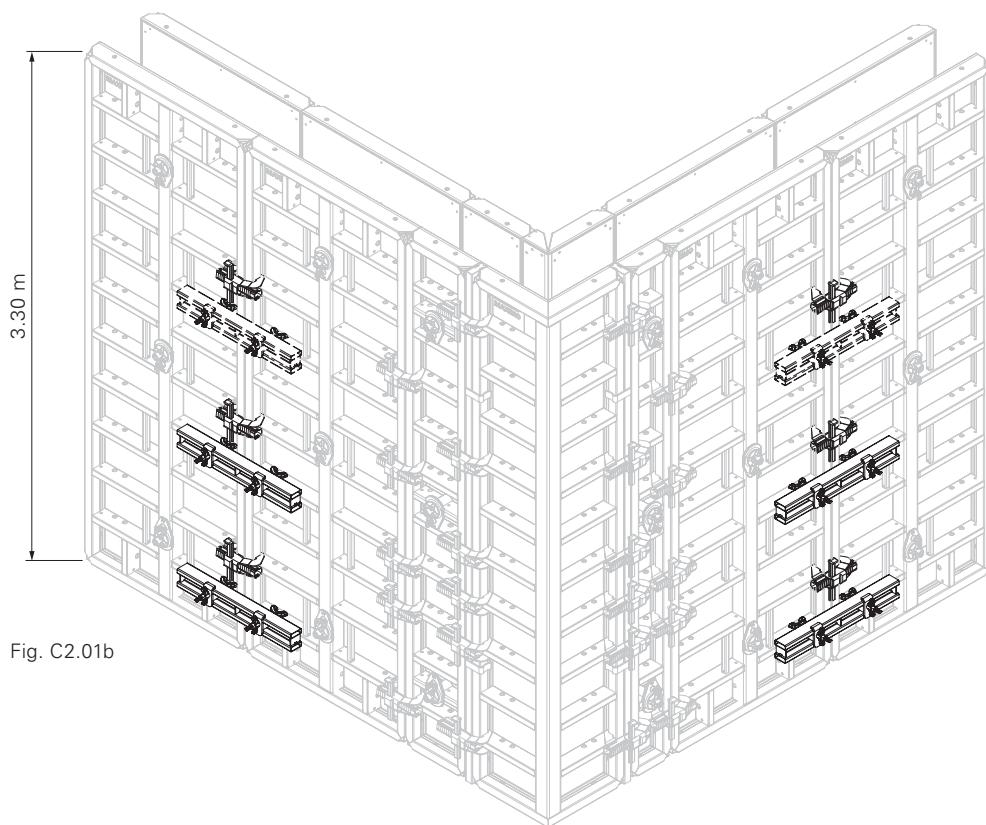


Fig. C2.01b

# C3 90° T-junctions with Inside Corner MXI 18, 330 x 50/20

**PERI**

## Wall Thicknesses 15 – 40 cm



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

### Components

**20** Alignment Coupler BFD

**120** Panel MXM 18, 330 x 60

**122** Panel MX 18, 330 x 45

**123** Panel MX 18, 330 x 60

**126** Panel MX 18, 330 x 240

**142** Wall Thickness Compensator

WDA MX 330 or filler timber  
supplied by contractor ≤ 10 cm

**161** Inside Corner MXI 18, 330 x 50/20

### Assembly

1. Form the T-junction with Inside Corner MXI 50/20 18, (161).
2. Form the opposing straight wall with Panel MX 18, 45 (122), MX 18, 60 (123) or MXM 18, 60 (120) depending on the wall thickness.
3. Install compensation (142) in accordance with the wall thickness.

### Examples

- Wall thickness 15:  
Fig. C3.01 + C3.05a + C3.05b
- Wall thickness 17.5:  
Fig. C3.02 + C3.05a + C3.05b
- Wall thickness 20:  
Fig. C3.03 + C3.05a + C3.05b
- Wall thickness 24 / 25:  
Fig. C3.04 + C3.05a + C3.05b
- Wall thickness 30:  
Fig. C3.05 + C3.05a + C3.05b
- Wall thickness 35 / 36:  
Fig. C3.06 + C3.05a + C3.05b
- Wall thickness 40:  
Fig. C3.07 + C3.05a + C3.05b

### Compensations

- Wall thickness 15 + 17.5 + 24 + 25 cm:  
external compensation
- Wall thickness 30 + 35 + 36 + 40 cm:  
external compensation
- Wall thickness 20:  
without compensation



90° T-junctions with Inside Corner MXI 18, ... x 60, see D3.

### Alternatively - panel width 45

Max. panel width on the T-junction between corner and following panel is 45 cm – MX 18, 330 x 45 (122). (Fig. C3.08)

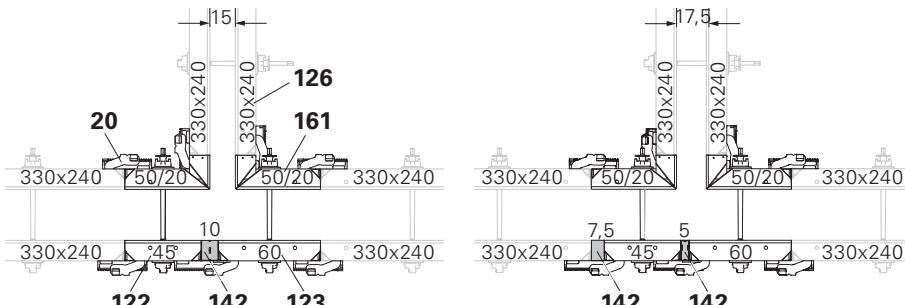


Fig. C3.01

Fig. C3.02

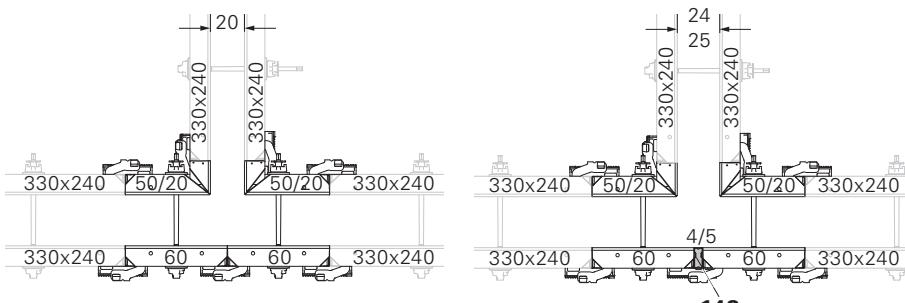


Fig. C3.03

Fig. C3.04

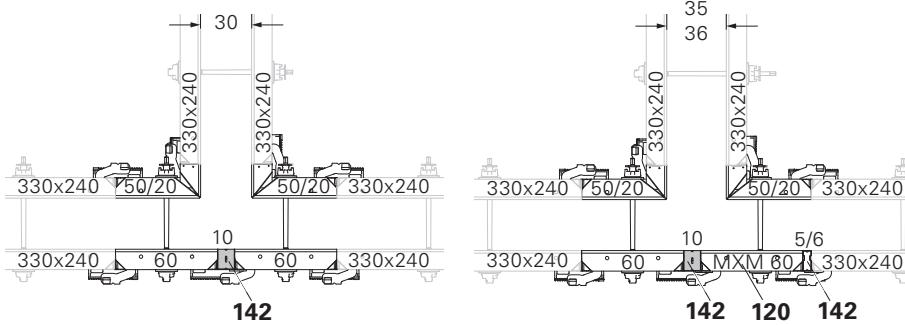


Fig. C3.05

Fig. C3.06

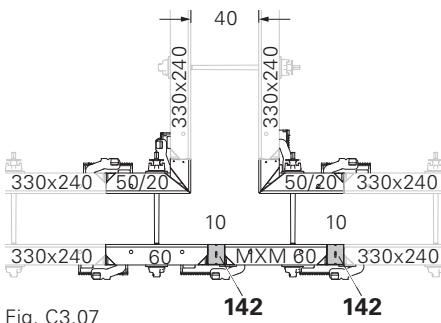


Fig. C3.07

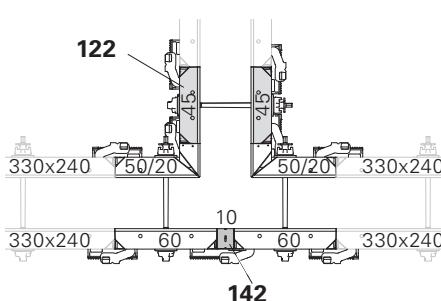


Fig. C3.08

# C3 90° T-junctions with Inside Corner MXI 18, 330 x 50/20

PERI

## Arrangement of the Alignment Couples

Valid for wall thicknesses 15 – 45 cm.

(Fig. C3.05a + C3.05b)

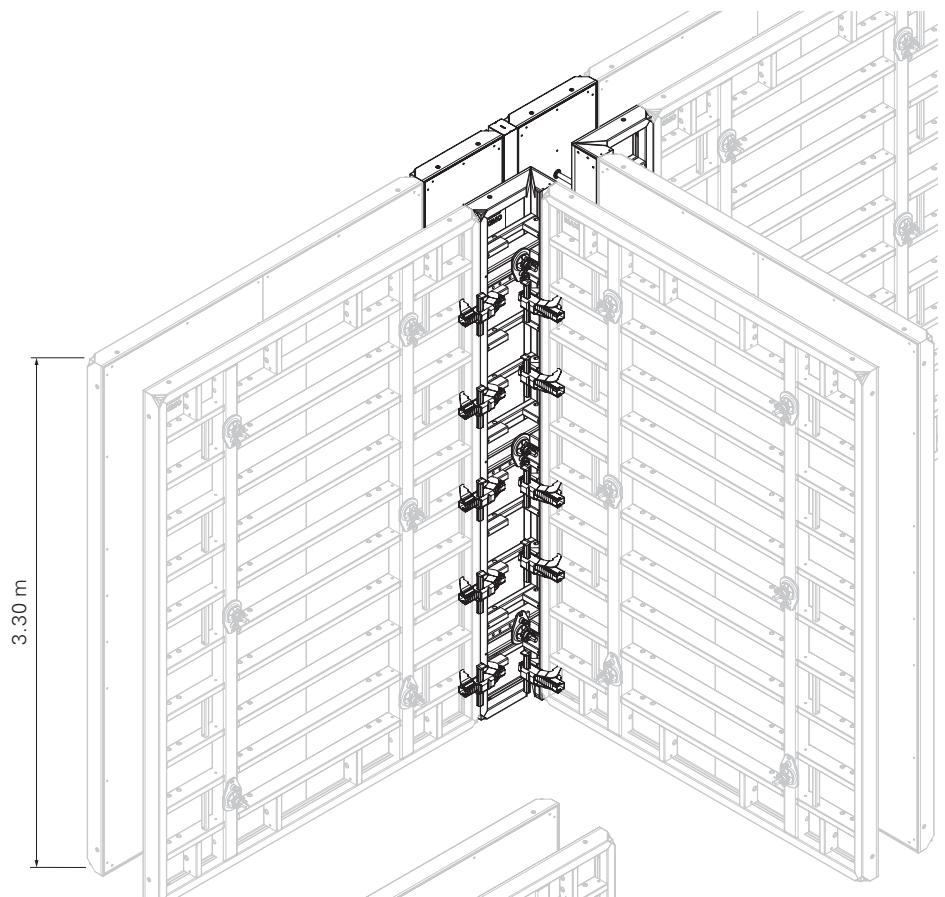


Fig. C3.05a

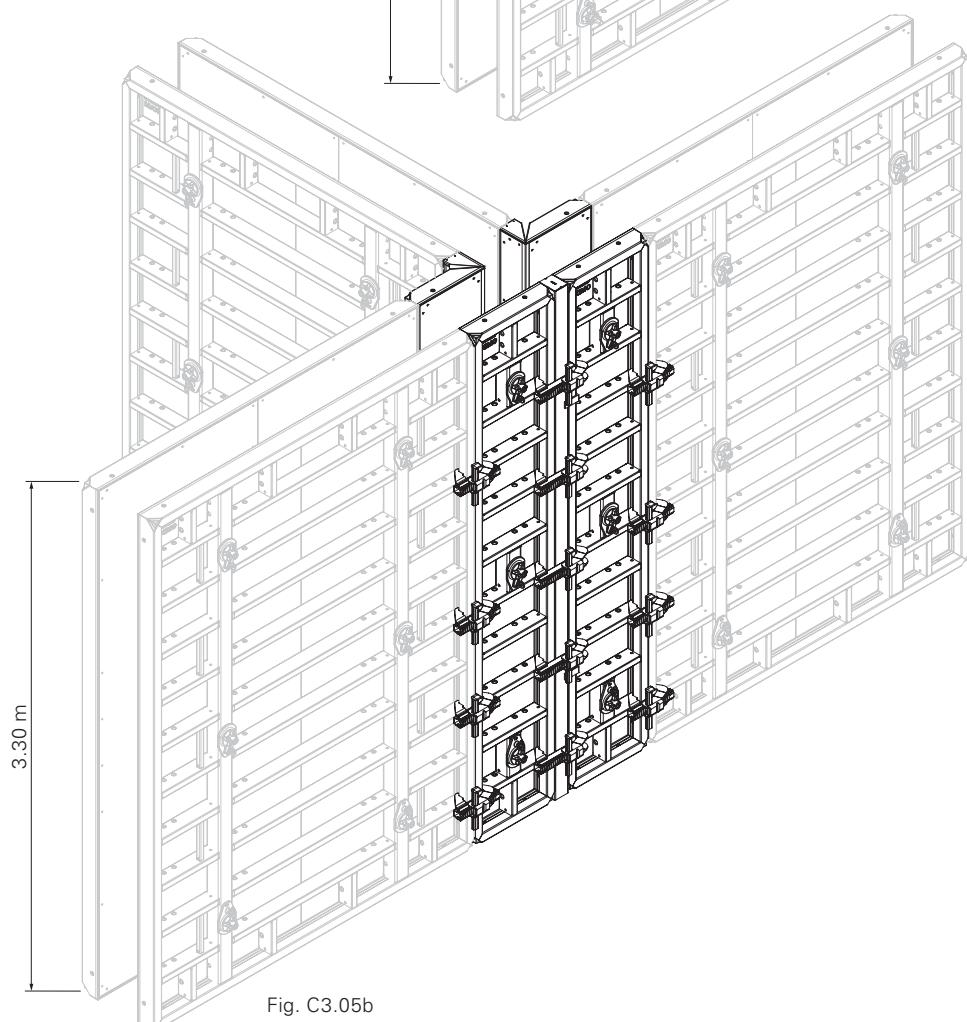


Fig. C3.05b

# C3 90° T-junctions with Inside Corner MXI 18, 330 x 50/20

**PERI**

## Wall Thicknesses > 40 – 60 cm



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

<b>20</b>	Alignment Coupler BFD
<b>22</b>	Compensation Waler MAR 170
<b>120</b>	Panel MXM 18, 330 x 60
<b>122</b>	Panel MX 18, 330 x 45
<b>123</b>	Panel MX 18, 330 x 60
<b>126</b>	Panel MX 18, 330 x 240
<b>142</b>	Wall Thickness Compensator WDA MX 330 or filler timber supplied by contractor ≤ 10 cm
<b>161</b>	Inside Corner MXI 18, 330 x 50/20

### Assembly

1. Form the T-junction with Inside Corner MXI 18, 50/20 (161).
2. Form the opposing straight wall with Panel MX 18, 45 (122), MX 18, 60 (123) or MXM 18, 60 (120) depending on the wall thickness.
3. Install compensation (142) in accordance with the wall thickness.
4. On the straight wall, install Compensation Waler MAR 170 (22) centrally to the outgoing wall.

### Examples

Wall thickness 45:

Fig. C3.09 + C3.09a + C3.09b

Wall thickness 50:

Fig. C3.10 + C3.09a + C3.09b

Wall thickness 55:

Fig. C3.11 + C3.09a + C3.09b

Wall thickness 60:

Fig. C3.12 + C3.09a + C3.09b

### Compensations

Wall thickness 45 + 55 + 60 cm:

external compensation

Wall thickness 50:

without compensation



90° T-junctions with Inside Corner MXI 18, ... x 60, see Section D3.

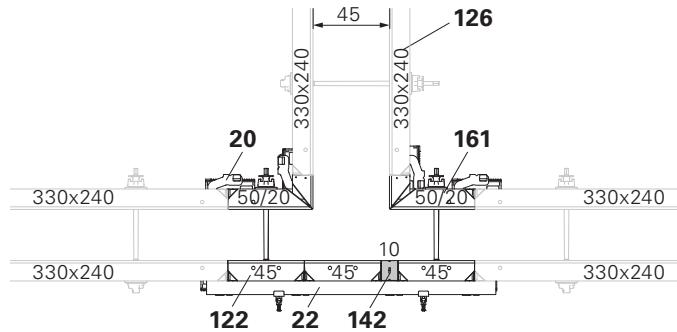


Fig. C3.09

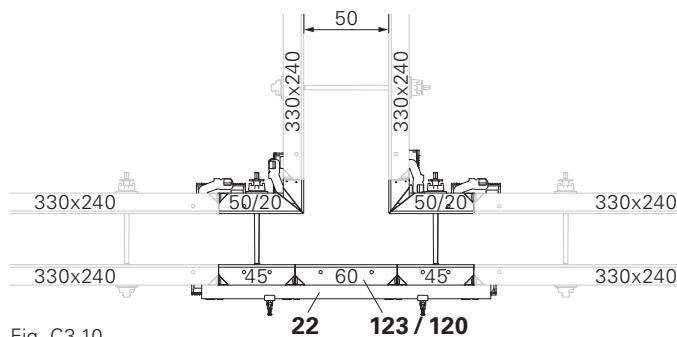


Fig. C3.10

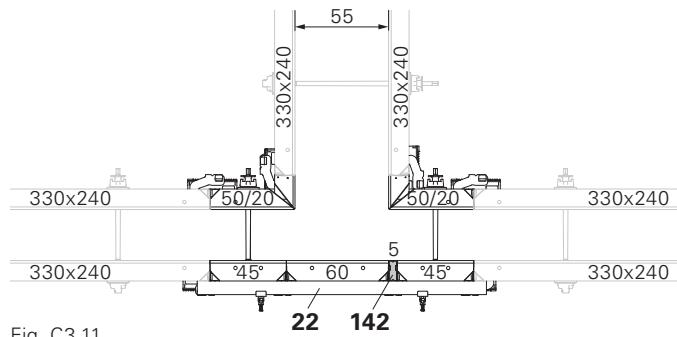


Fig. C3.11

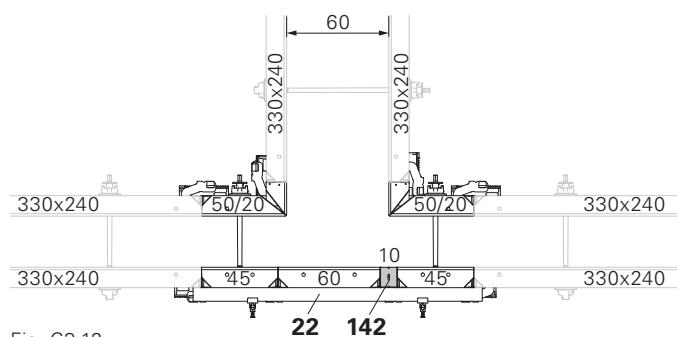


Fig. C3.12



# C3 90° T-junctions with Inside Corner MXI 18, 330 x 50/20

PERI

## Arrangement of the Alignment Couplers and Compensation Walers

Valid for wall thicknesses > 40 – 60 cm.

(Fig. C3.09a + C3.09b)

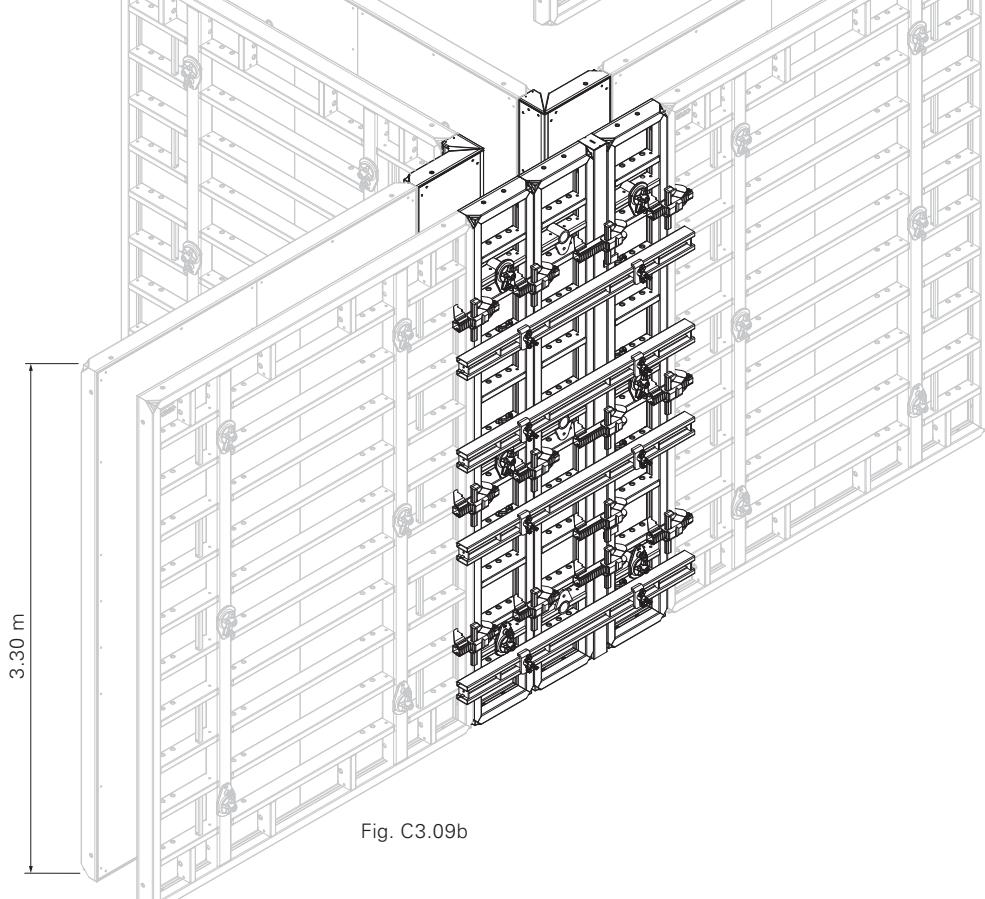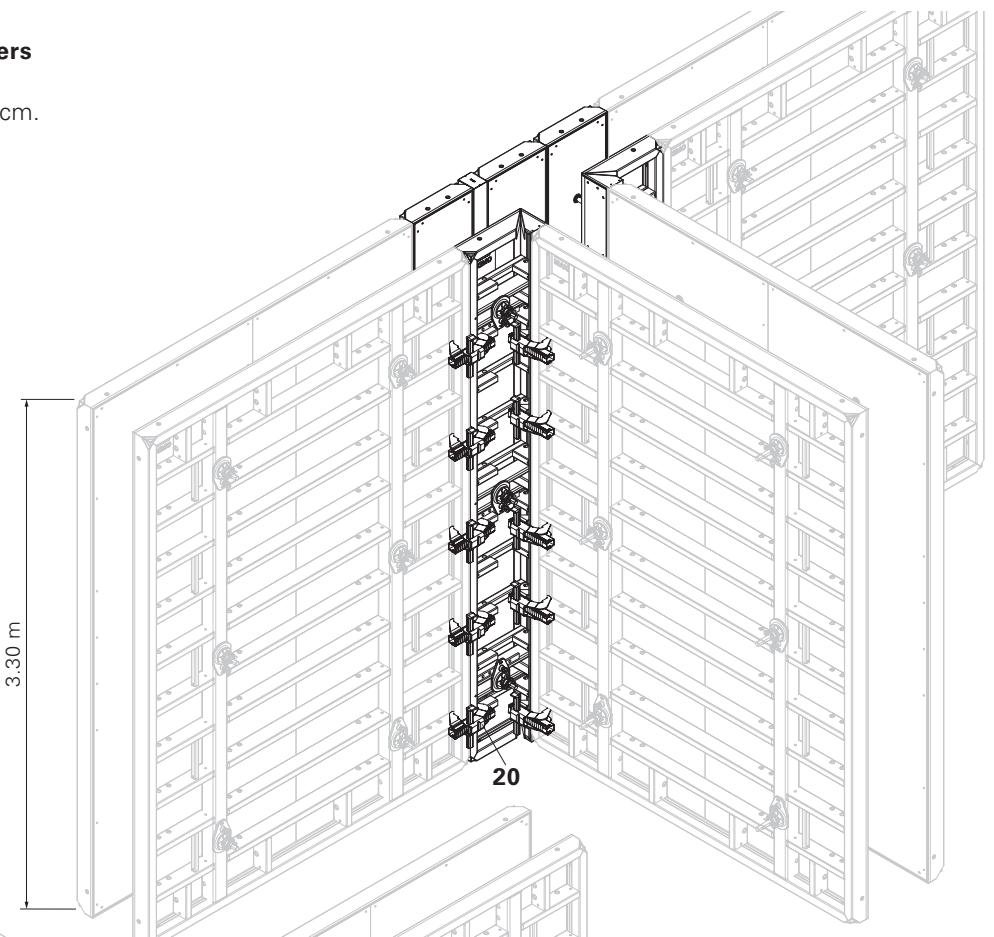

# C4 Panel Connections following 90° T-junctions

PERI


## Panel connections

With 90° T-junctions, these must be strengthened at the next panel joint by means of a Compensation Waler MAR 85 (21).

This applies to panels with widths  $b \leq 120$ .

With extensions, a second Compensation Waler MAR 85 is required on the panel joint (shown as a dotted line).

(Fig. C4.01)

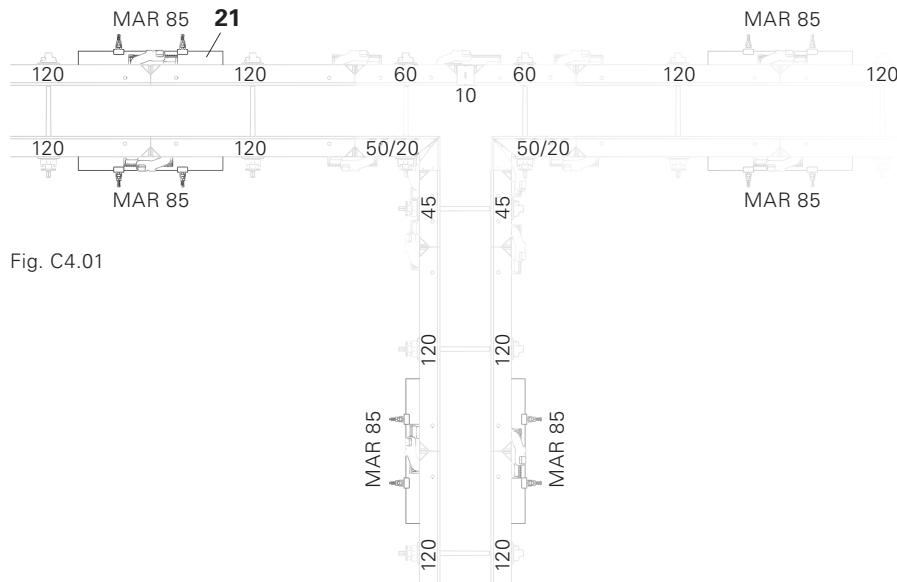

## Arrangement of the Alignment Cougles and Compensation Walers

(Fig. C4.01a + C4.01b)

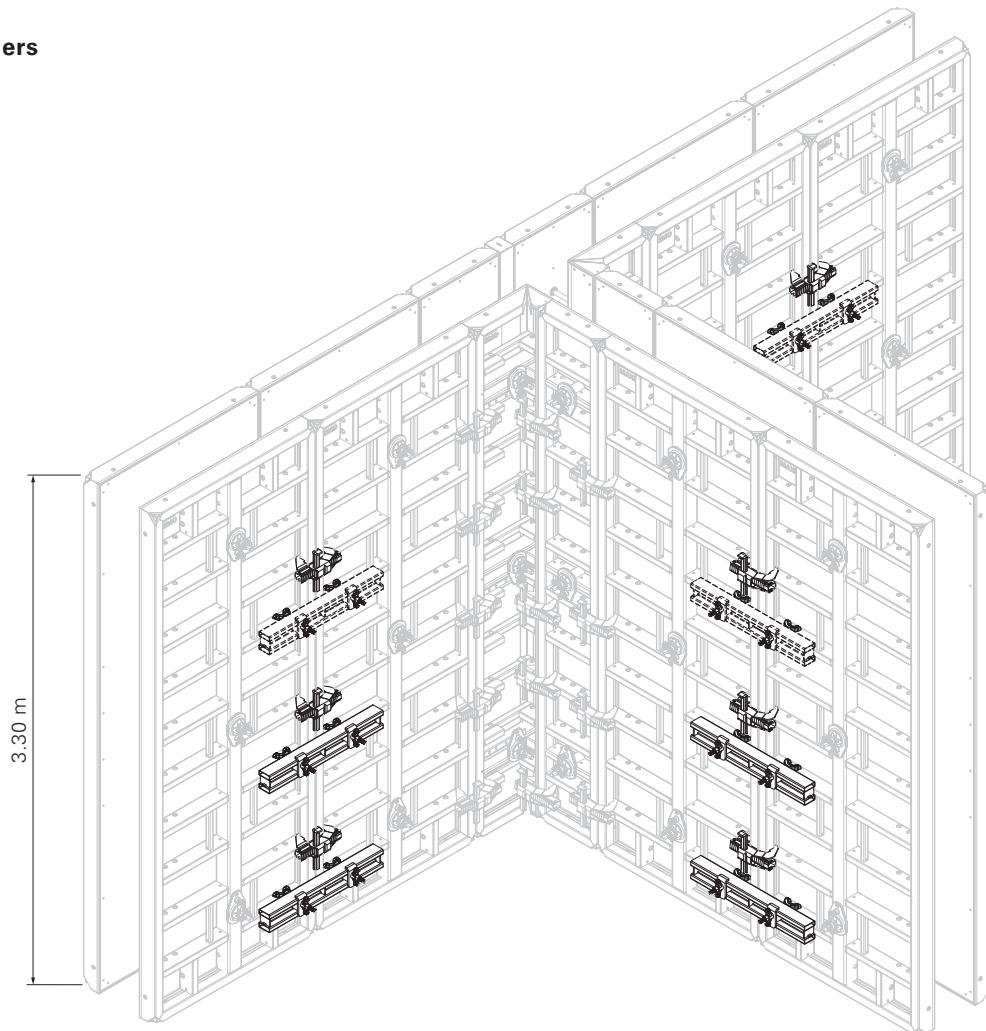


Fig. C4.01a

# C4 Panel Connections following 90° T-junctions



Fig. C4.01b

# C5 Tension and Compression Brace

PERI

## Tension and Compression Brace MX 15-40 / MX 15-100

With a panel height of 3.30 m, the top tie is not required if a Tension and Compression Brace MX 15-40 or MX 15-100 is used.

The panel is braced through the Tension and Compression Brace (70).



Panel height 330 cm:  
setting dimension = wall thickness.

Preparation and assembly of the Tension and Compression Brace, see Section A9.

**Close open tie holes on the form-lining by means of Plugs MXM 18, Item no. 125099.**



Always mount platforms and brackets on the side of the securing hook (70.1) – here the closing formwork.

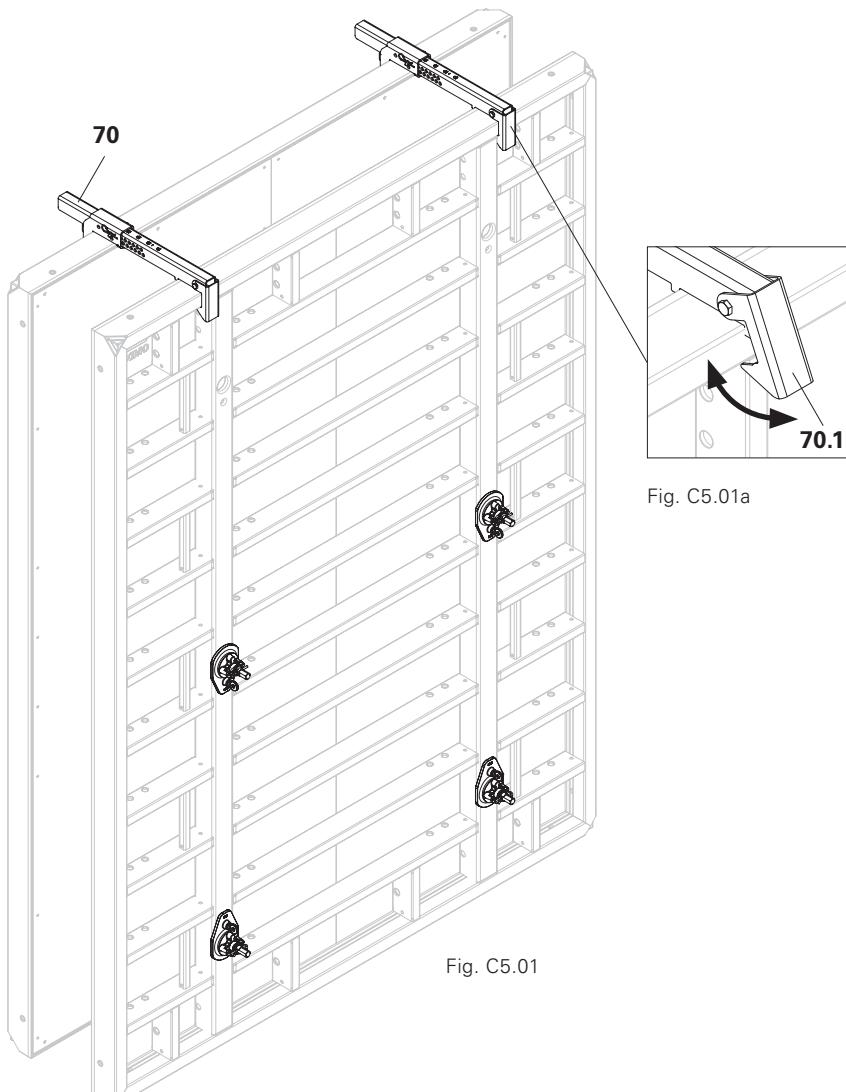


Fig. C5.01

# C6 Length Compensations

**PERI**

## Wall Thickness Compensator WDA MX 330

Length compensation up to 10 cm.

### Components

<b>20</b> Alignment Coupler BFD	4x
<b>50</b> WDA MX 330 x ... or timber	1x



No ties required!

The length is compensated with Wall Thickness Compensator MX or using timber which has been cut to size (50). Note: number and arrangement of the BFD Alignment Couplers (20). (Fig. C6.01)

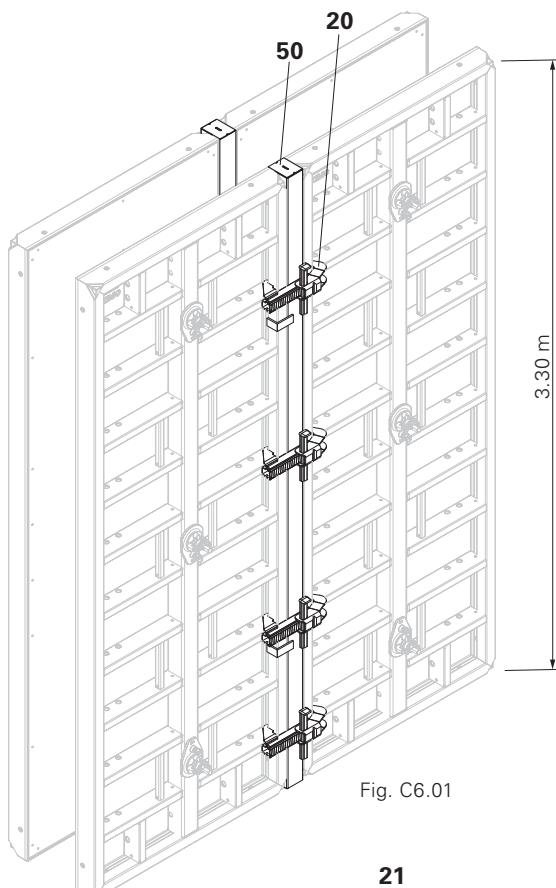


Fig. C6.01

## Filler Profile TPP

Length compensation from 20 to 36 cm.



- Perm. fresh concrete pressure:  
80 kN/m<sup>2</sup> for: b ≥ 20 and b < 30 mm.
- Perm. fresh concrete pressure:  
60 kN/m<sup>2</sup> for: b ≥ 30 and b ≤ 36 mm.

### Components

<b>20</b> Alignment Coupler BFD	6x
<b>21</b> Compensation Waler MAR 85	3x
<b>51</b> Plywood filler 21 mm	1x
<b>52</b> Filler Profile TPP	2x

When anchoring, ensure that the tie forces are transferred centrally through the Compensation Waler MAR 85 (21) to the adjacent panels.

(Fig. C6.02b)

Installation (Fig. C6.02 + C6.02a)

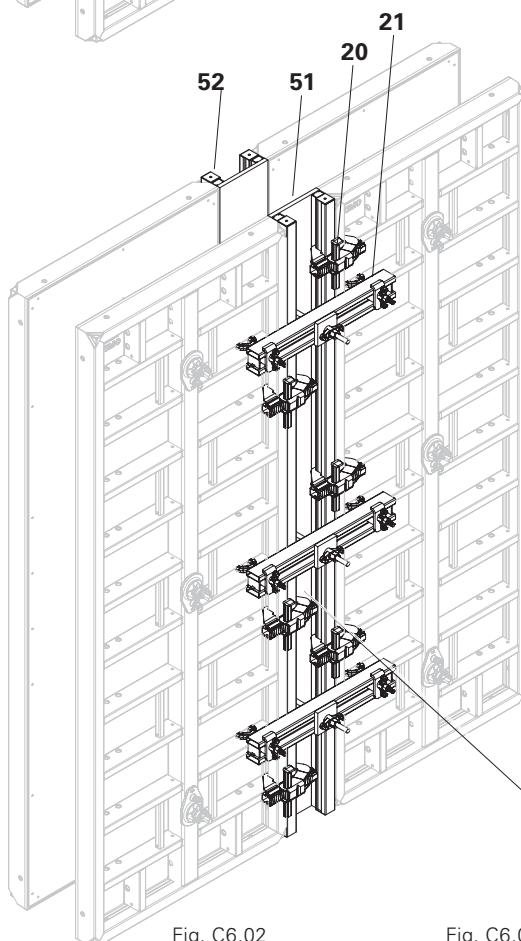


Fig. C6.02

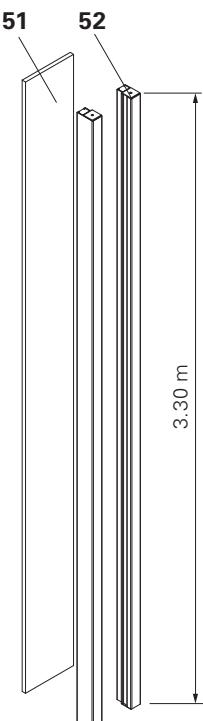


Fig. C5.02a

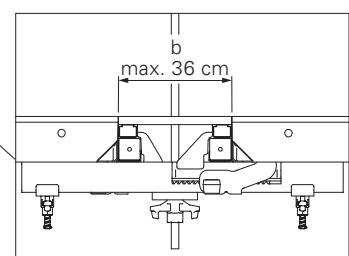


Fig. C6.02b

## Stopend Formwork with Panel MX 18, 330 x 30

As Stopend Panel (121) for 30 cm wall thickness.  
(Fig. C7.01)

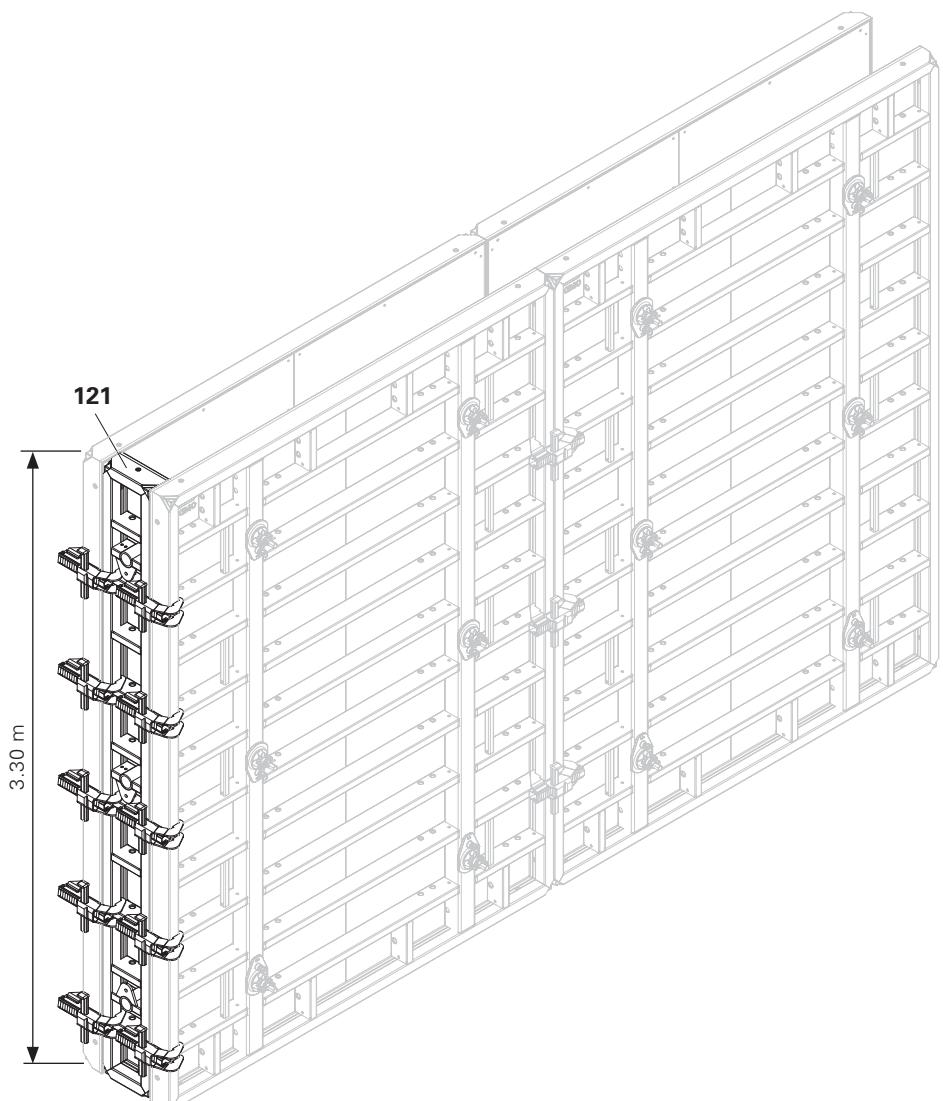


Fig. C7.01

# C7 Stopend Formwork

**PERI**

## Stopend Formwork with timber and filler plywood

For walls of any thickness.



The fresh concrete pressure of the stopend formwork is transferred to the MAXIMO Panels via the stopend ties and Waler 85.

### With Panel MX 18, 330 x 120 at the end of the wall.

(Fig. C7.02 + C7.03)

Also valid for the following panels:

MXI MX 18, 330 x 30

MXI MX 18, 330 x 45

MXI MX 18, 330 x 60

MXI MX 18, 330 x 90

#### Connecting parts

<b>21</b>	Compensation Waler MAR 85 / alternatively: Waler 85	4x
<b>23</b>	Wingnut Pivot Plate DW 15	14x
<b>25</b>	Tie Rod DW 15	3x
<b>26</b>	Timber	2x
<b>27</b>	Top Tie Bracket-2 AH	6x
<b>28</b>	Stopend Tie TS	8x
<b>51</b>	Plywood filler 21 mm	1x

- Compensation Waler MAR 85 (21) with Stopend Tie (28) and Wingnut Pivot Plate (23), see Fig. C7.03b.
- Top Tie Bracket-2 AH with Tie Rod (25) and Wingnut Pivot Plate (23), see Fig. C7.03a.

### With Panel MX 18, 330 x 240 at the end of the wall.

(not shown)

#### Connecting parts

<b>21</b>	Compensation Waler MAR 85 / alternatively: Waler 85	4x
<b>23</b>	Wingnut Pivot Plate DW 15	8x
<b>26</b>	Timber	2x
<b>28</b>	Stopend Tie TS	8x
<b>51</b>	Plywood filler 21 mm	1x

Compensation Waler MAR 85 (21) with Stopend Tie (28) and Wingnut Pivot Plate (23), see Fig. B6.03b.

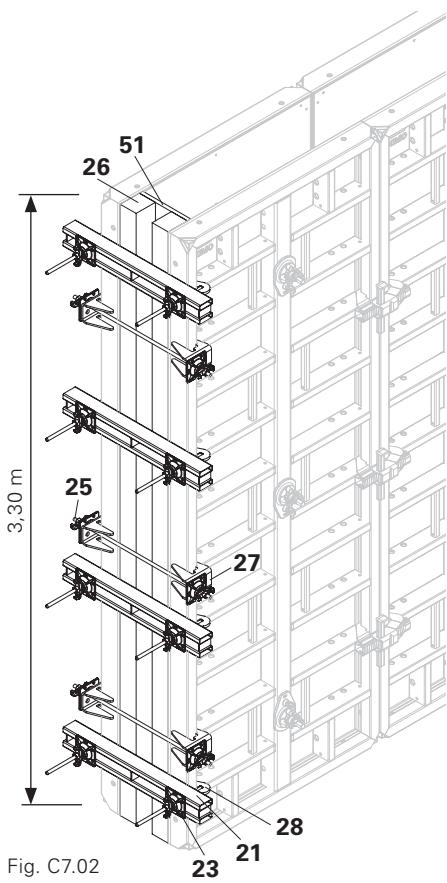


Fig. C7.02

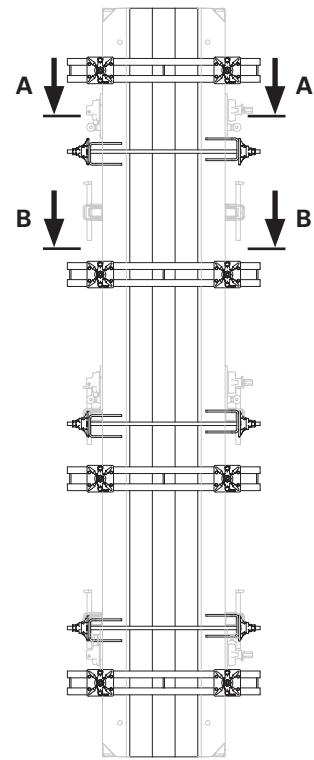


Fig. C7.03

A - A




Fig. C7.03a

B - B

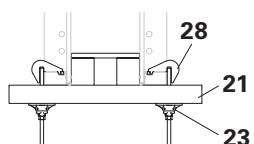


Fig. C7.03b

## Extension Guidelines

**Horizontal pre-assembly  
up to H = 6.60 m**



**Swivel nuts of the tie points must be mounted on the primary formwork!**

### Panel connections

For height extension units

- H < 6.60 m, Alignment Couplers BFD (20) are to be used on the panel joints. (Fig. C8.01c)
- H = 6.60 m, Alignment Couplers BFD (20) and Compensation Walers MAR 85 (21) are to be used on the panel joints. (Fig. C8.01a + C8.01b)

### Assembly

1. The assembly surface must be level.
2. Place timbers or planks in position as support.
3. Pre-assemble extension units in a horizontal position, with the form-lining facing downwards.

**MX 18, 330 x  
60 / 90 / 120**

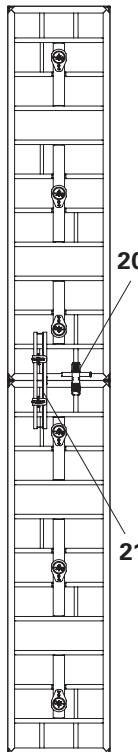


Fig. C8.01a

**MX 18, 330 x 240**

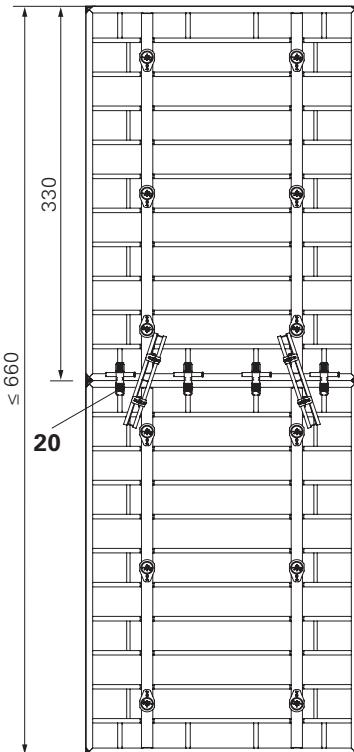


Fig. C8.01b

**MX 18, 330 x 240**

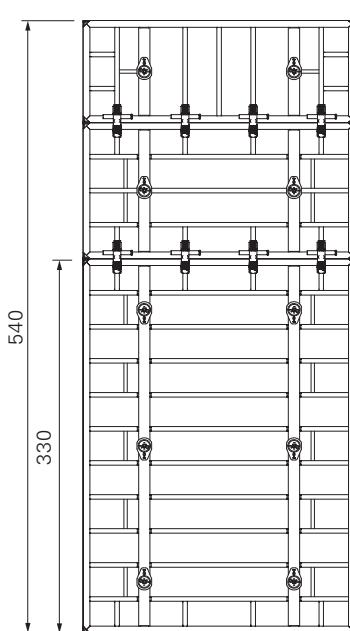


Fig. C8.01c

### Erection with the crane

(Fig. C8.02)



- **Do not exceed the permissible load-bearing capacity of the MAXIMO Lifting Hook and crane!**
- **Note: Instructions for Use for the MAXIMO Lifting Hook 1.5 t!**

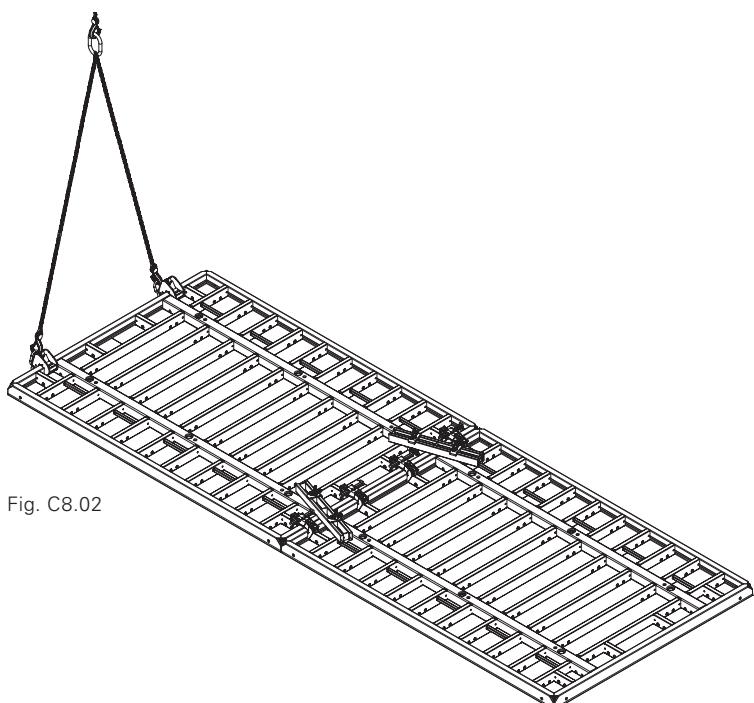


Fig. C8.02

## Extension Guidelines

**Horizontal pre-assembly up to H = 7.20 m**



**Swivel nuts of the tie points must be mounted on the primary formwork!**

### Panel connections

For extension units  $H > 6.00 \text{ m}$  and  $H \leq 7.20 \text{ m}$ , Alignment Couplers BFD (20) and Compensation Waler MAR 85 (21) are to be used on panel joints. (Fig. C8.03a + C8.03b)

### Assembly

1. The assembly surface must be level.
2. Place timbers or planks in position as support.
3. Pre-assemble extension units in a horizontal position, with the form-lining facing downwards.

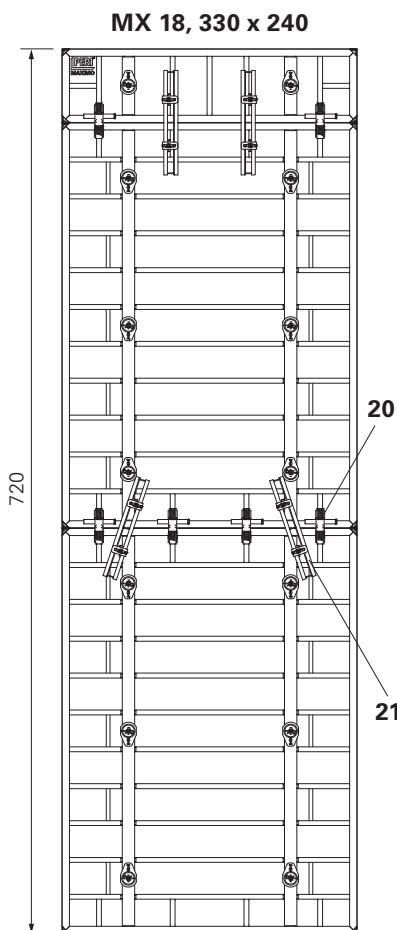


Fig. C8.03a

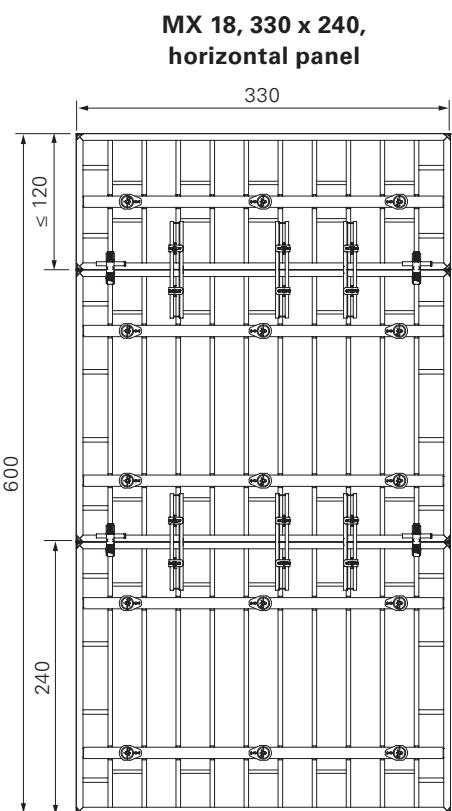


Fig. C8.03b

### Erection with the crane

(Fig. C8.04)



- Do not exceed the permissible load-bearing capacity of the MAXIMO Lifting Hook and crane!
- Note: Instructions for Use for the MAXIMO Lifting Hook 1.5 t!

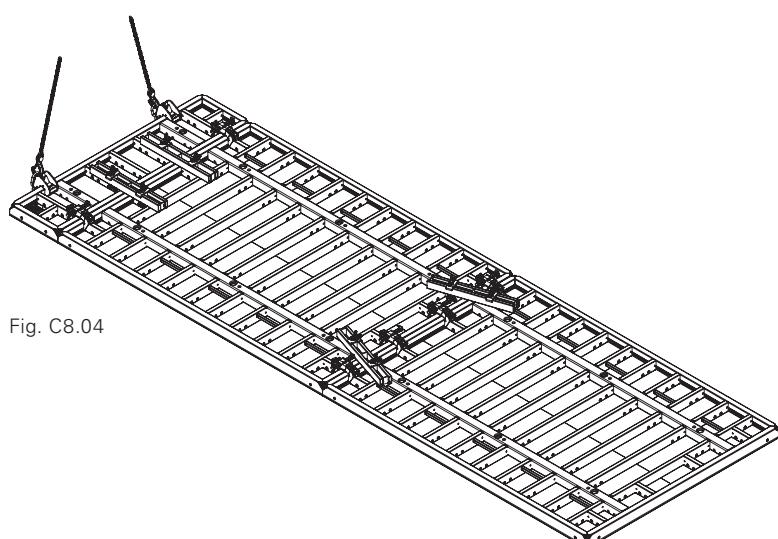


Fig. C8.04

## Magnet Cone MX 18

Item no. 127696 (Fig. D1.01)



When using the Magnet Cone MX 18, the inclined position of the tie is reduced to 2.5°.

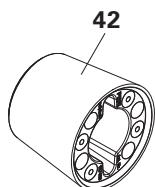


Fig. D1.01

## Installation



Before installing the Magnet Cone MX 18, ensure that

- the magnetic cone was completely submerged in a release agent and has been allowed to drain off, and
- the contact surfaces of the magnet are clean.

The Magnet Cone MX 18 (42)

- can be used on one side or on both sides without a sleeve,
- is held in position at the tie point with magnets.

### Installation on one side

(Fig. D1.02a)

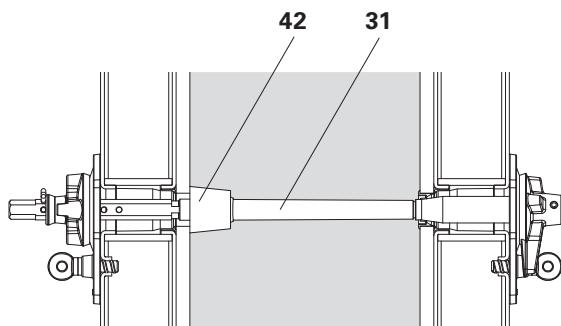


Fig. D1.02a

### Installation on both sides

(Fig. D1.02b)

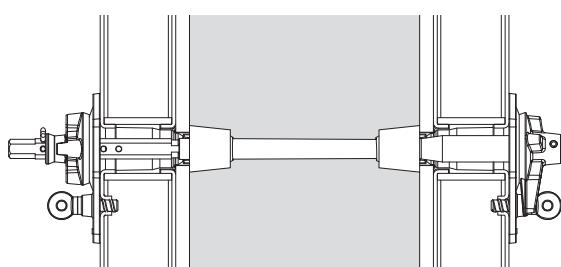


Fig. D1.02b

## Removal



- Remove concrete slurry in the Magnet Cone – shortly after striking.
- Remove by means of Magnet Cone Spanner MX 15/18 (43),  
Item no. 126696. (Fig. D1.03)

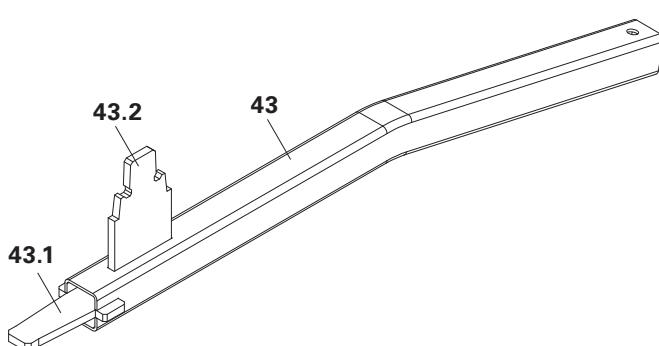


Fig. D1.03

# D1 Magnet Cone MX 18

PERI

## Dismantling

1. Clean hole using the pointed side of the wrench (43.1). Not shown.
2. Insert pointed side of wrench (43.1) into the guide groove of the Magnet Cone from the right, and clean the slot. (Fig. D1.04a)
3. Insert pointed side of wrench (43.1) into the guide groove of the Magnet Cone from the left, and clean the slot. (Fig. D1.04b)

→ Hole and guide grooves of the Magnet Cone are free of concrete slurry.

4. Insert tube supports with wings (43.2) into the cleaned openings. (Fig. D1.04c)
5. Turn the Magnet Cone Spanner. (Fig. D1.04d)  
→ Magnet Cone MX 18 is screwed out.

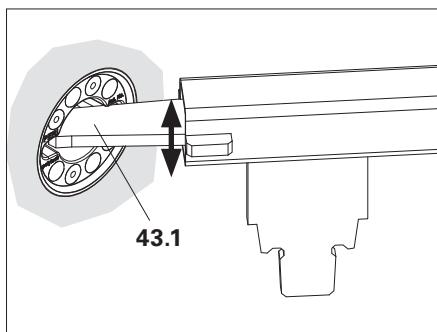


Fig. D1.04a

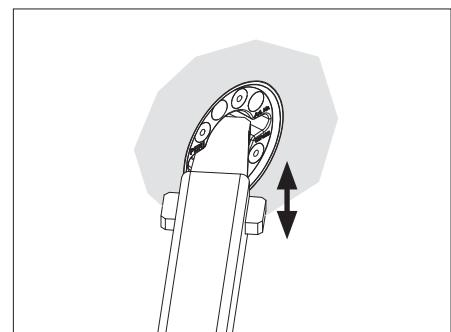


Fig. D1.04b

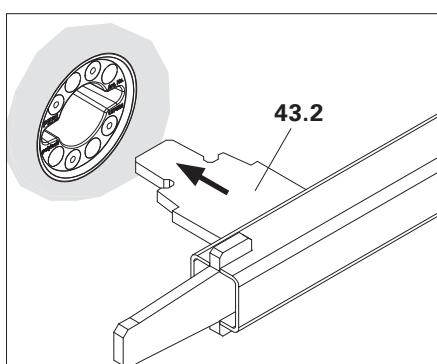


Fig. D1.04c

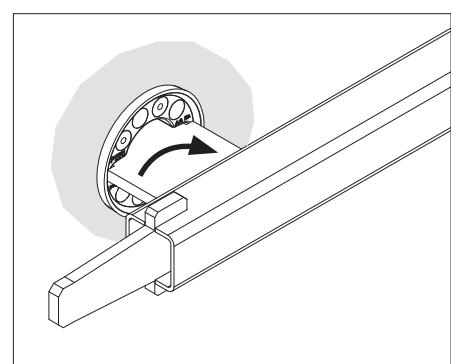


Fig. D1.04d

## Closing the cone openings

PERI "DK / SK System" Tie Technology can be used for special requirements such as architectural concrete or waterproof walls – see "PERI Tie Technology" brochure.



**Follow the Instructions of Use for concreting cones and the safety data sheet for sealing compounds.**

## Assembly

1. Apply prepared sealing compound or Repoxal to front conical part of the Concreting Cone.
2. Insert Concreting Cone into the tie hole.  
→ Tie hole is closed.

## Examples

- Smooth surface with DK Concrete Cone UNI 58/52, Item no. 031643.
- Sealing Compound, Item no. 108136. (Fig. D1.05)

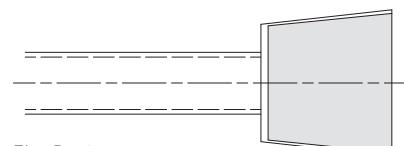


Fig. D1.05

- Recessed surface with DK Concrete Cone DW 15/58-30, Item No. 031550.
- Repoxal, Item no. 108136. (Fig. D1.06)

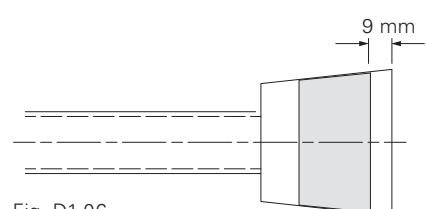


Fig. D1.06

- Shadow joint with DK Concrete Cone Architectural Concrete DW 15/58-52, Item no. 031641.
- Sealing Compound, Item no. 108136. (Fig. D1.07)

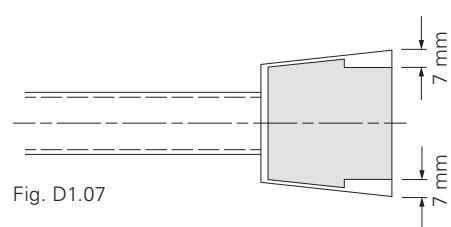


Fig. D1.07

# D290° Corners with Inside Corner MXI 18, 270/330 x 60

**PERI**

## Wall Thicknesses 15 – 30 cm

Height (H) 2.70 m or 3.30 m

### Outside Corner MXA 270/330 x 35



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

#### Components

**20** Alignment Coupler BFD

**101/121** Panel MX 18, 270/330 x 30


**106/126** Panel MX 18, 270/330 x 240

**140/142** Wall Thickness Compensator

WDA MX or filler timber supplied by contractor ≤ 10 cm


**150/158** Outside Corner MXA 270/330 x 35

**152/160** Inside Corner MXI 18,  
270/330 x 60

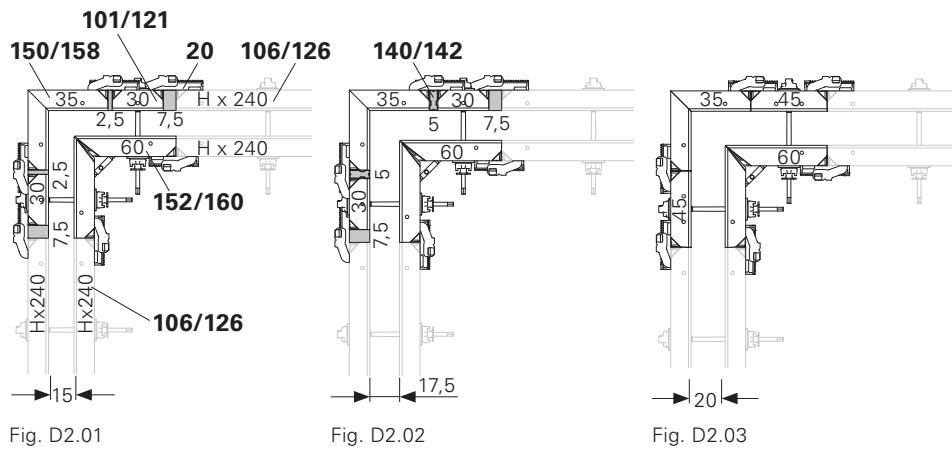

#### Examples

- Wall thickness 15:  
Fig. D2.01 + D1.06a/c + D2.06b/d
- Wall thickness 17.5:  
Fig. D2.02 + D1.06a/c + D2.06b/d
- Wall thickness 20:  
Fig. D2.03 + D1.06a/c + D2.06b/d
- Wall thickness 24 / 25:  
Fig. D2.04 + D1.06a/c + D2.06b/d
- Wall thickness 30:  
Fig. D2.05 + D1.06a/c + D2.06b/d

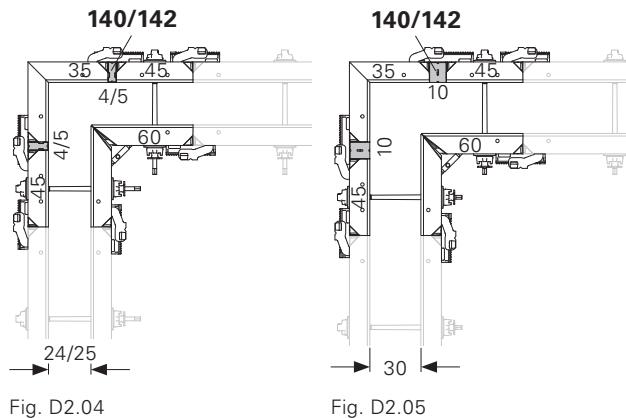

#### Compensations

Wall thickness 15 + 17.5 cm:

external compensation

Wall thickness 20 cm:

without compensation

Wall thickness 24 + 25 + 30 cm:

external compensation

## Wall Thicknesses 30 – 40 cm

Height 2.70 m or 3.30 m

### Outside Corner MXA 270/330 x 45



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

#### Components

**20** Alignment Coupler BFD


**106/126** Panel MX 18, 270/330 x 240

**140/142** Wall Thickness Compensator

WDA MX or filler timber supplied by contractor ≤ 10 cm

**151/159** Outside Corner MXA 270/330 x 45

**152/160** Inside Corner MXI 18,  
270/330 x 60

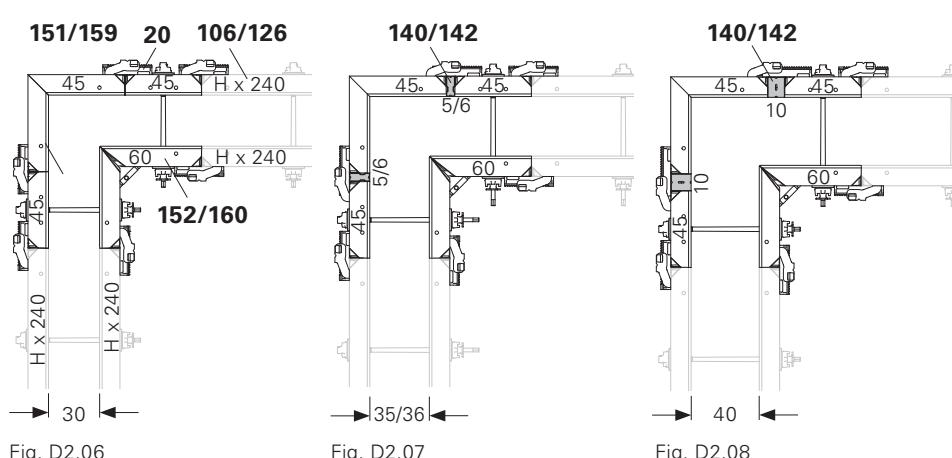

#### Examples

- Wall thickness 30:  
Fig. D2.06 + D1.06a/c + D2.06b/d
- Wall thickness 35 / 36:  
Fig. D2.07 + D1.06a/c + D2.06b/d
- Wall thickness 40:  
Fig. D2.08 + D1.06a/c + D2.06b/d

#### Compensations

- Wall thickness 30 cm:  
without compensation
- Wall thickness 35 + 40 cm:  
external compensation

# D290° Corners with Inside Corner MXA 18, 270/330 x 60

**Arrangement of the Alignment Couplers  
Outside Corner MXA height x 45 / ... x 35**

**Height 270 cm**  
(Fig. D2.06a + D2.06b)

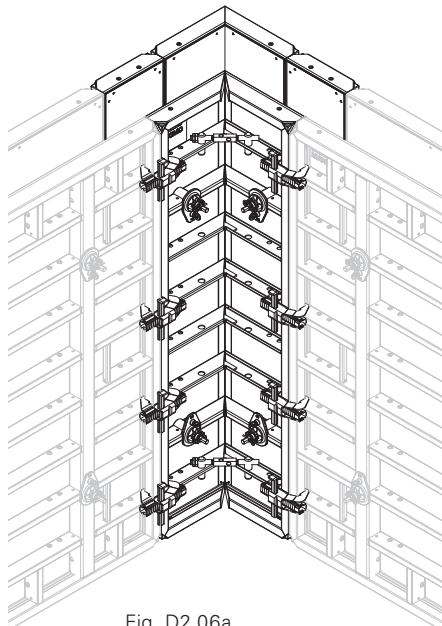


Fig. D2.06a

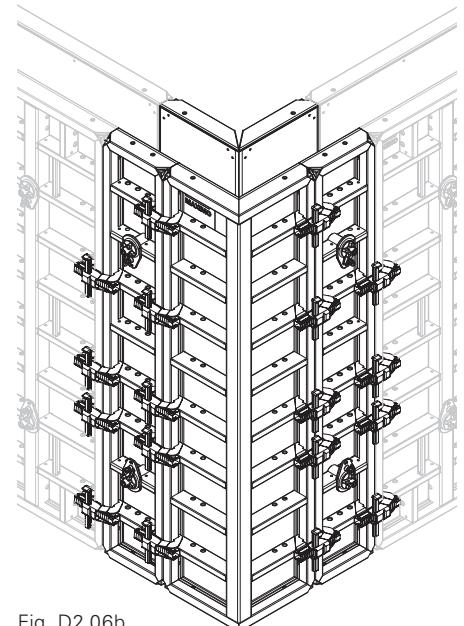


Fig. D2.06b

**Height 330 cm**  
(Fig. D2.06c + D2.06d)

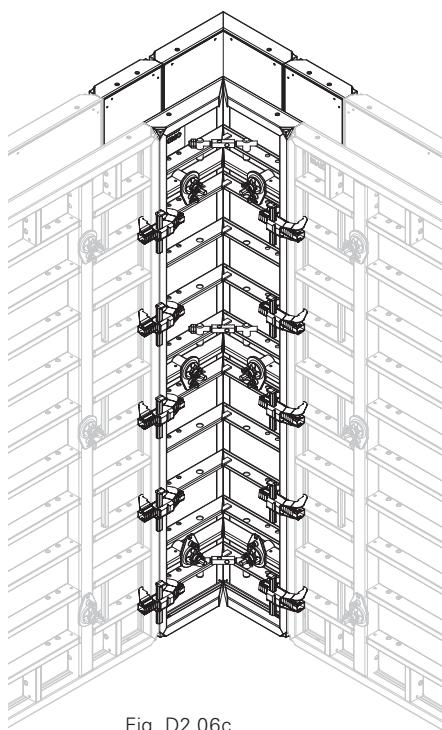


Fig. D2.06c

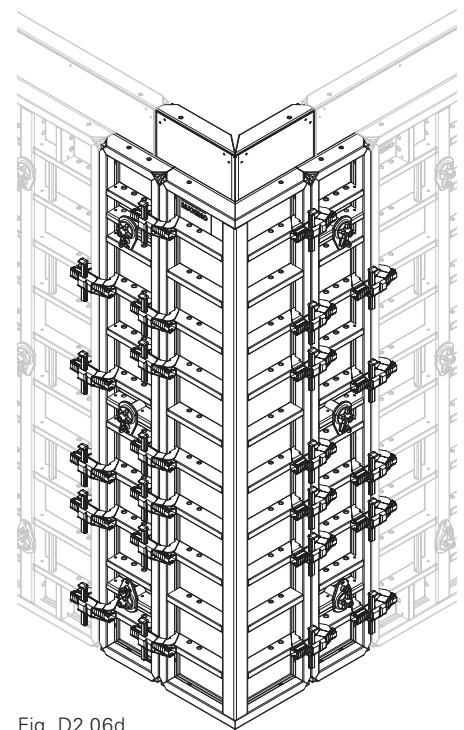


Fig. D2.06d

# D290° Corners with Inside Corner MXI 18, 270/330 x 60

**PERI**

**Wall Thicknesses > 40 – 60 cm**

Height (H) 2.70 m / 3.30 m

**Outside Corner MXA 270/330 x 45**



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

## Components

<b>20</b>	Alignment Coupler BFD
<b>21</b>	Compensation Waler MAR 85-3
<b>22</b>	Compensation Waler MAR 170-3
<b>100/120</b>	Panel MXM 18, 270/330 x 60
<b>101/121</b>	Panel MX 18, 270/330 x 30
<b>102/122</b>	Panel MX 18, 270/330 x 45
<b>106/126</b>	Panel MX 18, 270/330 x 240
<b>140/142</b>	Wall Thickness Compensator WDA MX or filler timber supplied by contractor ≤ 10 cm
<b>152/160</b>	Inside Corner MXI 18, 270/330 x 60

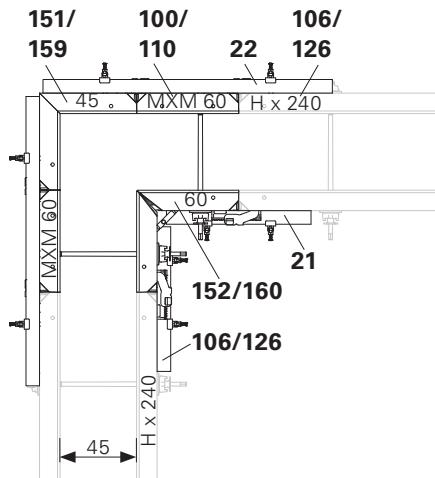


Fig. D2.09

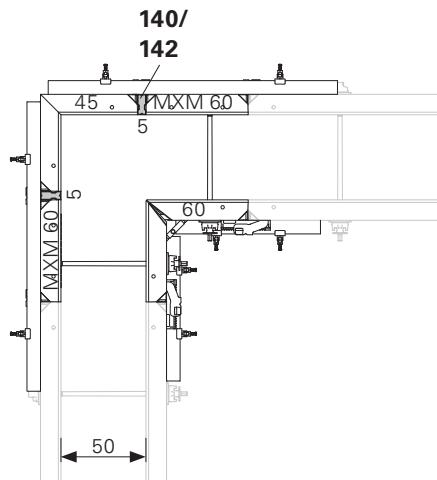


Fig. D2.10

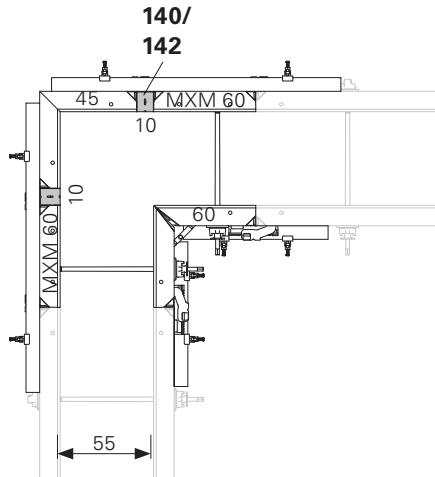


Fig. D2.11

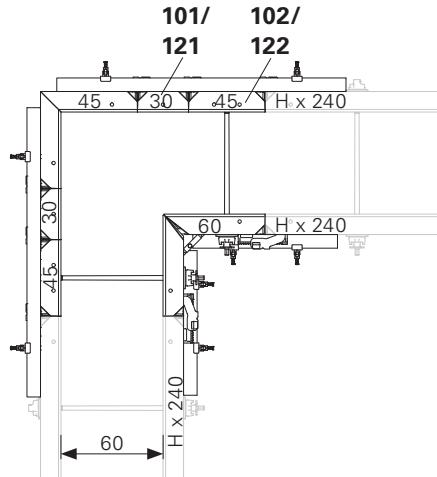


Fig. D2.12

## Examples

- Wall thickness 45:  
Fig. D2.09 + D2.09a/c + D2.09b/d
- Wall thickness 50:  
Fig. D2.10 + D2.09a/c + D2.09b/d
- Wall thickness 55:  
Fig. D2.11 + D2.09a/c + D2.09b/d
- Wall thickness 60:  
Fig. D2.12 + D2.09a/c + D2.09b/d

## Compensations

Wall thickness:

without compensation

Wall thickness 50 + 55 cm:

external compensation

Wall thickness 60 cm:



without compensation

# D290° Corners with Inside Corner MXI 18, 270/330 x 60



PERI

## Arrangement of the Alignment Couplers and Compensation Walers

**Height 270 cm**  
(Fig. D2.09a + D2.09b)

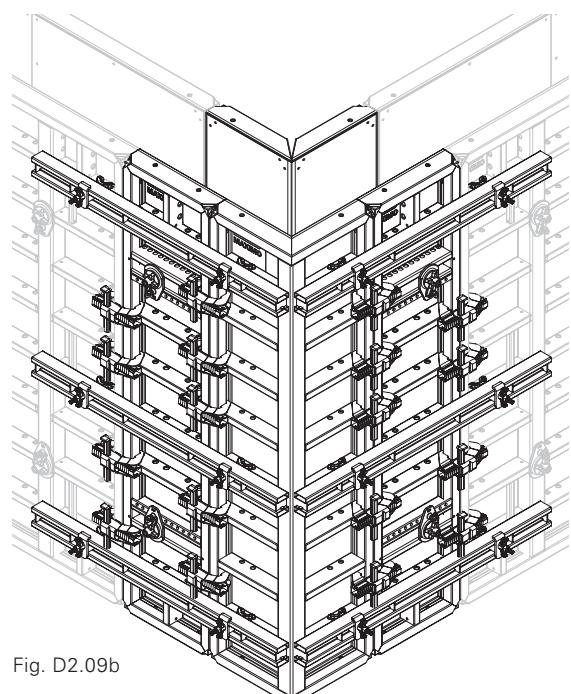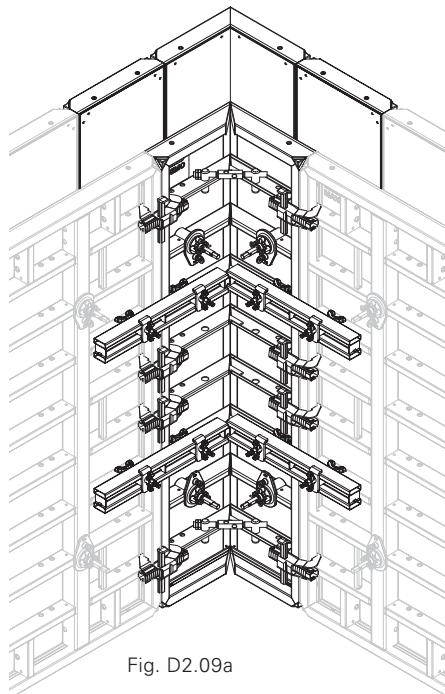

**Height 330 cm**  
(Fig. D2.09c + D2.09d)

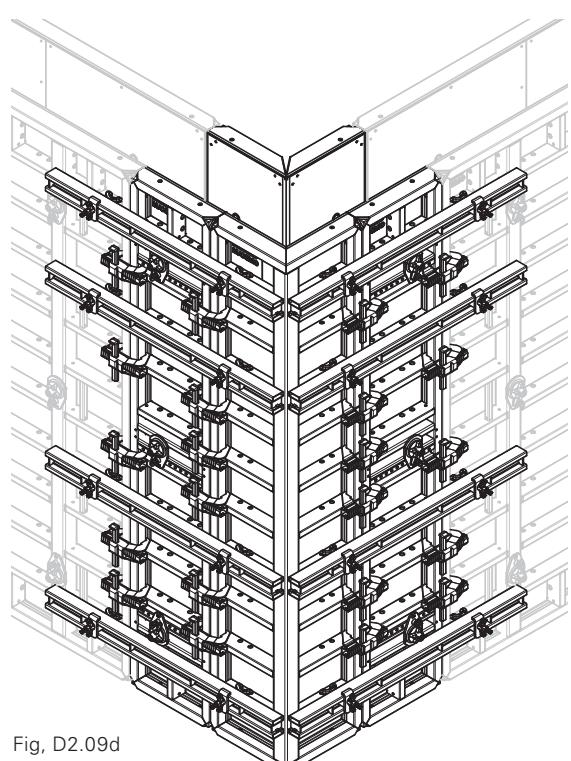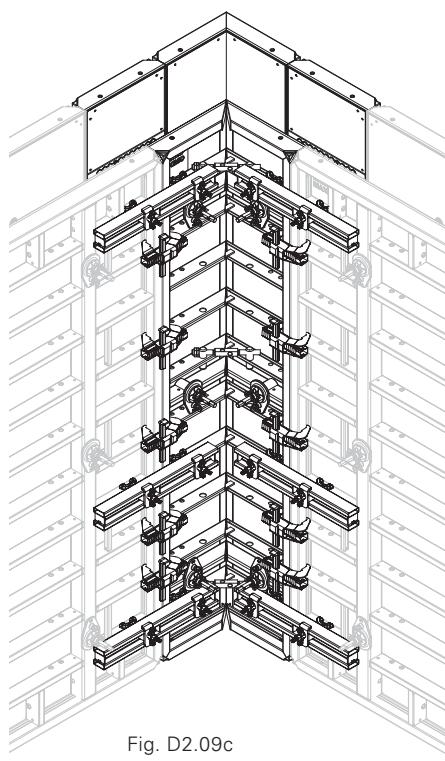

# D3 90° T-junctions with Inside Corner MXI 18, 270/330 x 60

**PERI**

**Wall Thicknesses 15 – 40 cm**  
Height (H) 2.70 m or 3.30 m



Perm. fresh concrete pressure: 80 kN/m<sup>2</sup>

## Components

- 20** Alignment Coupler BFD
- 22** Compensation Waler MAR 170-3
- 102/122** Panel MX 18, 270/330 x 45
- 103/123** Panel MX 18, 270/330 x 60
- 106/126** Panel MX 18, 270/330 x 240
- 140/142** Wall Thickness Compensator  
WDA MX 270/330 or filler timber supplied by contractor ≤10 cm
- 152/160** Inside Corner MXI 18, 270/330 x 60

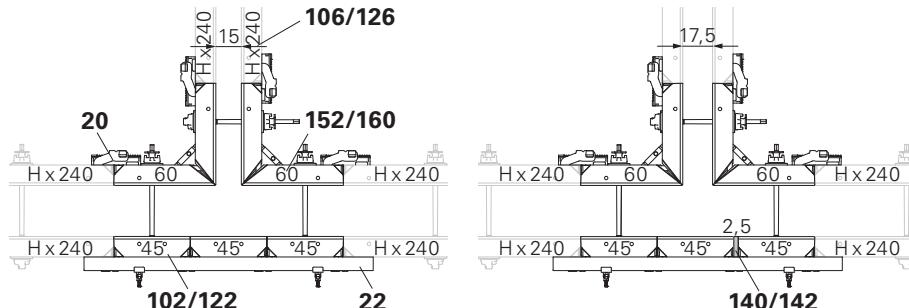


Fig. D3.01

Fig. D3.02

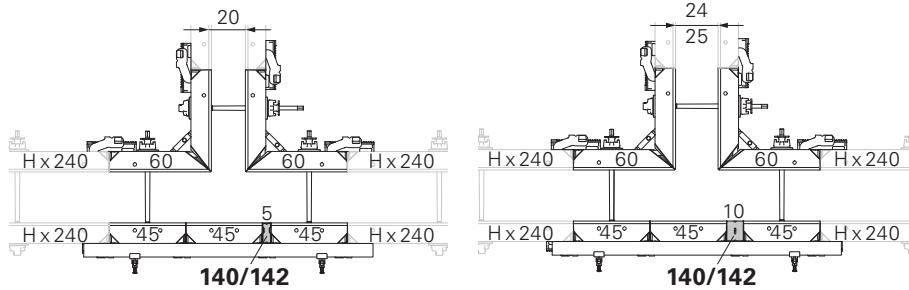


Fig. D3.03

Fig. D3.04

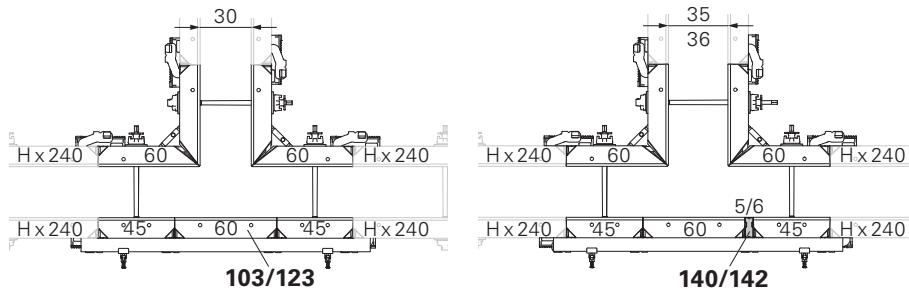


Fig. D3.05

Fig. D3.06

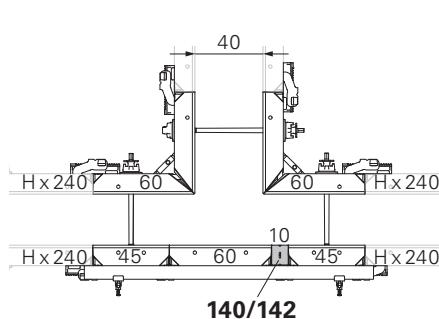


Fig. D3.07

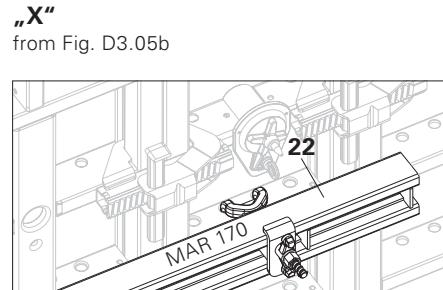


Fig. D3.08



With two Wall Thickness Compensators WDA MX (not shown): install one WDA MX each on the right and left of the middle panel.



Attach the double hook of the Compensation Waler to the middle holes.  
(Fig. D3.08)


## Examples

- Wall thickness 15:  
Fig. D3.01 + D3.05a/c + D3.05b/d
- Wall thickness 17.5:  
Fig. D3.02 + D3.05a/c + D3.05b/d
- Wall thickness 20:  
Fig. D3.03 + D3.05a/c + D3.05b/d
- Wall thickness 24/25:  
Fig. D3.04 + D3.05a/c + D3.05b/d
- Wall thickness 30:  
Fig. D3.05 + D3.05a/c + D3.05b/d
- Wall thickness 35/36:  
Fig. D3.06 + D3.05a/c + D3.05b/d
- Wall thickness 40:  
Fig. D3.07 + D3.05a/c + D3.05b/d

## Compensations

- Wall thickness 15 + 30 cm:  
without compensation
- Wall thickness 17.5 + 20 + 24 + 25 +  
wall thickness 35 + 36 + 40 cm:  
external compensation


**X**  
from Fig. D3.05b

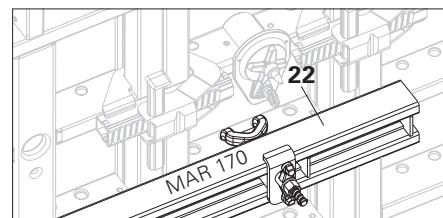


# D3 90° T-junctions with Inside Corner MXA height x 45 /... x 35

**Arrangement of the Alignment Couplers  
Outside Corner MXA height x 45 /... x 35**

**Height 270 cm**  
(Fig. D3.05a + D3.05b)

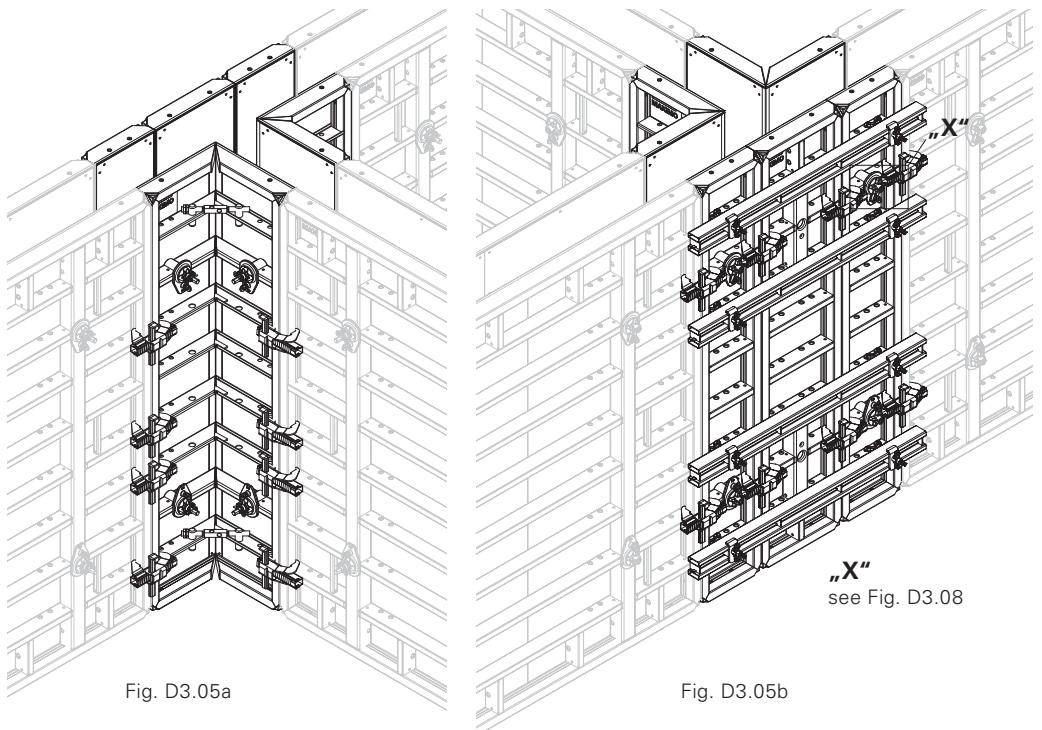

**Height 330 cm**  
(Fig. D3.05c + D3.05d)

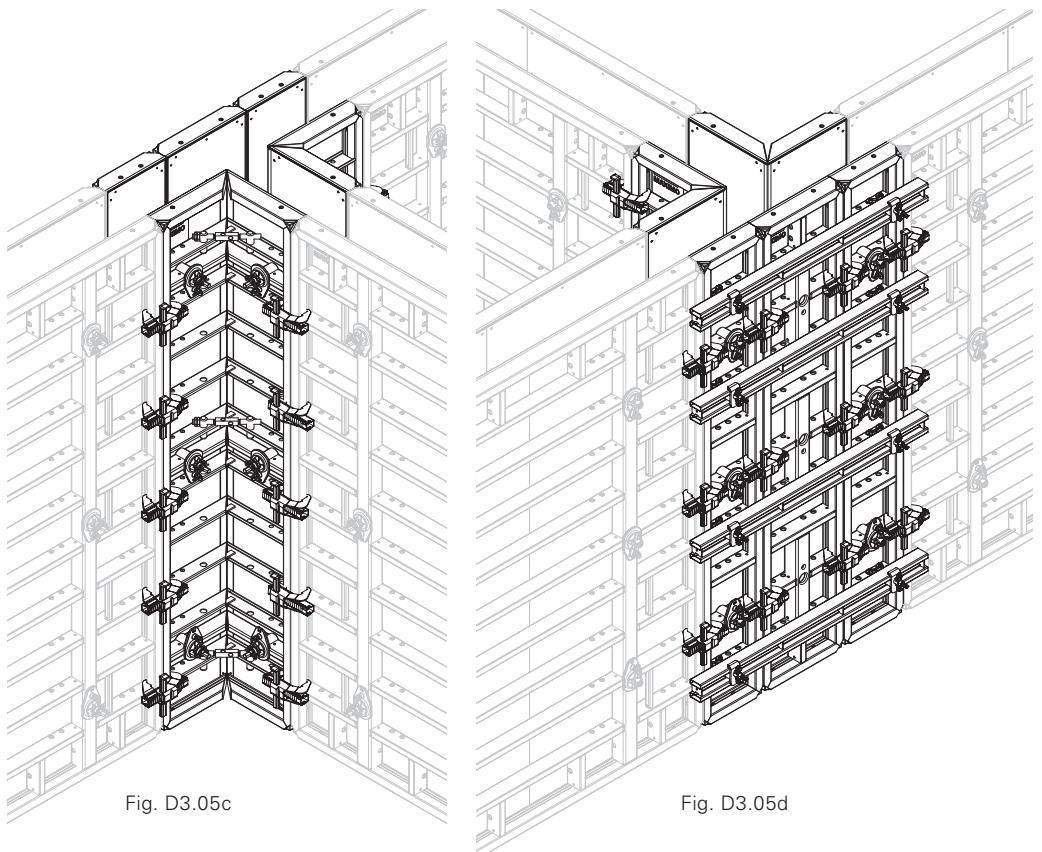

# D3 90° T-junctions with Inside Corner MXI 18, 270/330 x 60

**PERI**

**Wall Thicknesses > 40 – 60 cm**  
Height (H) 2.70 m or 3.30 m



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

## Components

<b>20</b>	Alignment Coupler BFD
<b>23</b>	Wingnut Pivot Plate DW 15
<b>25</b>	Tie Rod DW 15
<b>29</b>	Steel Waler SRU 197 U120
<b>102/122</b>	Panel MX 18, 270/330 x 45
<b>103/123</b>	Panel MX 18, 270/330 x 60
<b>106/126</b>	Panel MX 18, 270/330 x 240
<b>140/142</b>	Wall Thickness Compensator WDA MX 270/330 or filler timber supplied by contractor ≤ 10 cm
<b>152/160</b>	Inside Corner MXI 18, 270/330 x 60

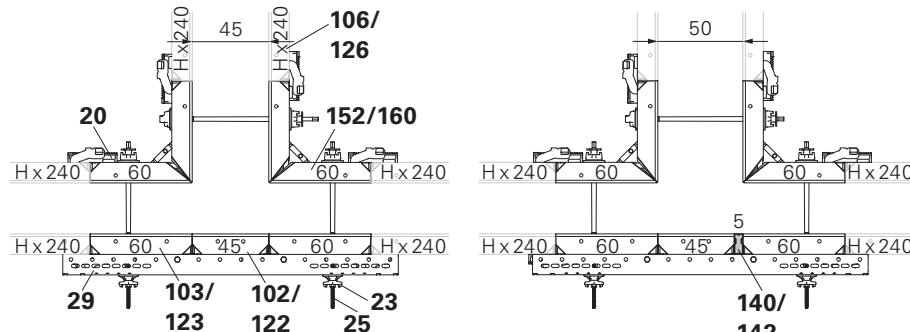


Fig. D3.09

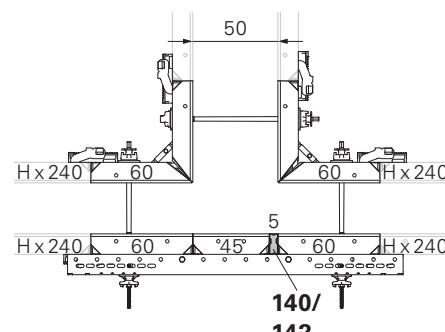


Fig. D3.10

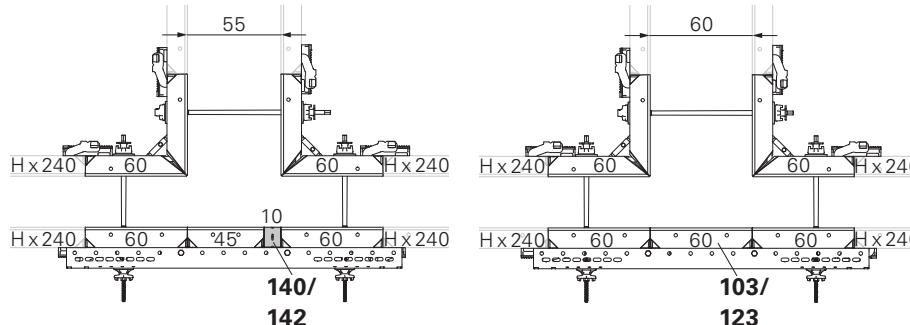


Fig. D3.11

Fig. D3.12

## Assembly

1. Form T-junction with Inside Corner MXI 18, H x 60 (152/160).
2. Form the opposite straight wall with Panel MX 18, H x 45 (102/122) or MX 18, H x 60 (103/123).
3. Install one Panel MX 18, H x 60 (103/123) each on the right and left.
4. Install Wall Thickness Compensator (140/142) – according to the wall thickness, if necessary.
5. On the straight wall, install the Steel Waler (25) with Hook Tie (24) and Wingnut Pivot Plate (23) centrally to the T-junction.

## Examples

- Wall thickness 45:  
Fig. D3.09 + D3.09a/c + D3.09b/d
- Wall thickness 50:  
Fig. D3.10 + D3.09a/c + D3.09b/d
- Wall thickness 55:  
Fig. D3.11 + D3.09a/c + D3.09b/d
- Wall thickness 60:  
Fig. D3.12 + D3.09a/c + D3.09b/d

## Compensations

Wall thickness 45 cm + 60 cm:  
without compensation  
Wall thickness 50 cm + 55 cm:  
external compensation



With two Wall Thickness Compensators WDA MX (not shown):  
install one WDA MX each on the right and left of the middle panel.

# D3 90° T-junctions with Inside Corner MXA height x 45 /... x 35

**Arrangement of the Alignment Couplers  
Outside Corner MXA height x 45 /... x 35**

**Height 270 cm**  
(Fig. D3.09a + D3.09b)

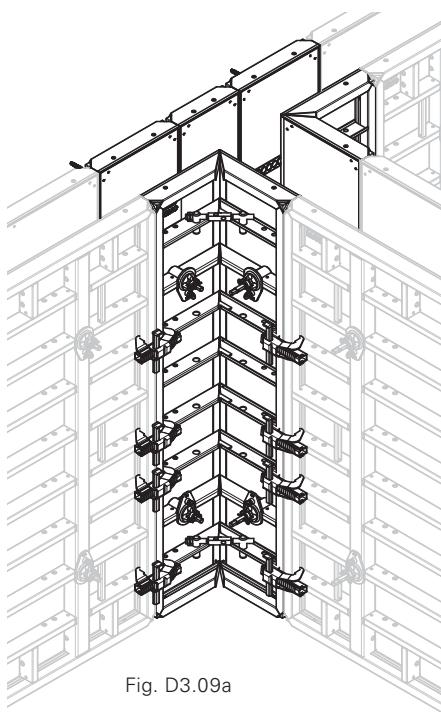


Fig. D3.09a

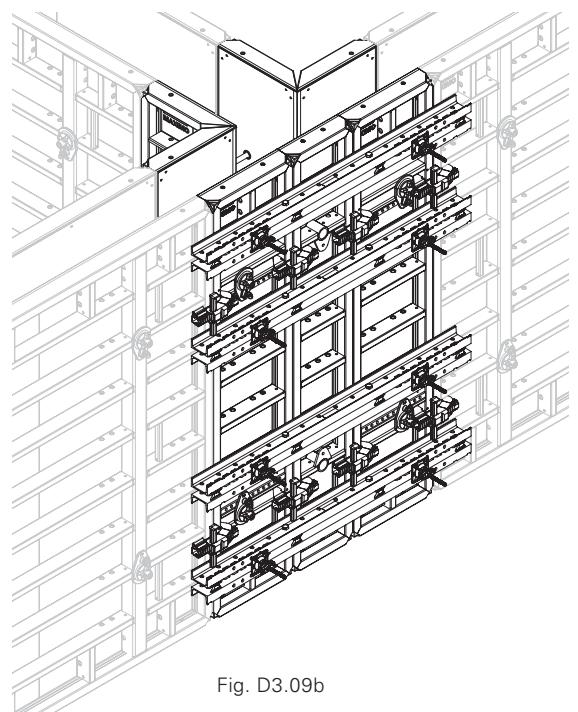


Fig. D3.09b

**Height 330 cm**  
(Fig. D3.09c + D3.09d)

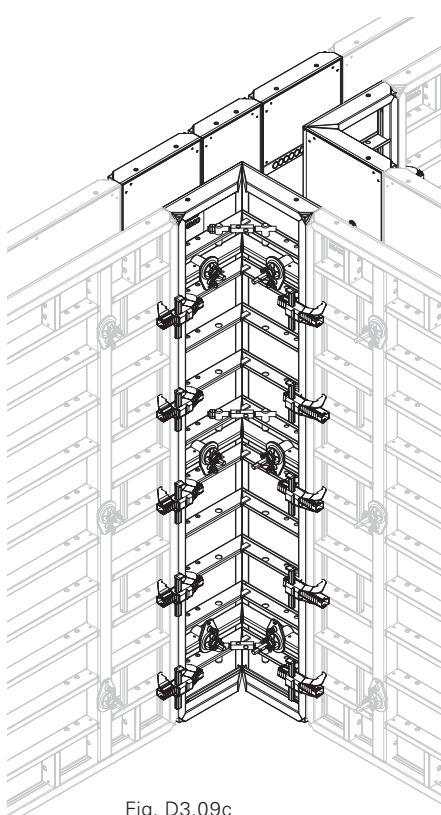


Fig. D3.09c

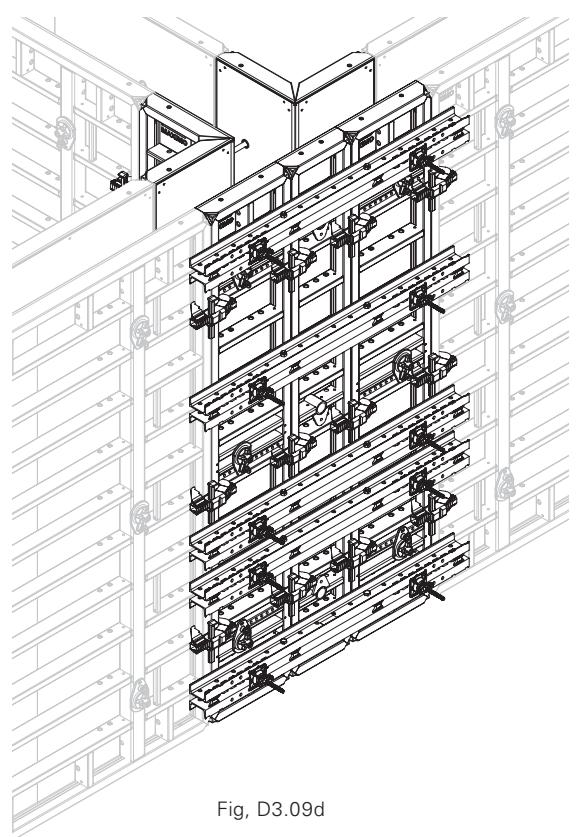


Fig. D3.09d

# D4 90° Corners for 80 cm Wall Thickness

PERI

## Inside Corner MXI 18,

270/330 x 50/20

Outside Corner MXA 18, 270/330 x 45



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

**19** Waler Stop

**20** Alignment Coupler BFD

**23** Wingnut Pivot Plate DW 15

**24** Hook Tie DW 15/400

**25** Tie Rod DW 15

**29** Steel Waler SRU 247 U120

**36** Tie Rod DW 20

**37** Spacer Tube DR 28

**38** DK Sealing Cone DW 30/55

**39** Wingnut Pivot Plate DW 20

**44** Wingnut DW 15

**48** Wedge KZ

**49** Tie Yoke SW

**101/121** Panel MX 18, 270/330 x 30

**102/122** Panel MX 18, 270/330 x 45

**103/123** Panel MX 18, 270/330 x 60

**106/126** Panel MX 18, 270/330 x 240

**140/142** Wall Thickness Compensator  
WDA MX 270/330 or filler timber  
supplied by contractor ≤ 10 cm

**151/159** Outside Corner MXA 18,  
270/330 x 45

**153/161** Inside Corner MXI 18,  
270/330 x 60

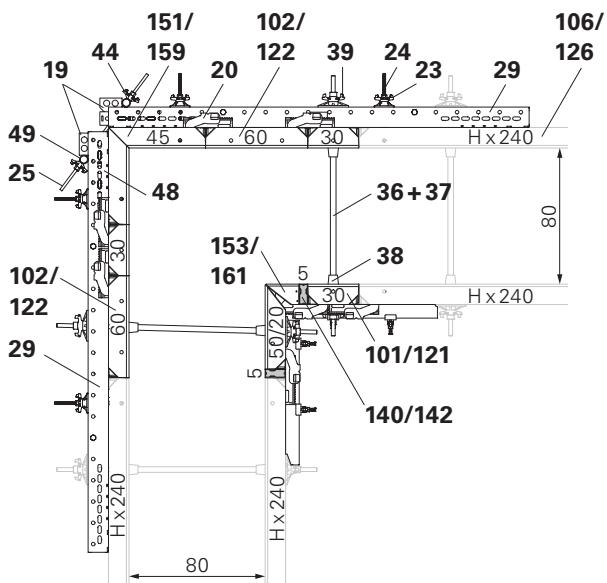


Fig. D4.01

### Examples

- Wall thickness 80 / Height 270:

Fig. D4.01 + D4.01a + D4.01b.

- Wall thickness 80 / Height 330:

Fig. D4.01 + D4.01c + D4.01d.

# D4 90° Corners for 80 cm Wall Thickness

PERI

## Arrangement of the Alignment Couples and Steel Walers

**Height 270 cm**

(Fig. D4.01a + D4.01b)

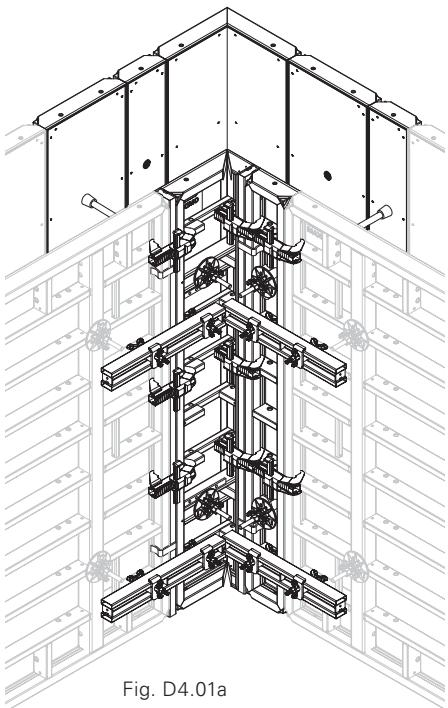


Fig. D4.01a

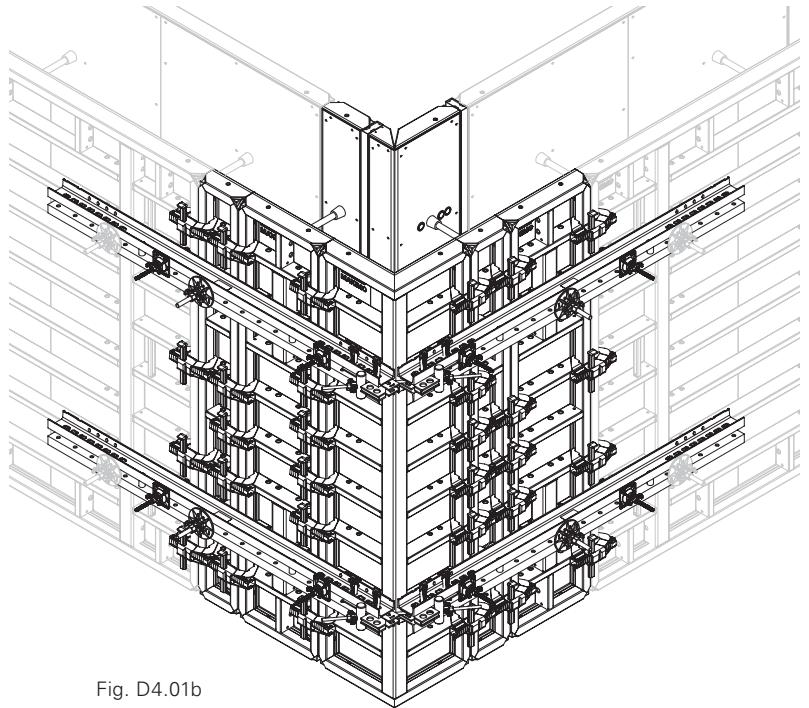


Fig. D4.01b

**Height 330 cm**

(Fig. D4.01c + D4.01d)

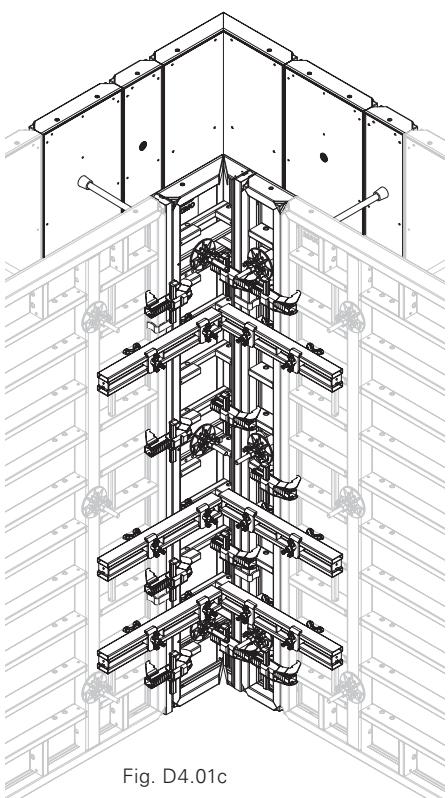


Fig. D4.01c

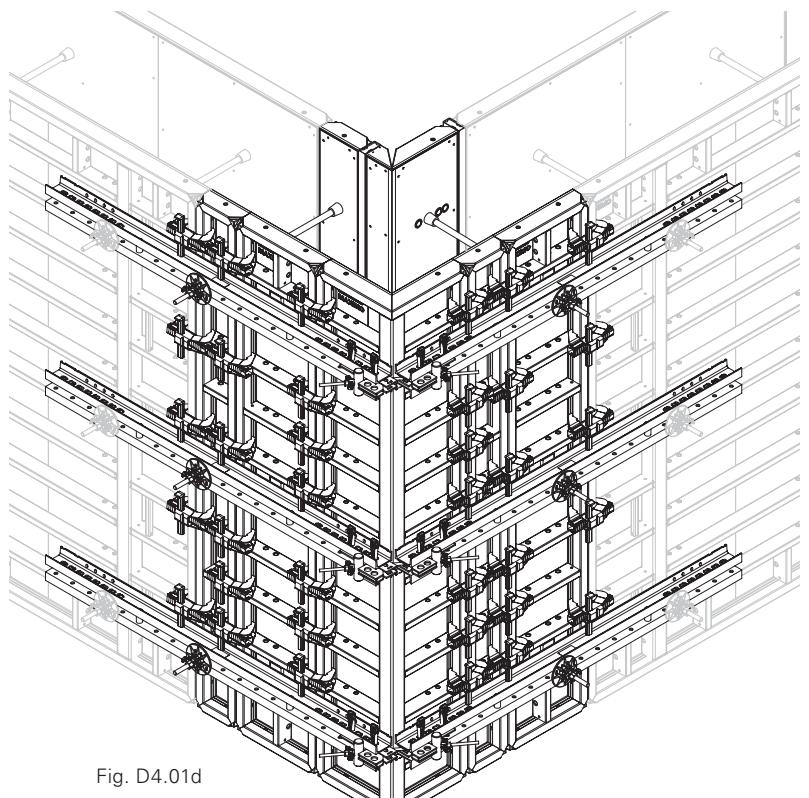


Fig. D4.01d

# D4 90° Corners for 80 cm Wall Thickness

PERI

## Inside Corner MXI 18,

270/330 x 60

Outside Corner MXA 18, 270/330 x 45



Perm. fresh concrete pressure: 60 kN/m<sup>2</sup>

### Components

**19** Waler Stop

**20** Alignment Coupler BFD

**23** Wingnut Pivot Plate DW 15

**24** Hook Tie DW 15/400

**25** Tie Rod DW 15

**29** Steel Waler SRU 247 U120

**36** Tie Rod DW 20

**37** Spacer Tube DR 28

**38** DK Sealing Cone DW 30/55

**39** Wingnut Pivot Plate DW 20

**44** Wingnut DW 15

**48** Wedge KZ

**49** Tie Yoke SW

**102/122** Panel MX 18, 270/330 x 45

**103/123** Panel MX 18, 270/330 x 60

**106/126** Panel MX 18, 270/330 x 240

**140/142** Wall Thickness Compensator

WDA MX 270/330 or filler timber  
supplied by contractor ≤ 10 cm

**151/159** Outside Corner MXA 18,

270/330 x 45

**153/161** Inside Corner MXI 18,

270/330 x 60

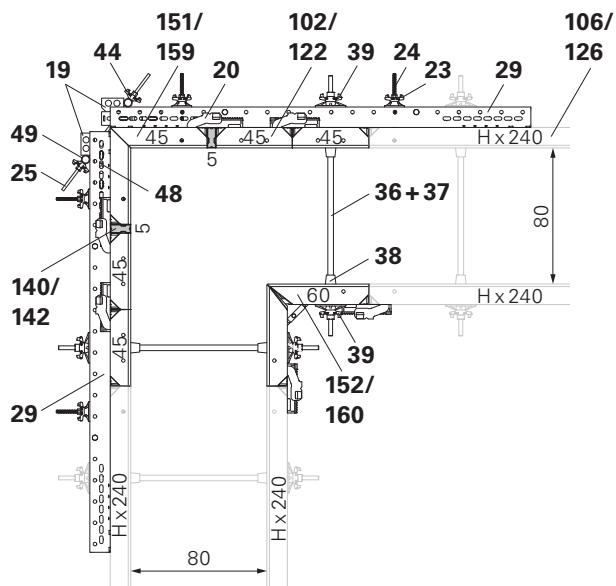


Abb. D4.02

### Examples

- Wall thickness 80 / Height 270:

Fig. D4.02 + D4.02a + D4.02b.

- Wall thickness 80 / Height 330:

Fig. D4.02 + D4.02c + D4.02d.

# D4 90° Corners for 80 cm Wall Thickness

PERI

## Arrangement of the Alignment Cougplers and Steel Walers

**Height 270 cm**

(Fig. D4.02a + D4.02b)

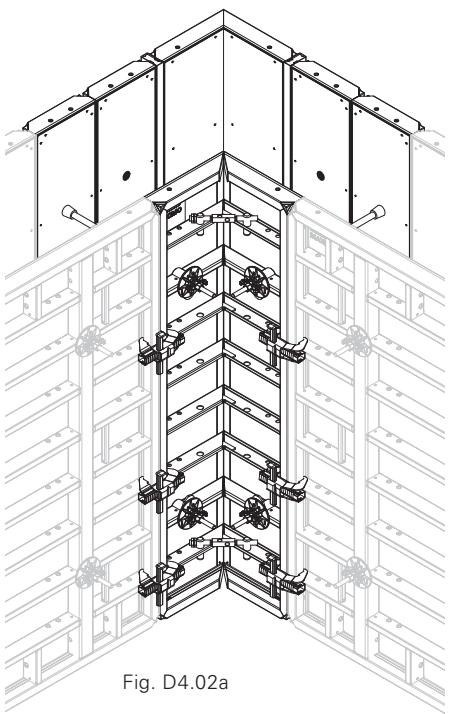


Fig. D4.02a

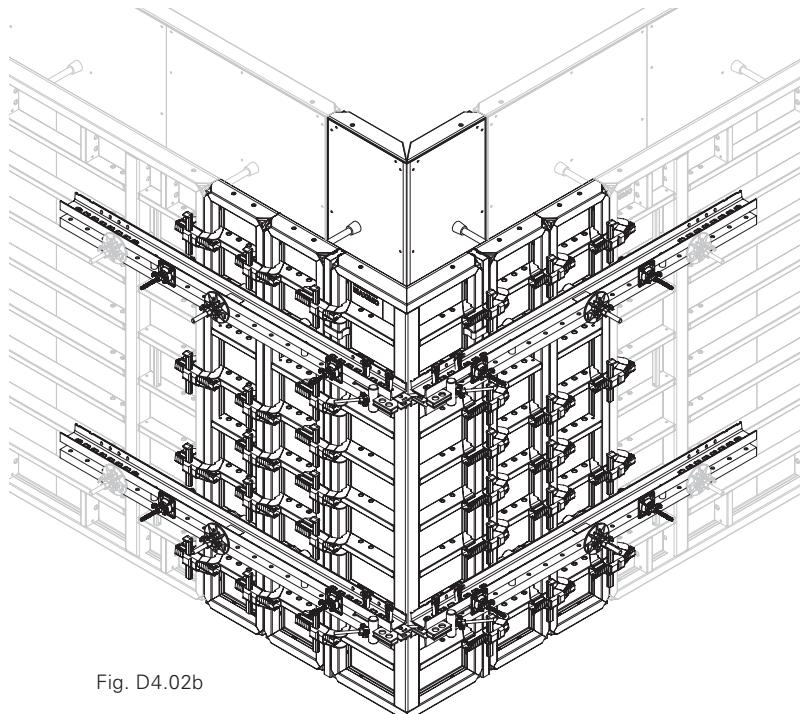


Fig. D4.02b

**Height 330 cm**

(Fig. D4.02c + D4.02d)

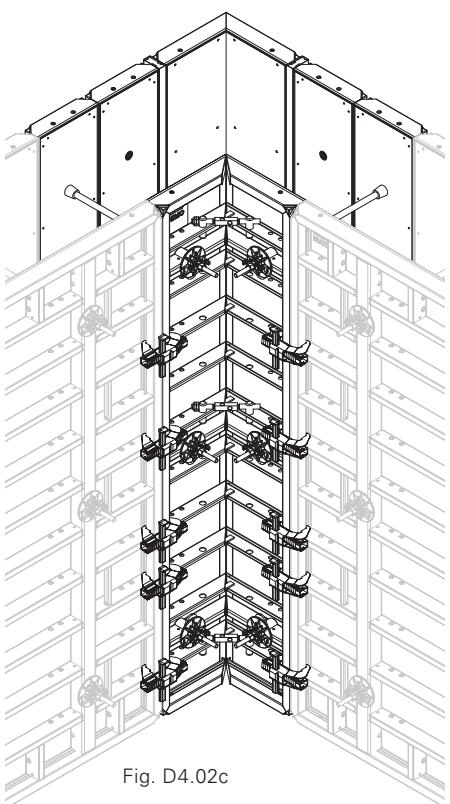


Fig. D4.02c

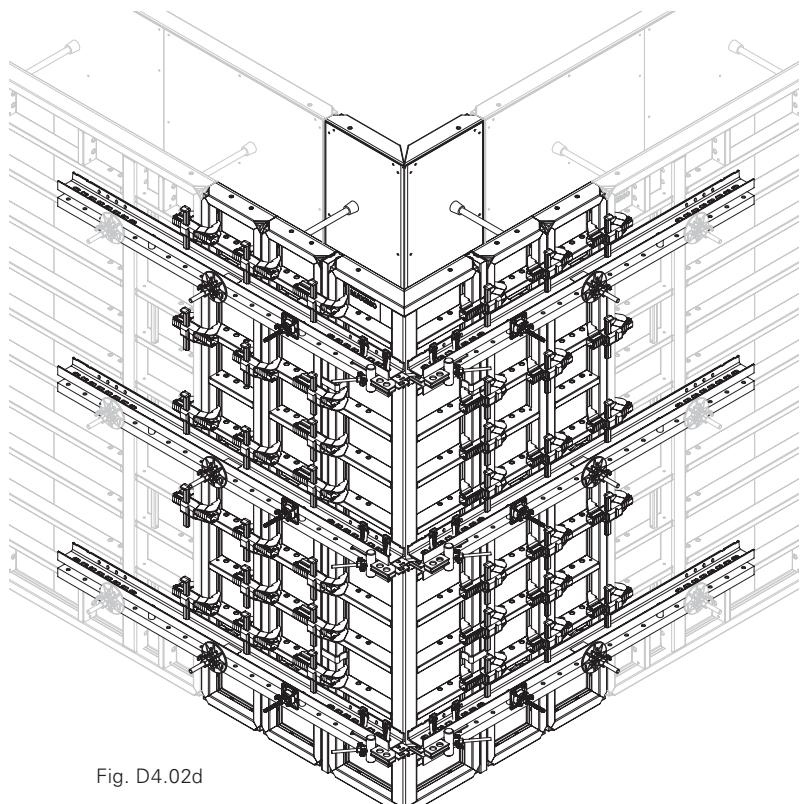


Fig. D4.02d

## Shaft Corner MXSE 18



**Not permissible for other formwork systems!**

### Panel heights

Four panel heights allow fast striking and moving of the shaft formwork.

- 1.20 m (Fig. D5.01a)
- 2.70 m (Fig. D5.01b)
- 3.30 m (Fig. D5.01c)

### Components

**80** Shaft Corner MXSE 18, height

**80.1** Tie Point

**80.2** Load-bearing point 2 t

**80.3** Bolts and cotter pins

**80.4** Openings for shuttering and striking

**80.5** Positioning Waler MXSE

**81** Shaft Corner MXSE 18, 120

**82** Shaft Corner MXSE 18, 270

**84** Shaft Corner MXSE 18, 330



Horizontally pre-assemble the shaft formwork.

(Fig. D5.02a + D5.03a)

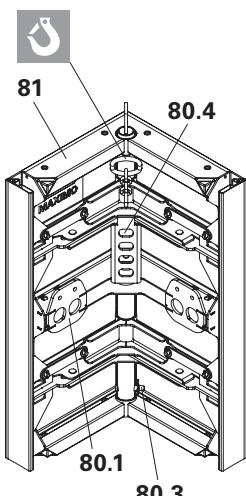


Fig. D5.01a

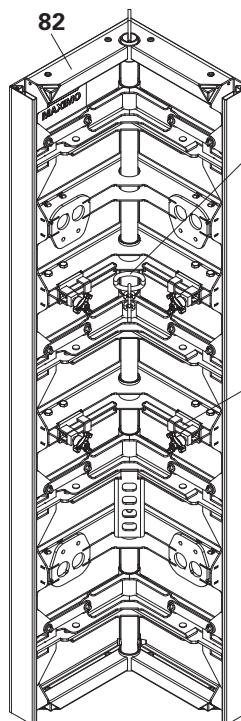


Fig. D5.01b

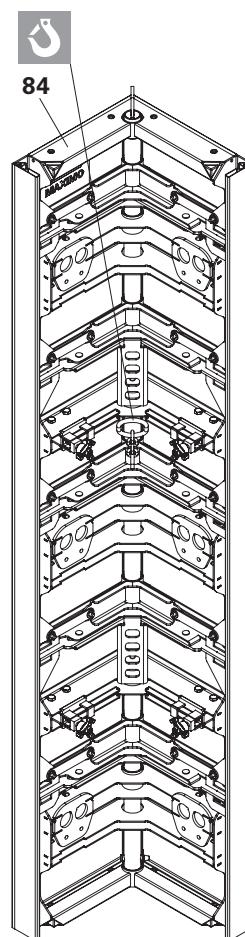


Fig. D5.01c

# D5 Shaft Formwork

PERI

## Crane lifting gear

### Lifting Hook MAXIMO 1.5 t

For use with:

two Shaft Corners MXSE 18,  
height 270/330 (82/84) and  
two Inside Corners MXI 18,  
height 270/330 x 50/20 (153/161).



- Perm. load-bearing capacity of the lifting hook: 1.5 t.
- Take into consideration Instructions for Use for the Lifting Hook MAXIMO 1.5 t!

#### Components

153/ Inside Corner MXI 18,	2x
161 270/330 x 50/20	
82/84 Shaft Corner MXSE 18,	2x
270/330	

16 Lifting Hook MAXIMO 1.5 t	2x
------------------------------	----

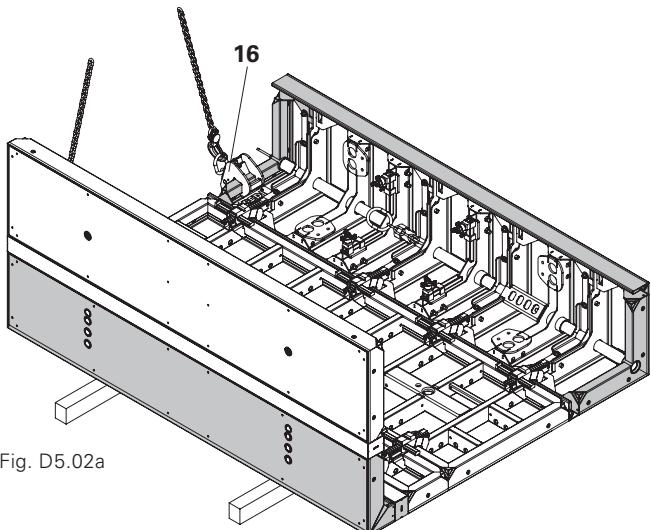


Fig. D5.02a

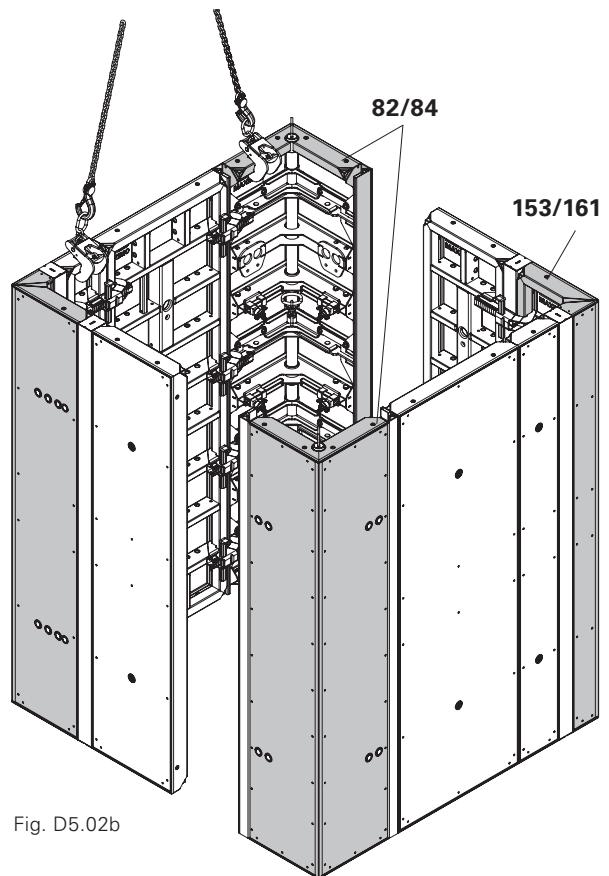


Fig. D5.02b

### Lifting Gear Combi MX

For use with:

four Shaft Corners MXSE 18,  
height 270/330 (82/84).



- Perm. load capacity of the load-bearing points: 2 t.
- Take into consideration Instructions for Use for the Lifting Gear Combi MX!

#### Components

82/84 Shaft Corner MXSE 18,	4x
270/330	
15 Lifting Gear Combi MX	1x

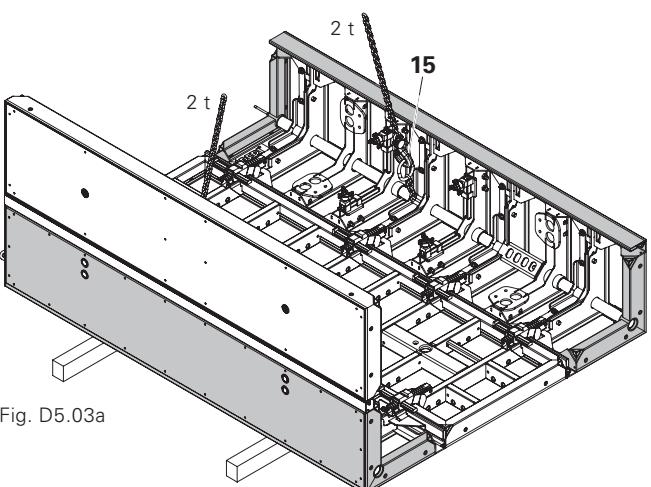


Fig. D5.03a

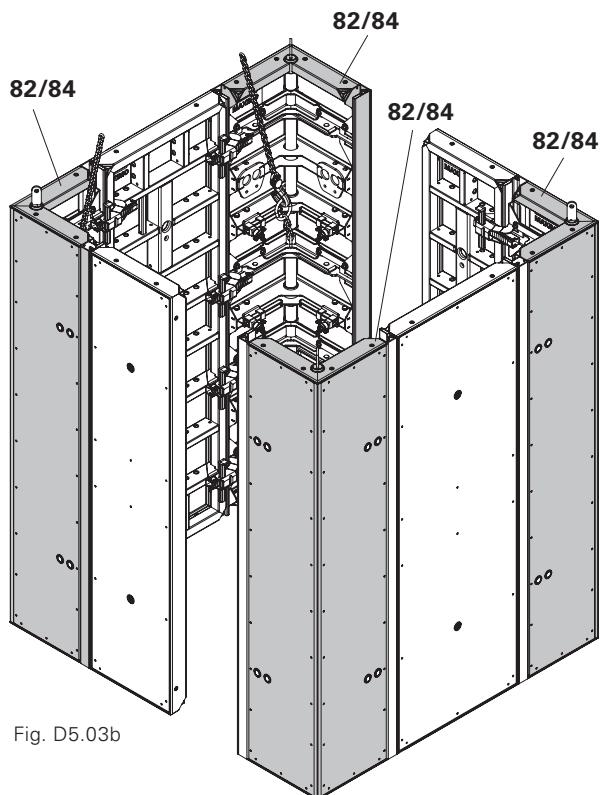


Fig. D5.03b

## Shaft Corner MXSE 18, 270

**Two Shaft Corners MXSE 18, 270  
and  
two Inside Corners MXI 18, 270 x 50/20**

**Height 270 cm**

### Corners of the inner shaft wall Components

<b>20</b>	Alignment Coupler BFD
<b>82</b>	Shaft Corner MXSE 18, 270
<b>153</b>	Inside Corner MXI 18, 270 x 50/20

<b>101/102</b>	/ Panel MX 18,
<b>103/104</b>	270 x 30/45/60/90

### Arrangement of the Alignment Cougplers BFD

Shown:

- Shaft dimensions: 2.30 m x 2.60 m.
  - Wall thickness 25 cm.
- (Fig. D5.04)

Shaft Corner MXSE 18, 270 (82).  
(Fig. D5.04a)

Inside Corner MXI 18, 270 x 50/20 (153).  
(Fig. D5.04b)

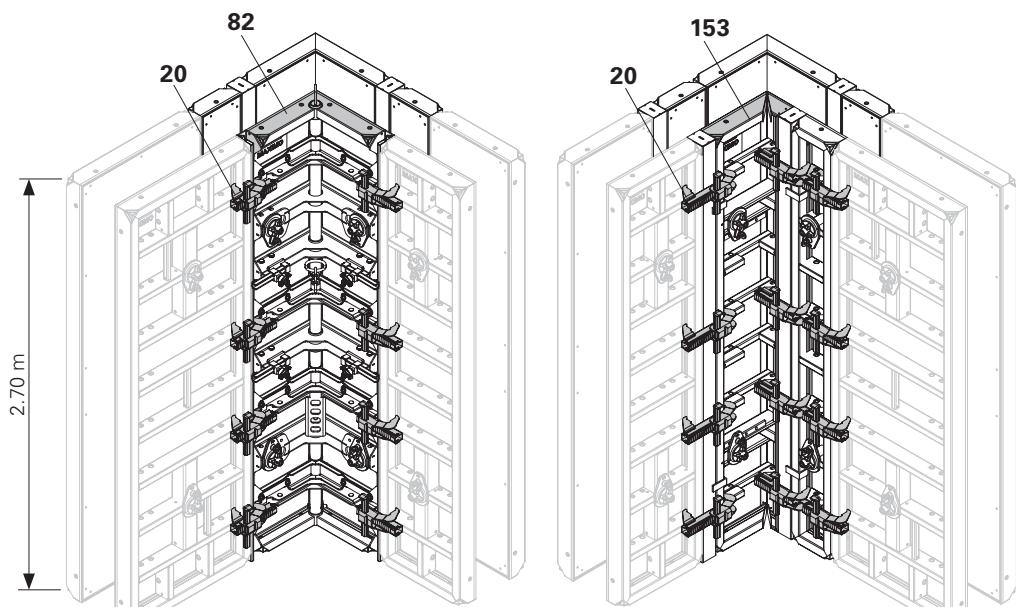
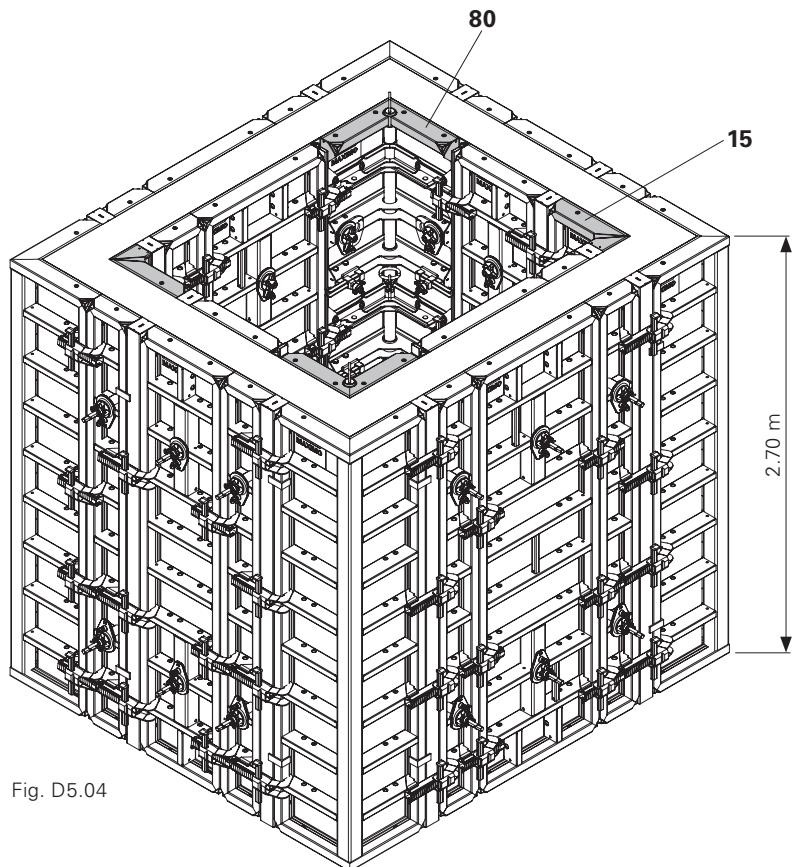


Fig. D5.04a

Fig. D5.04b

# D5 Shaft Formwork

PERI

**Four Shaft Corners MXSE 18, 270**

**Height 270 cm**

**Corners of the inner shaft wall  
Components**

**20** Alignment Coupler BFD  
**82** Shaft Corner MXSE 18, 270  
**104/** Panel MX 18,  
**105/106** 270 x 90/120/240

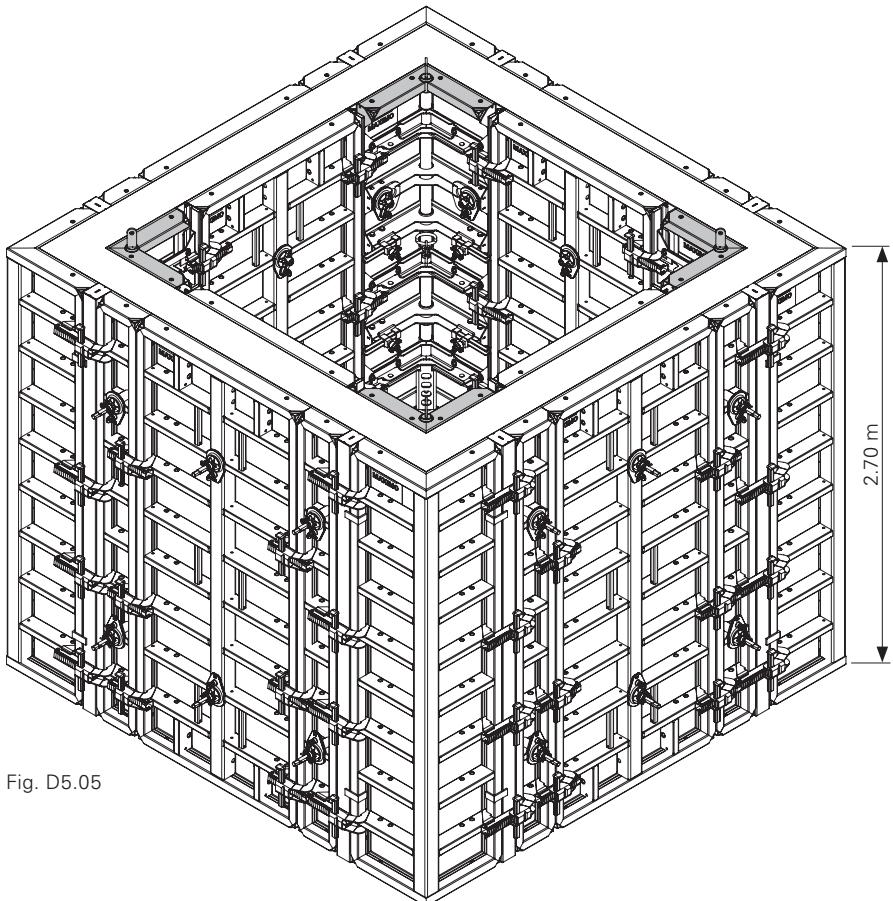


Fig. D5.05

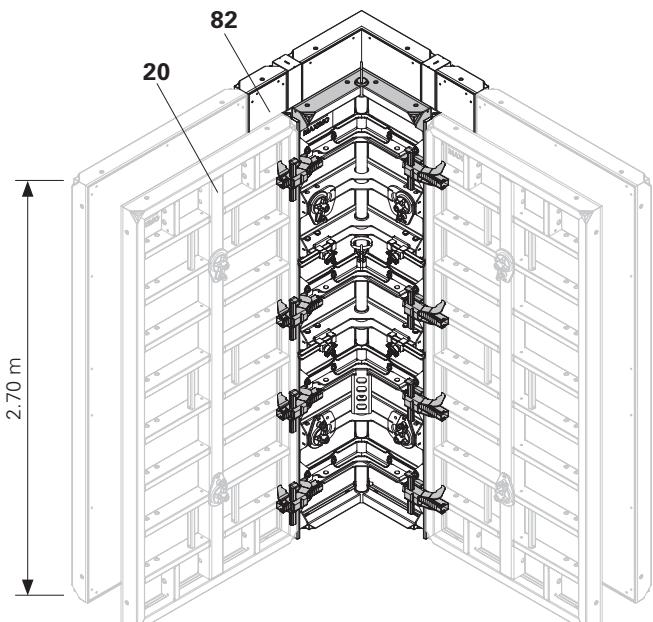


Fig. D5.05a

**MAXIMO MX 18 Panel Formwork 270**

Instructions for Assembly and Use – Standard Configuration

## Shaft Corner MXSE 18, 330

**Two Shaft Corners MXSE 18, 330  
and  
two Inside Corners MXI 18, 330 x 50/20**

**Height 330 cm**

### Corners of the inner shaft wall Components

<b>20</b>	Alignment Coupler BFD
<b>84</b>	Shaft Corner MXSE 18, 330
<b>161</b>	Inside Corner MXI 18, 330 x 50/20
<b>121/122</b>	/ Panel MX 18,
<b>123/124</b>	330 x 30/45/60/90



### Arrangement of the Alignment Cougplers BFD

Shown:

- Shaft dimensions: 2.30 m x 2.60 m.
  - Wall thickness 25 cm.
- (Fig. D5.06)

Shaft Corner MXSE 18, 330 (84).  
(Fig. D5.06a)

Inside Corner MXI 18, 330 x 50/20 (161).  
(Fig. D5.06b)

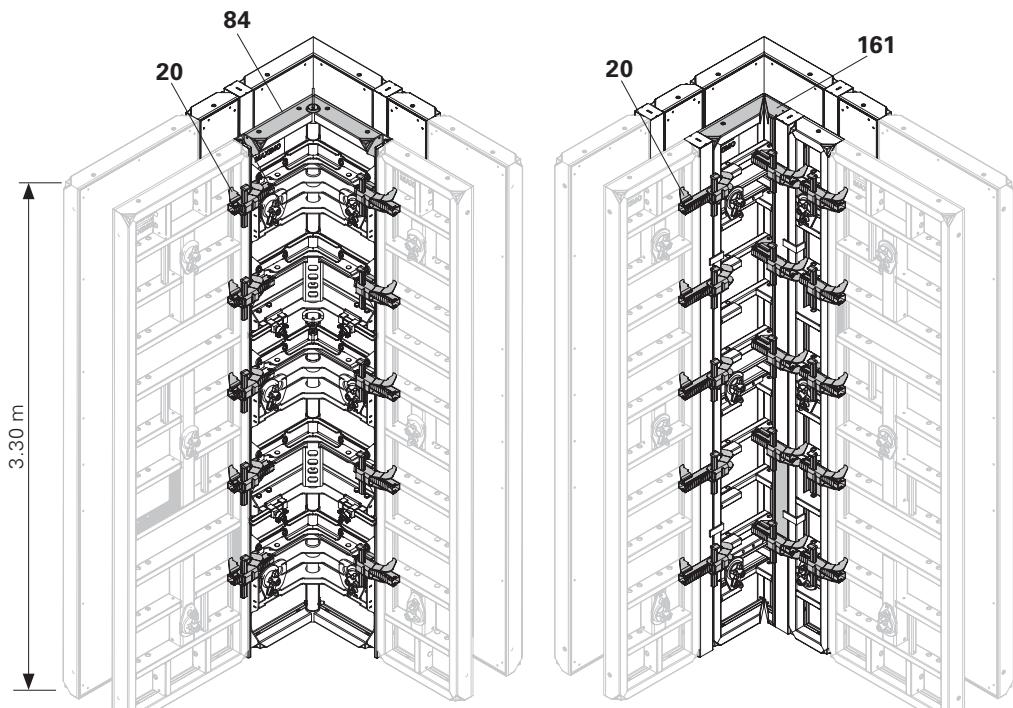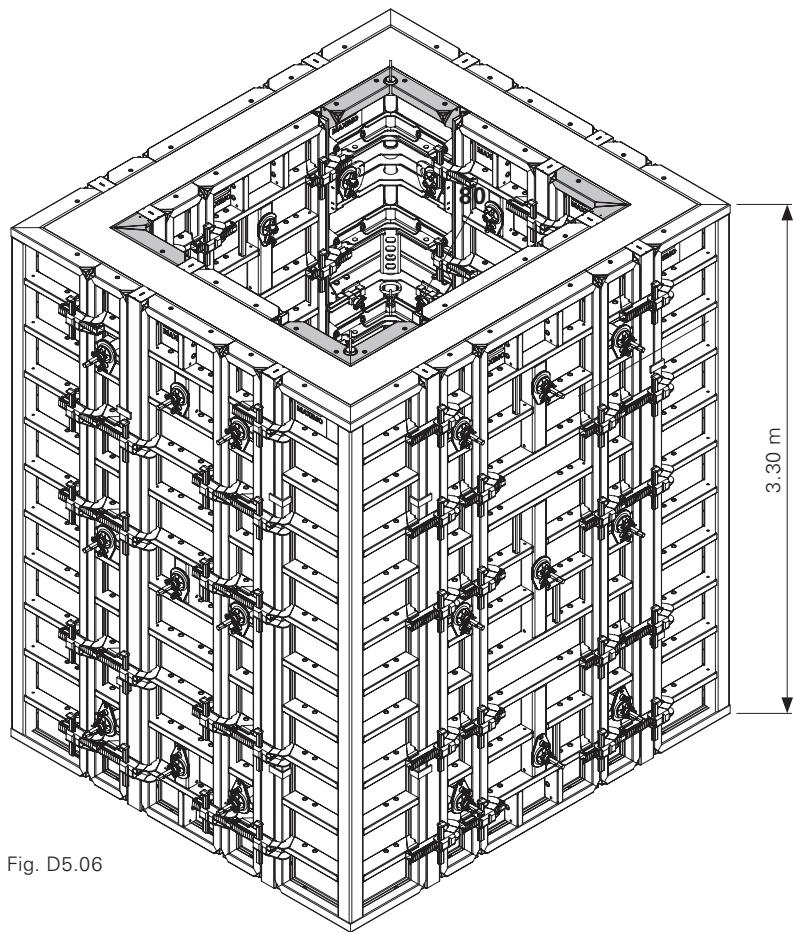

# D5 Shaft Formwork

PERI

**Four Shaft Corners MXSE 18, 330**

**Height 330 cm**

**Corners of the inner shaft wall Components**

**20 Alignment Coupler BFD**  
**84 Shaft Corner MXSE 18, 330**  
**124/ Panel MX 18,**  
**125/126 330 x 90/120/240**

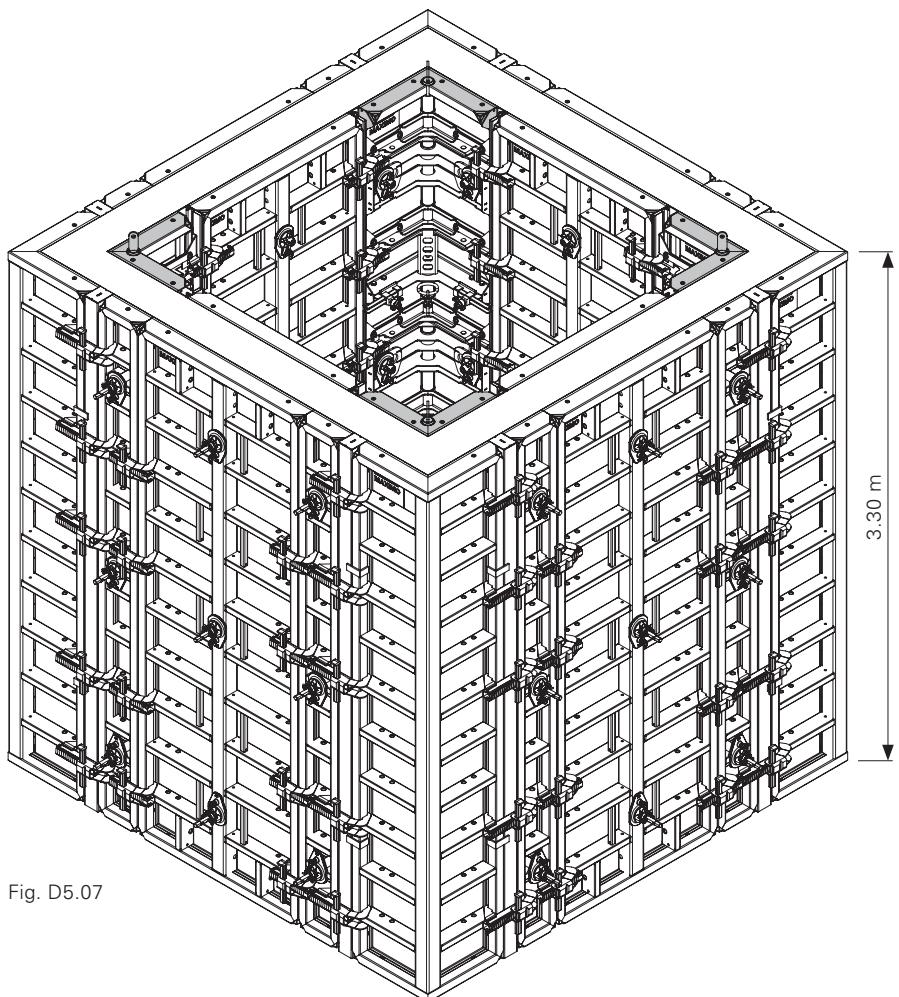


Fig. D5.07

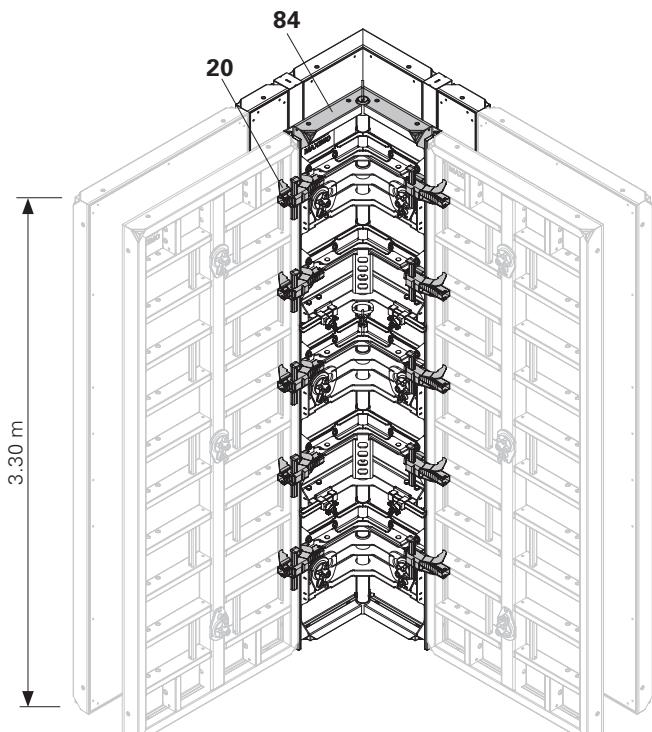


Fig. D5.07a

## Shuttering



Before shuttering, check Tube and remove Transportation Securing Pins 20 x 102.  
Mount Swivel Nut MX 18 on the internal formwork.

### Shuttering

1. Insert formwork lever into the opening (80.4) and press upwards.  
→ The tube slides downwards.
2. Secure tube by means of pins 20 x 102 and cotter pins 5/1 (80.3). (Fig. D5.08 + D5.08a)
3. Push the slider of the Positioning Waler (80.5) over the profile until there is a flush fit and tighten the wingnuts. (Fig. D5.08 + D5.08a)

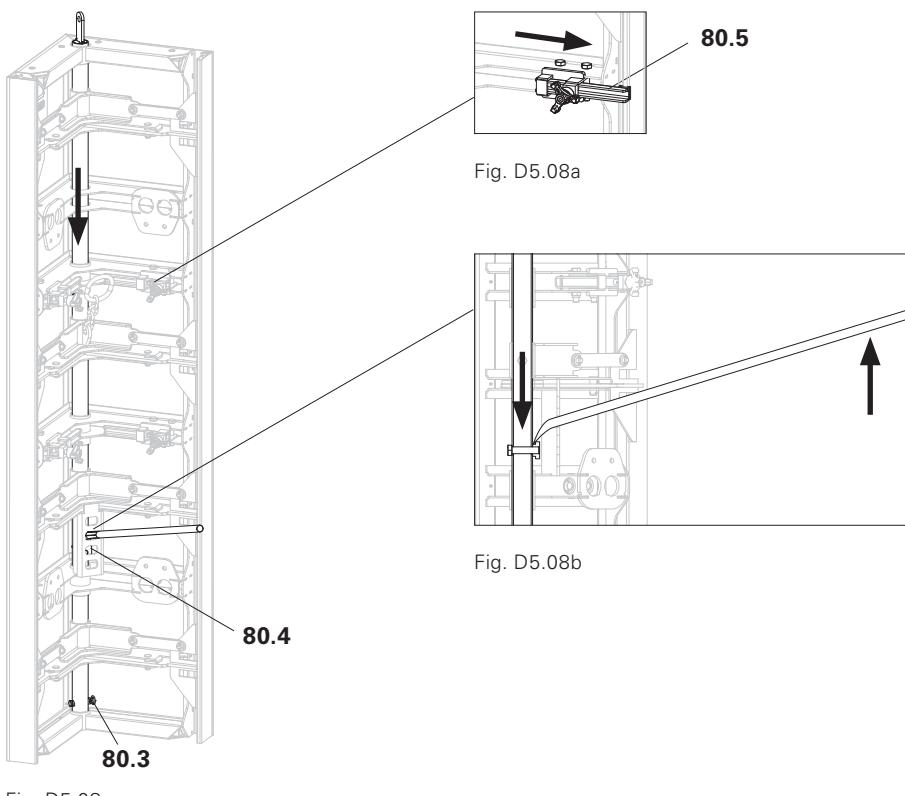


Fig. D5.08

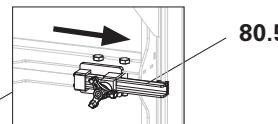


Fig. D5.08a

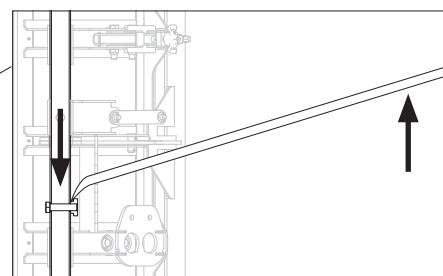


Fig. D5.08b

## Striking



**Perm. load capacity of 2 t per load-bearing point!**  
**Do not exceed the crane capacity!**

### Preparation

1. Remove tie points.
2. Loosen wingnuts on the Positioning Waler and push the slider back. (Fig. D5.09 + D5.09a)
3. Attach crane slings:
  - with four shaft corners, use all 4 load-bearing points,
  - with two shaft corners, use 2 load-bearing points.
4. Tension crane slings. (Fig. D5.09c)
5. Press crowbar downwards.  
→ The tube slides upwards and the striking position has been adjusted.
6. Pull the complete internal formwork upwards, and move.
7. Insert pins 20 x 102 into the tube and secure with cotter pins 5/1 (80.3). (Fig. D5.09 + D5.09b)  
→ Transport safety.

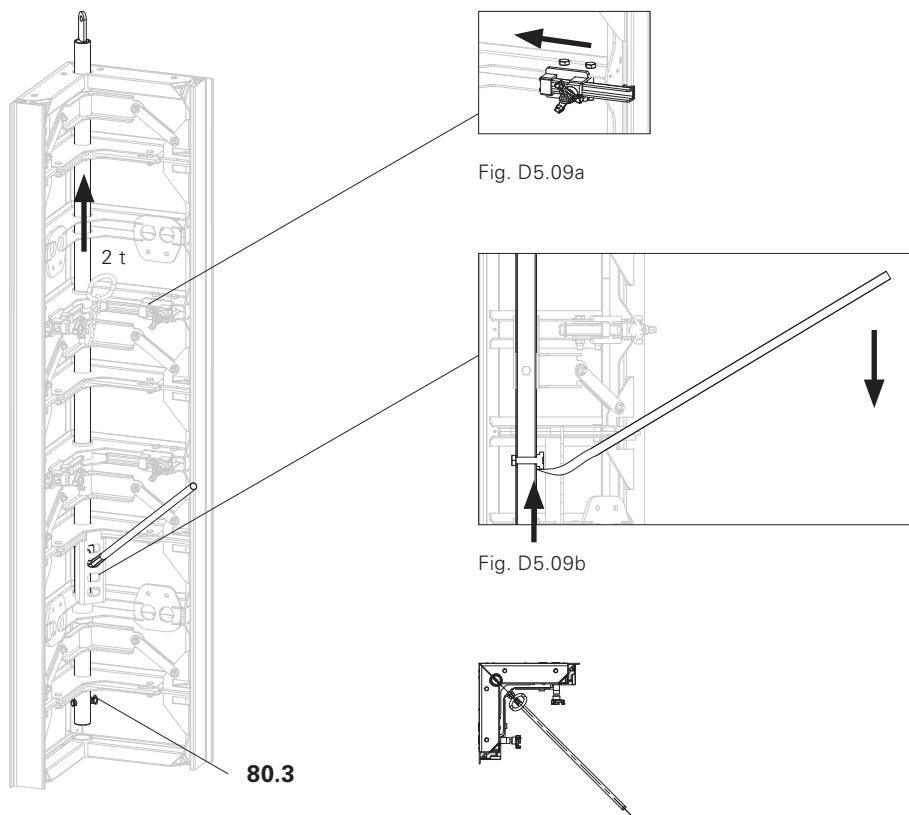


Fig. D5.09

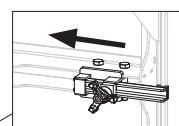


Fig. D5.09a

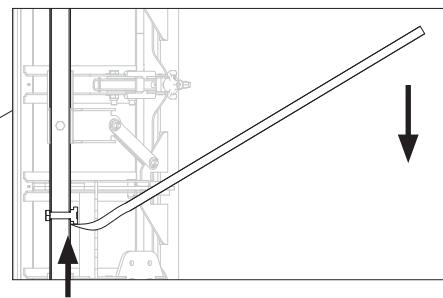


Fig. D5.09b

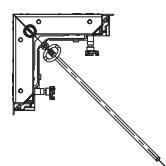


Fig. D5.09c

## Shaft with two Shaft Corners MXSE 18

The striking dimensions are reduced by 17.5 mm on each side of the shaft. (Fig. D5.10)



With boxouts, e.g. for doors or windows, be careful of nails of the mounting parts in the formlining!

**shuttered**

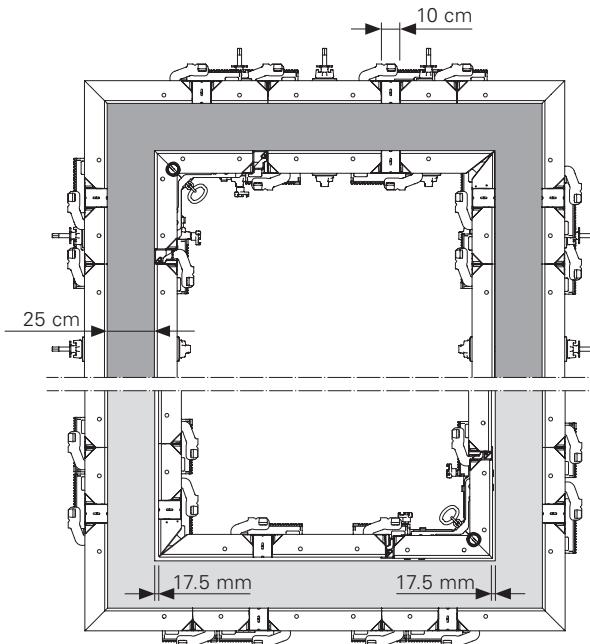


Fig. D5.10

## Shaft with four Shaft Corners MXSE 18

The striking dimensions are reduced by 35 mm on each side of the shaft. (Fig. D5.11)

**shuttered**

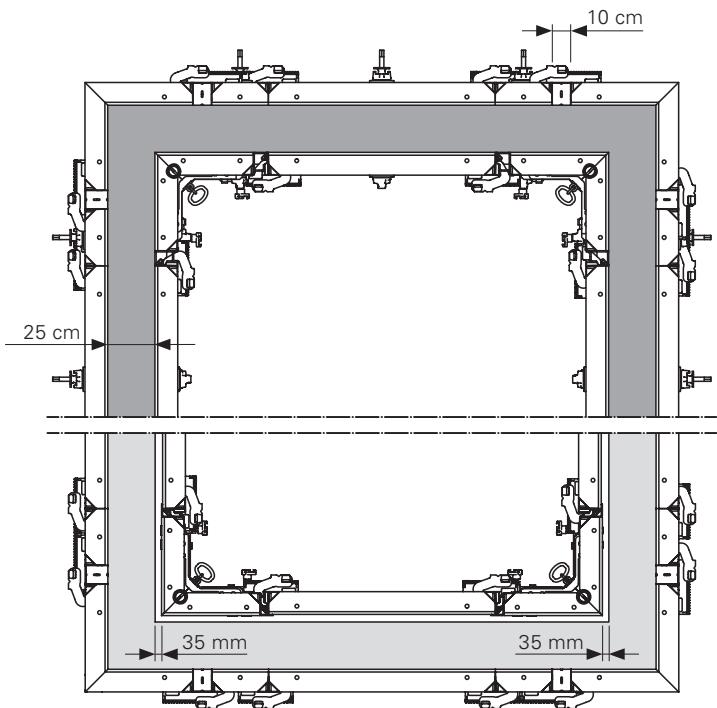


Fig. D5.11

# D5 Shaft Formwork

PERI

## Wall Thicknesses



Dimension specifications in mm.

### Wall thickness 150

(Fig. D5.12a + D5.12b)

Shaft with  
two Shaft Corners MXSE 18

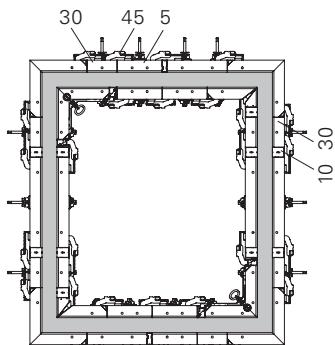


Fig. D5.12a

Shaft with  
four Shaft Corners MXSE 18

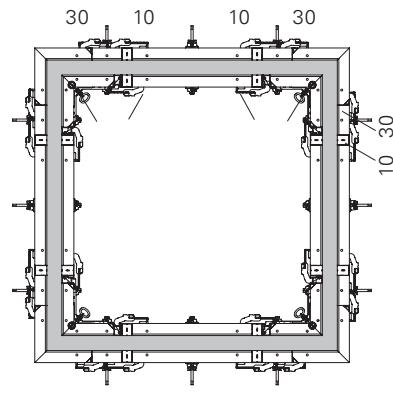


Fig. D5.12b

### Wall thickness 200

(Fig. D5.13a + D5.13b)

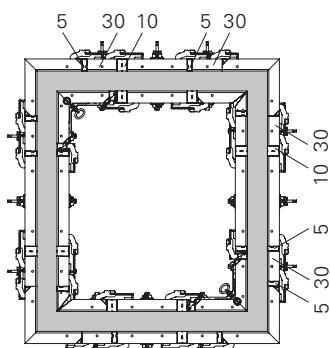


Fig. D5.13a

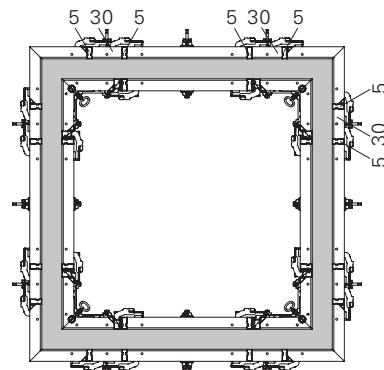


Fig. D5.13b

### Wall thickness 250

(Fig. D5.14a + D5.14b)

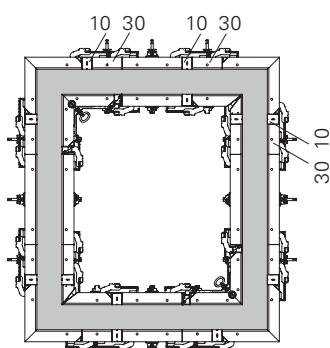


Fig. D5.14a

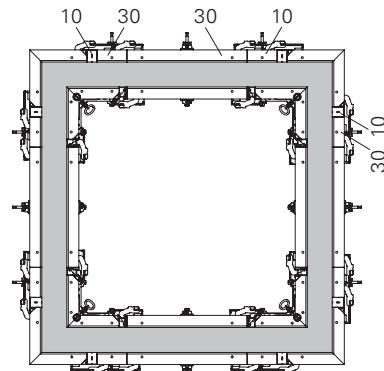


Fig. D5.14b

### Wall thickness 300

(Fig. D5.15a + D5.15b)

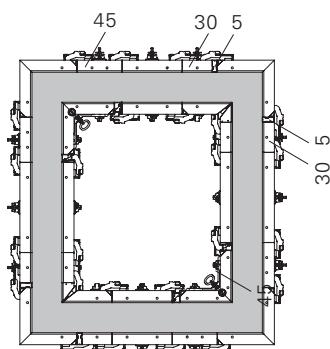


Fig. D5.15a

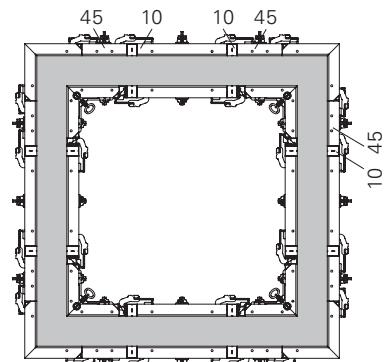


Fig. D5.15b

# D5 Shaft Formwork

PERI

## Extensions

(Fig. D5.16 + D5.16a + D5.16b + D5.16c)

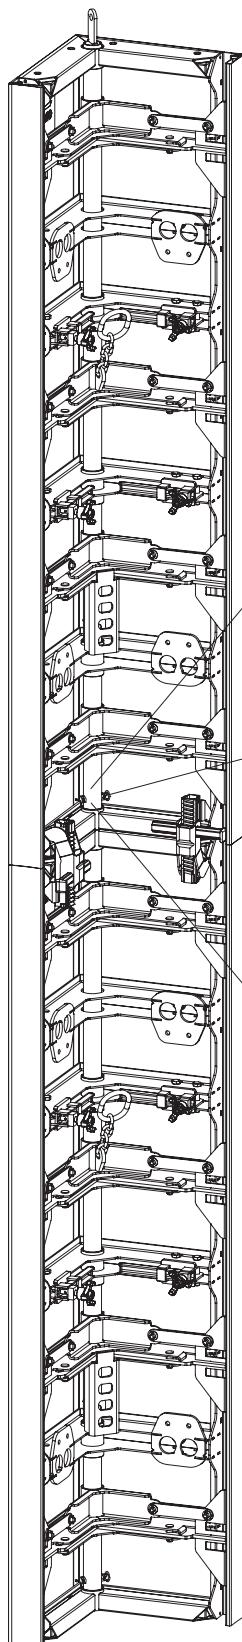


Fig. D5.16

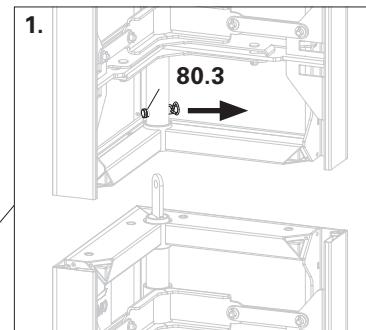


Fig. D5.16a

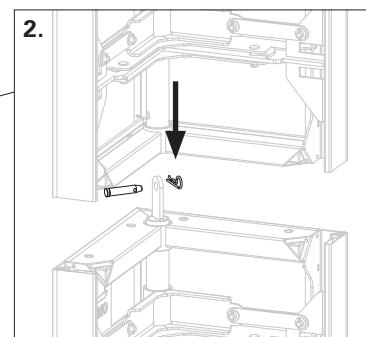


Fig. D5.16b

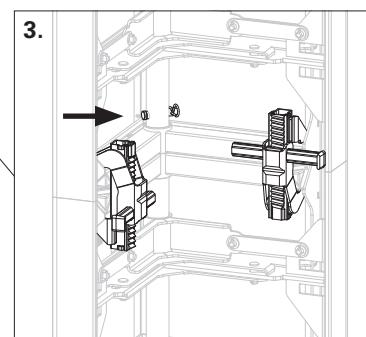


Fig. D5.16c

# D6 Sealing Replacement

PERI

## Removing the sealing

### Prepare the Removable Tool MX

Turn back Removable Tool MX (95).  
(Fig. D6.01)

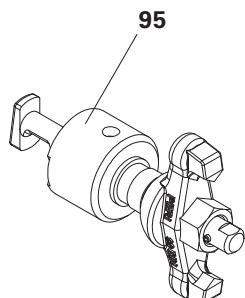


Fig. D6.01

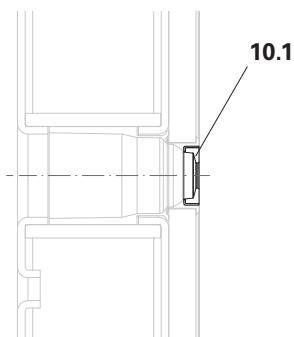


Fig. D6.02

### Starting position on the panel

Replacement of Sealing MX 18 or  
modification to Sealing MX 15 (10.1).  
(Fig. D6.02)

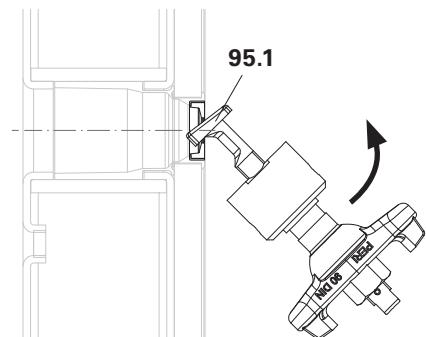


Fig. D6.03a

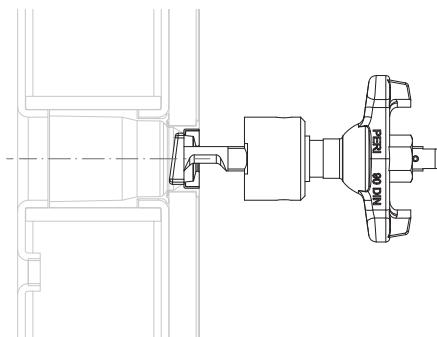


Fig. D6.03b

### Using the Removable Tool MX

1. Screw in the Extraction Head (95.1)  
with the thick end at an angle into the  
sealing until the Extraction Head is  
positioned inside the sealing.  
(Fig. D6.03a + D6.03b)

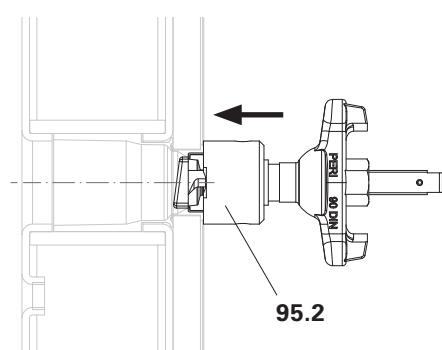


Fig. D6.04a

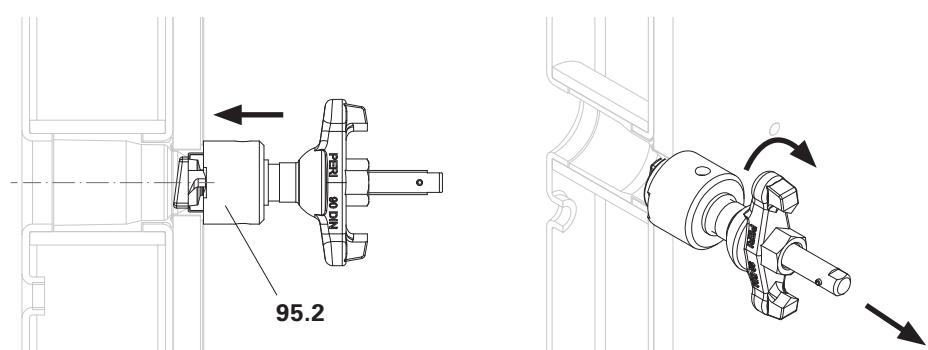


Fig. D6.04b

2. Turn the Removable Tool MX towards  
the panel until the Extractor Bell  
(95.2) rests against it. (Fig. D6.04a)

3. Secure the Extractor Bell and  
continue turning until the sealing is  
released.

4. Screw out the Extraction Head from  
the sealing. (Fig. D6.04b)

# D6 Sealing Replacement

## Inserting the sealing

### Inner side of panel

1. Place new sealing on the opening.  
(Fig. D6.05a)

2. Install sealing using hammer and  
plate until flush fit is achieved.  
(Fig. D6.05b)

→ The sealing has now been  
replaced.  
(Fig. D6.06)

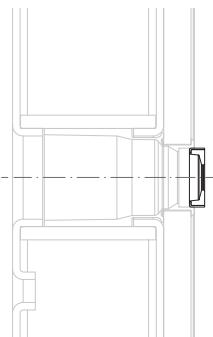


Fig. D6.05a

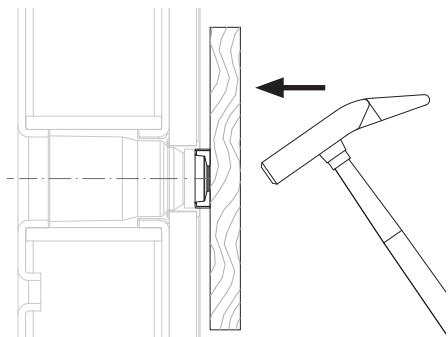


Fig. D6.05b

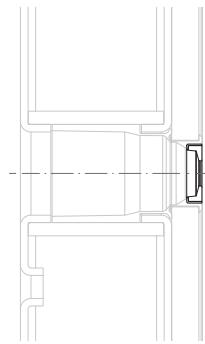


Fig. D6.06

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124093 408,000

## Panel MX 18, 330 x 240



7.920 m<sup>2</sup>. Panel with 18 mm plywood.

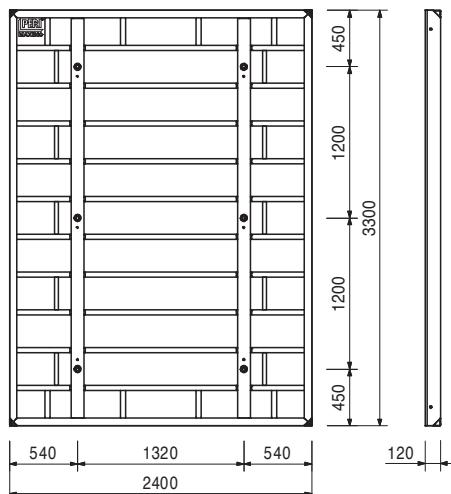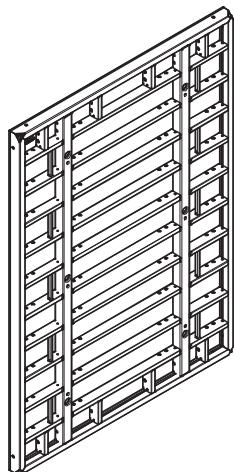

124126 226,000

## Panel MX 18, 330 x 120



3.960 m<sup>2</sup>. Panel with 18 mm plywood.

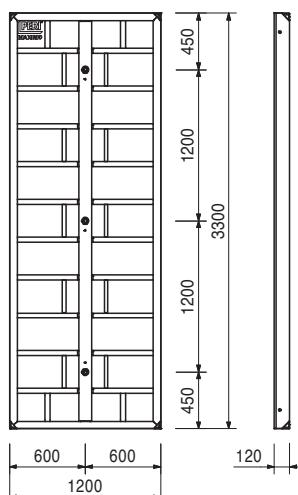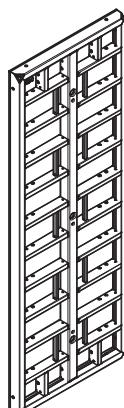

124127 172,000

## Panel MX 18, 330 x 90

2.970 m<sup>2</sup>. Panel with 18 mm plywood.

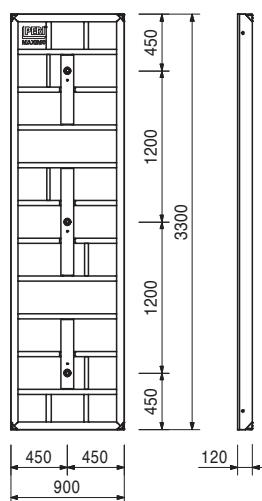

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124128 118,000

## Panel MX 18, 330 x 60


1.980 m<sup>2</sup>. Panel with 18 mm plywood.

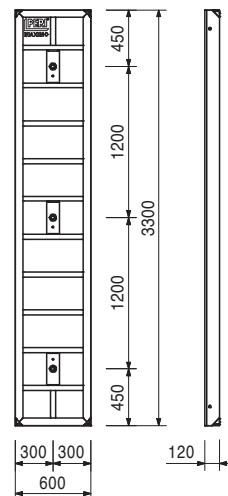

124129 99,900

## Panel MX 18, 330 x 45


1.485 m<sup>2</sup>. Panel with 18 mm plywood.

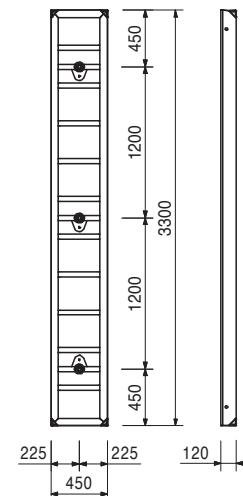

124130 79,600

## Panel MX 18, 330 x 30

0.990 m<sup>2</sup>. Panel with 18 mm plywood.

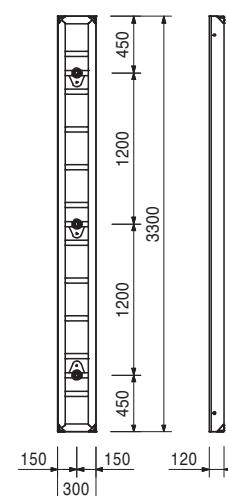

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

124163 141,000


## Multi Panel MXM 18, 330 x 60

1.980 m<sup>2</sup>. Panel with 18 mm plywood.  
For oblique angles, wall connections etc.



## Complete with

33 pc. 125099 Plug MXM 18, Ø 26  
33 pc. 123604 Sealing MX 18

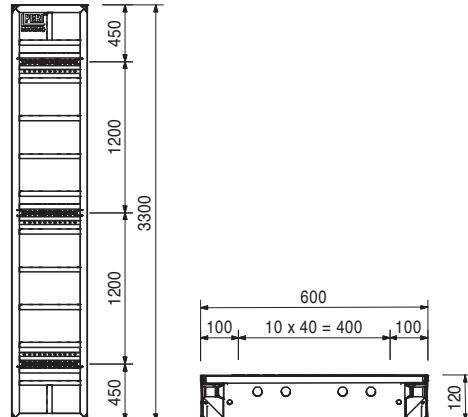

124190 136,000


## Inside Corner MXI 18, 330 x 50/20

2.310 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corner.



## Complete with



12 pc. 125099 Plug MXM 18, Ø 26  
12 pc. 123604 Sealing MX 18

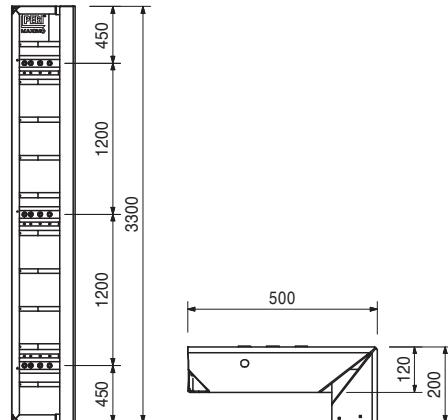

124195 206,000

## Inside Corner MXI 18, 330 x 60

3.960 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.

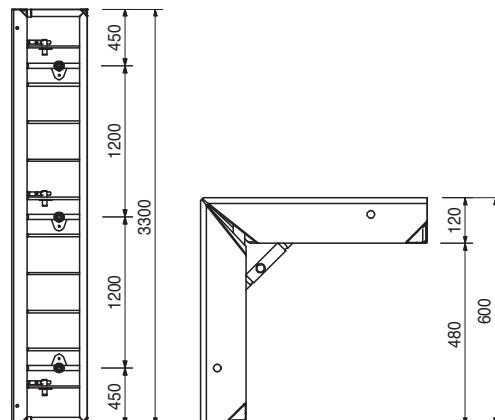

# MAXIMO MX 18 Panel Formwork 270 / 330


PERI

Item no. Weight kg

125284 401,000

## Shaft Corner MXSE 18, 330

Panel for forming 90° inside corners along with striking and moving complete internal shaft formwork units.





## Complete with

4 pc. 126263 Position Latch MXSE.

## Technical Data

Permissible load-bearing point capacity 2.0 t.


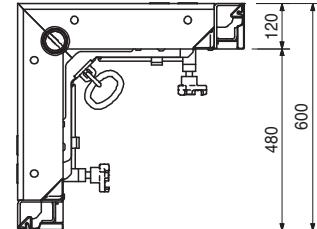
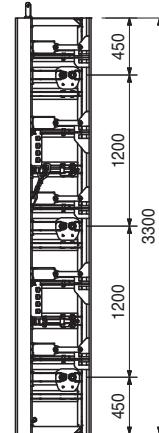


114478 192,000

## Outside Corner MXA 330 x 45

2.970 m<sup>2</sup>. Panel with 18 mm plywood.

For 90° external corners.

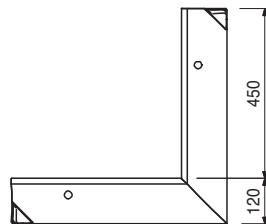
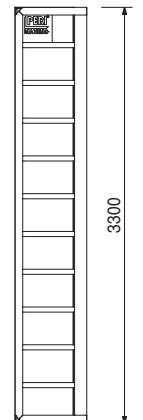



114486 170,000

## Outside Corner MXA 330 x 35

2.310 m<sup>2</sup>. Panel with 18 mm plywood.

For 90° external corners.

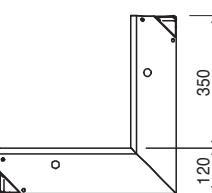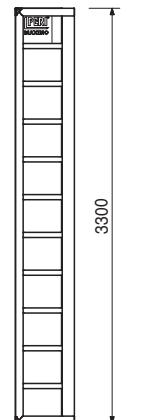


# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg

114842	17,800	Wall Thickness Compensations WDA MX 330	B
114826	18,900	Wall Thickness Comp. WDA MX 330 x 4	40
114846	20,200	Wall Thickness Comp. WDA MX 330 x 5	50
114394	12,100	Wall Thickness Comp. WDA MX 330 x 6	60
		Wall Thickness Comp. WDA MX 330 x 10, Alu	100


For adjusting to wall thicknesses.

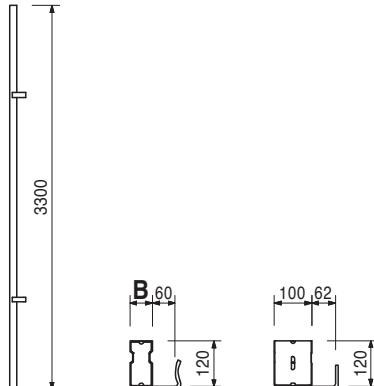

101829 9,820

## Filler Profile TPP 330, Alu



For compensation with 21 mm filler plates.

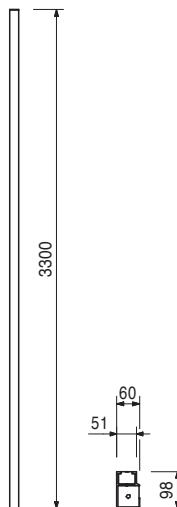

124131 446,000

## Panel MX 18, 330 x 270

8.910 m<sup>2</sup>. Panel with 18 mm plywood.

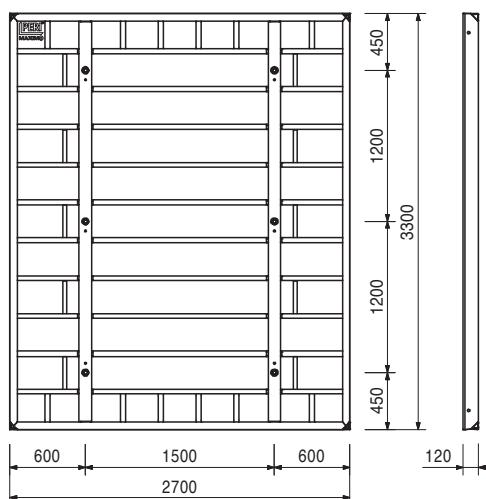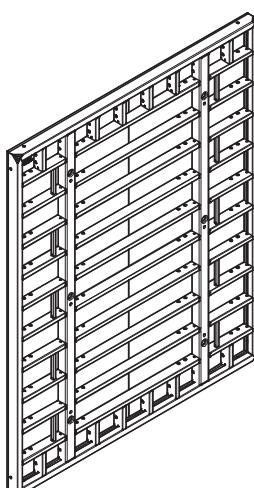

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124132 336,000

## Panel MX 18, 270 x 240



6.480 m<sup>2</sup>. Panel with 18 mm plywood.

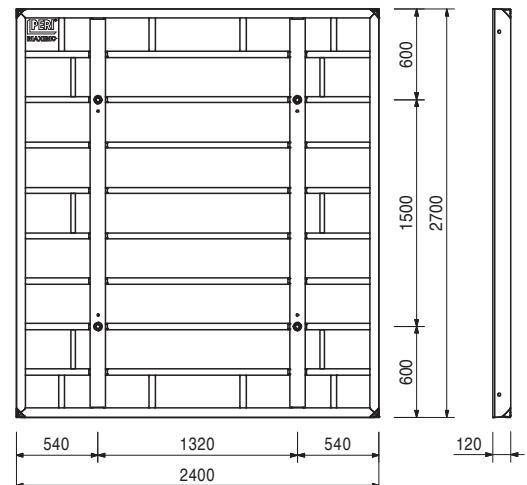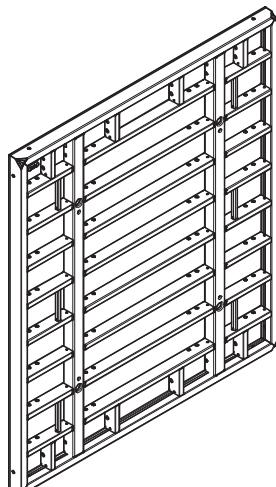

124134 186,000

## Panel MX 18, 270 x 120



3.240 m<sup>2</sup>. Panel with 18 mm plywood.

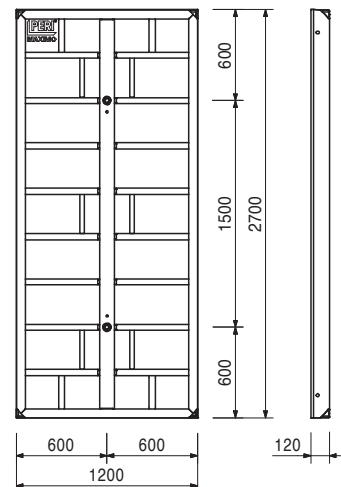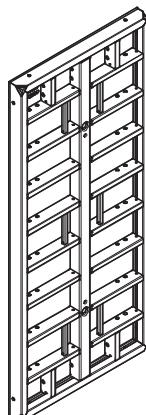

124138 135,000

## Panel MX 18, 270 x 90

2.430 m<sup>2</sup>. Panel with 18 mm plywood.

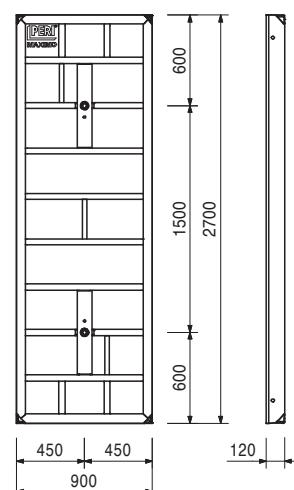

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124135 104,000

## Panel MX 18, 270 x 60



1.620 m<sup>2</sup>. Panel with 18 mm plywood.

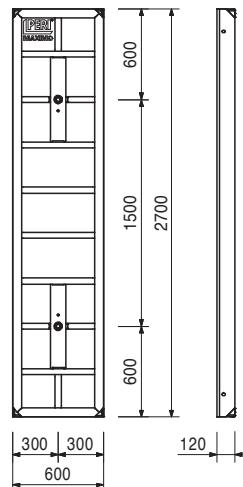

124136 77,600

## Panel MX 18, 270 x 45


1.215 m<sup>2</sup>. Panel with 18 mm plywood.

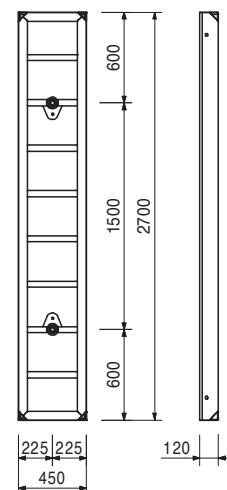

124137 62,800

## Panel MX 18, 270 x 30

0.810 m<sup>2</sup>. Panel with 18 mm plywood.

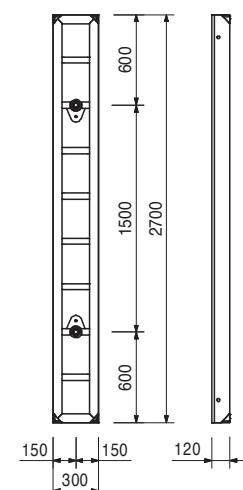

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

124188 108,000


## Multi Panel MXM 18, 270 x 60

1.620 m<sup>2</sup>. Panel with 18 mm plywood.  
For oblique angles, wall connections etc.



## Complete with


22 pc. 125099 Plug MXM 18, Ø 26  
22 pc. 123604 Sealing MX 18

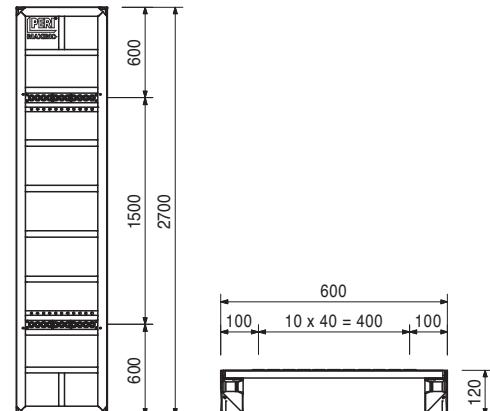

124191 103,000


## Inside Corner MXI 18, 270 x 50/20

1.890 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corner.



## Complete with



8 pc. 125099 Plug MXM 18, Ø 26  
8 pc. 123604 Sealing MX 18

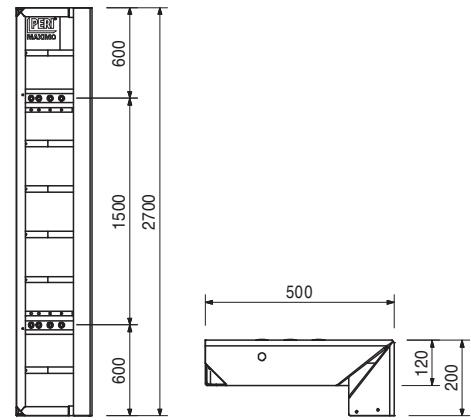

124196 156,000

## Inside Corner MXI 18, 270 x 60

3.240 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.

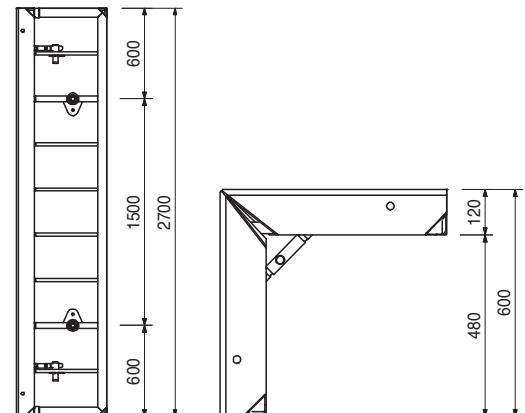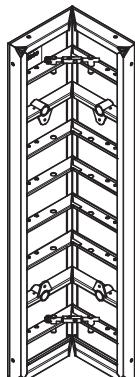

# MAXIMO MX 18 Panel Formwork 270 / 330


PERI

Item no. Weight kg

125286 306,000

## Shaft Corner MXSE 18, 270

Panel for forming 90° inside corners along with striking and moving complete internal shaft formwork units.


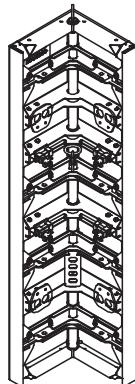


## Complete with

4 pc. 126263 Position Latch MXSE.

## Technical Data

Permissible load-bearing point capacity 2.0 t.


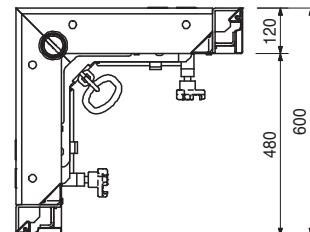
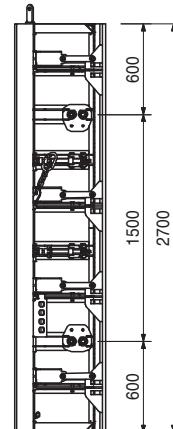


112806 159,000

## Outside Corner MXA 270 x 45

2.430 m<sup>2</sup>. Panel with 18 mm plywood.

For 90° external corners.

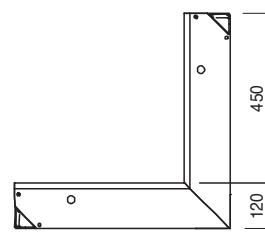
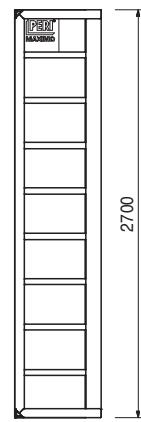
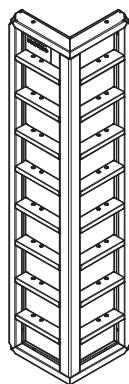


112667 141,000

## Outside Corner MXA 270 x 35

1.890 m<sup>2</sup>. Panel with 18 mm plywood.

For 90° external corners.

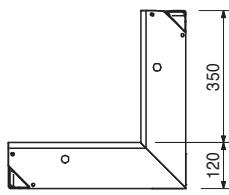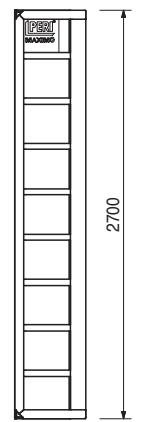


# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg

		<b>Wall Thickness Compensations WDA MX 270</b>	<b>B</b>
114165	14,700	<b>Wall Thickness Comp. WDA MX 270 x 4</b>	40
114186	15,700	<b>Wall Thickness Comp. WDA MX 270 x 5</b>	50
114174	16,800	<b>Wall Thickness Comp. WDA MX 270 x 6</b>	60
114128	10,000	<b>Wall Thickness Comp. WDA MX 270 x 10, Alu</b>	100

For adjusting to wall thicknesses.

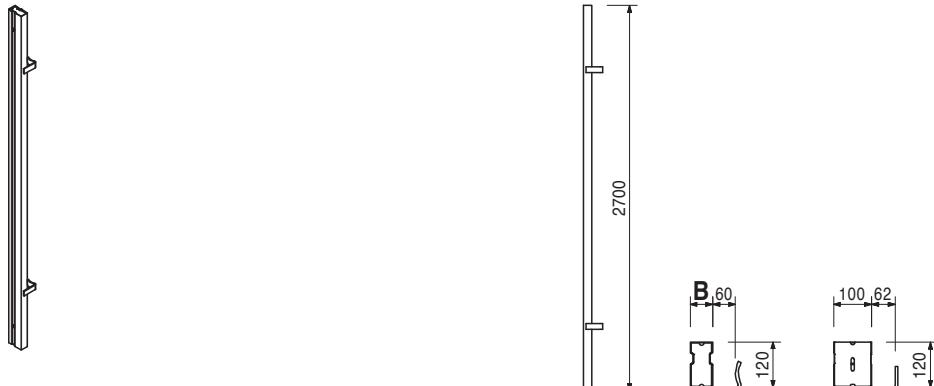

101813 8,040

## Filler Profile TPP 270, Alu

For compensation with 21 mm filler plates.



023061	27,500
023062	30,400
023064	37,300
023065	41,300

## Stopend Panels TRIO MT without waterstop

	<b>B</b>
<b>Stopend Panel TRIO MT 270 x 20</b>	118
<b>Stopend Panel TRIO MT 270 x 24/25</b>	158
<b>Stopend Panel TRIO MT 270 x 30</b>	218
<b>Stopend Panel TRIO MT 270 x 35/36</b>	268

Centre piece without waterstop bar installation for stopend formwork.




# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg


		<b>Stopend Panels TRIO MTF with waterstop</b>	<b>B</b>
023074	29,200	<b>Stopend Panel TRIO MTF 270 x 20</b>	118
023075	33,400	<b>Stopend Panel TRIO MTF 270 x 24/25</b>	158
023077	38,600	<b>Stopend Panel TRIO MTF 270 x 30</b>	218
023076	42,500	<b>Stopend Panel TRIO MTF 270 x 35/36</b>	268

Centre piece with waterstop bar installation for stopend formwork.

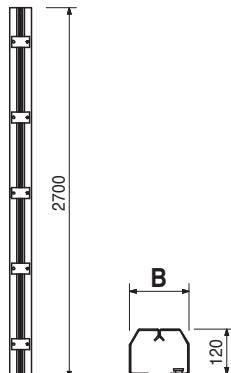

023060	17,200
105953	19,000



**Stopend Panels TRIO AT**  
**Stopend Panel TRIO AT 270 x 3**  
**Stopend Panel TRIO AT 270 x 5**  
External piece for stopend formwork.

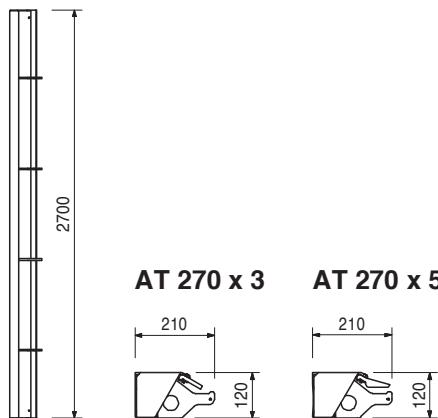

124139	166,000
--------	---------

**Panel MX 18, 120 x 240**

2.880 m<sup>2</sup>. Panel with 18 mm plywood.

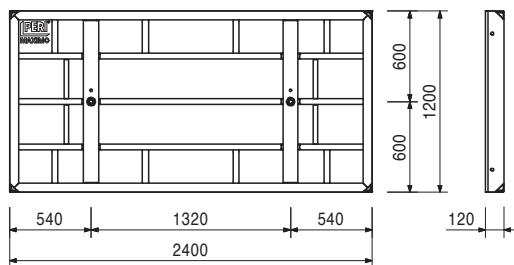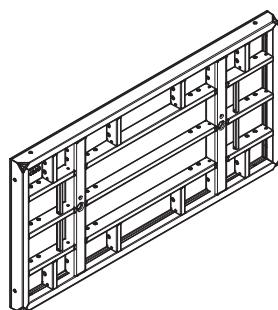

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124142 90,700

## Panel MX 18, 120 x 120



1.440 m<sup>2</sup>. Panel with 18 mm plywood.

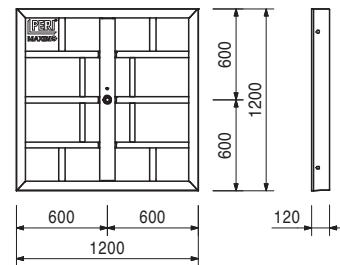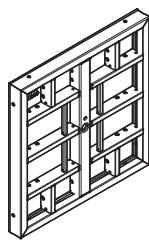

124143 67,700

## Panel MX 18, 120 x 90



1.080 m<sup>2</sup>. Panel with 18 mm plywood.

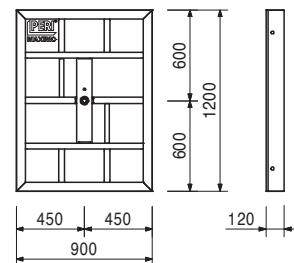

124144 51,200

## Panel MX 18, 120 x 60


0.720 m<sup>2</sup>. Panel with 18 mm plywood.

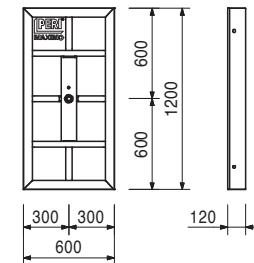

124145 37,100

## Panel MX 18, 120 x 45

0.540 m<sup>2</sup>. Panel with 18 mm plywood.

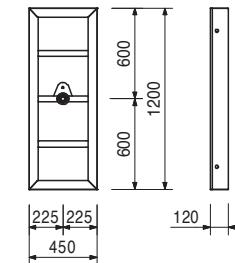

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

124146 27,400

## Panel MX 18, 120 x 30


0.360 m<sup>2</sup>. Panel with 18 mm plywood.

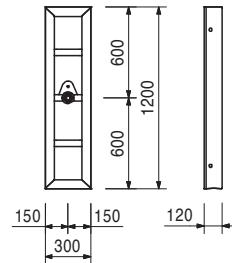

124189 53,700


## Multi Panel MXM 18, 120 x 60

0.720 m<sup>2</sup>. Panel with 18 mm plywood.  
For oblique angles, wall connections etc.



## Complete with


11 pc. 125099 Plug MXM 18, Ø 26  
11 pc. 123604 Sealing MX 18

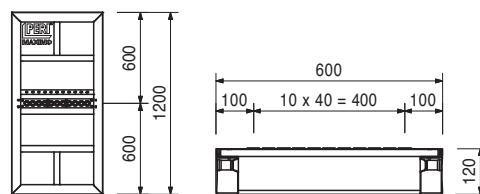

125277 48,800


## Inside Corner MXI 18, 120 x 50/20

0.840 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.



## Complete with



4 pc. 125099 Plug MXM 18, Ø 26  
4 pc. 123604 Sealing MX 18

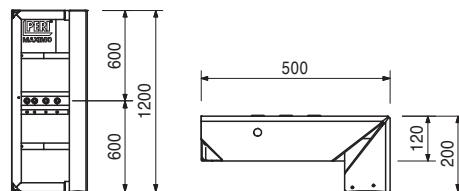

124197 80,500

## Inside Corner MXI 18, 120 x 60

1.440 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.

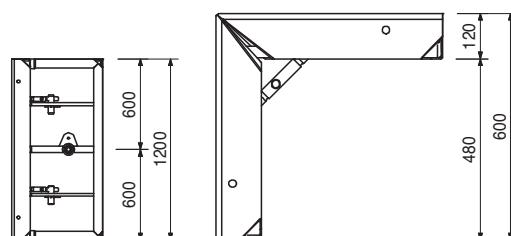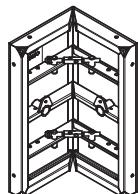

# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg

125288 139,000


## Shaft Corner MXSE 18, 120

For 90° inside corners along with striking and moving complete internal shaft formwork units.



## Technical Data



Permissible load-bearing point capacity 2.0 t.

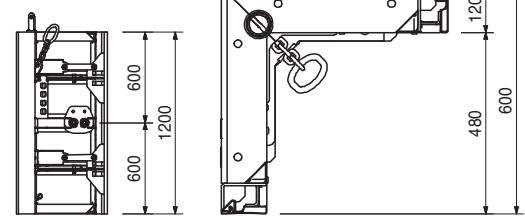

112830 76,100

## Outside Corner MXA 120 x 45



1.080 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° external corners.

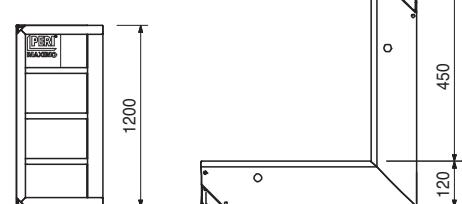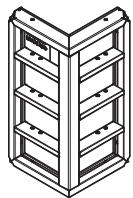

112761 67,200

## Outside Corner MXA 120 x 35

0.840 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° external corners.

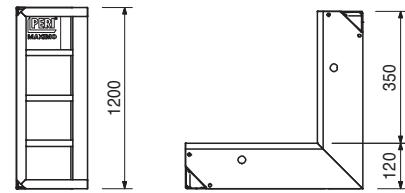

114212	6,420
114191	6,980
114181	7,480
114142	4,510

**Wall Thickness Comp. MX 120**  
**Wall Thickness Comp. MX 120 x 4**  
**Wall Thickness Comp. MX 120 x 5**  
**Wall Thickness Comp. MX 120 x 6**  
**Wall Thickness Comp. MX 120 x 10, Alu**

**B**


40

50

60

100

For adjusting to wall thicknesses.

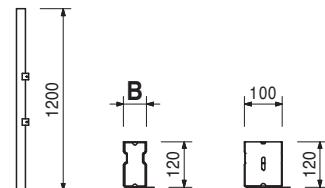

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

101823 3,590

## Filler Profile TPP 120, Alu

For compensation with 21 mm filler plates.

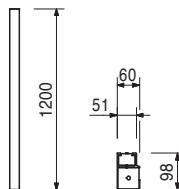

023067	7,780
105978	8,580

## Stopend Panels TRIO AT

### Stopend Panel TRIO AT 120 x 3



### Stopend Panel TRIO AT 120 x 5

External piece for stopend formwork.



## Note

Concrete cover approx. 30 mm.

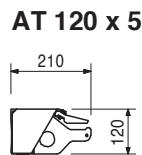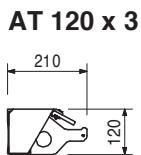

023068	11,800
023069	13,500
023071	16,300
023072	18,500

## Stopend Panels TRIO MT

### Stopend Panel TRIO MT 120 x 20

B

118

### Stopend Panel TRIO MT 120 x 24/25

158


### Stopend Panel TRIO MT 120 x 30

218

### Stopend Panel TRIO MT 120 x 35/36

268

Centre piece without waterstop bar installation for stopend formwork.

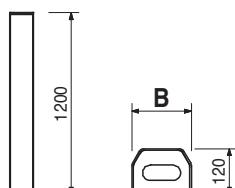

023081	12,800
023080	14,700
023078	16,800
023079	18,600

## Stopend Panels TRIO MTF

B

118

### Stopend Panel TRIO MTF 120 x 20

158

### Stopend Panel TRIO MTF 120 x 24/25

218


### Stopend Panel TRIO MTF 120 x 30

268

### Stopend Panel TRIO MTF 120 x 35/36

268

Centre piece with waterstop bar installation for stopend formwork.

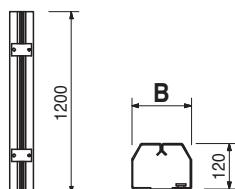

# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

124147 121,000

## Panel MX 18, 90 x 240



2.160 m<sup>2</sup>. Panel with 18 mm plywood.

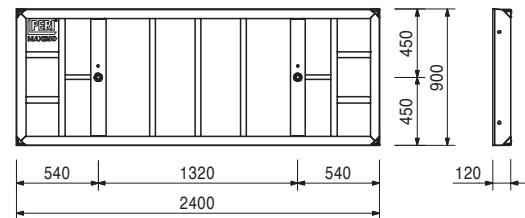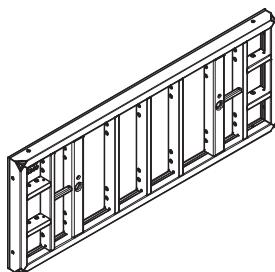

124148 48,900

## Panel MX 18, 90 x 90



0.810 m<sup>2</sup>. Panel with 18 mm plywood.

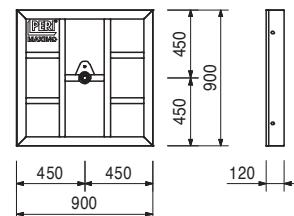

124149 36,600

## Panel MX 18, 90 x 60


0.540 m<sup>2</sup>. Panel with 18 mm plywood.

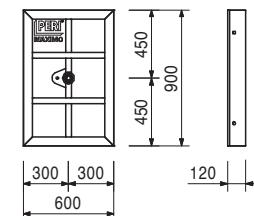

124150 31,200

## Panel MX 18, 90 x 45

0.405 m<sup>2</sup>. Panel with 18 mm plywood.

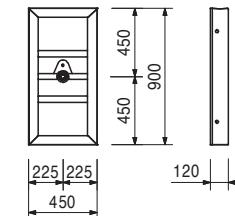

# MAXIMO MX 18 Panel Formwork 270 / 330


PERI

Item no. Weight kg

124151 22,000

## Panel MX 18, 90 x 30

0.270 m<sup>2</sup>. Panel with 18 mm plywood.

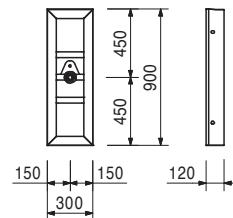


124192 36,900

## Inside Corner MXI 18, 90 x 50/20

0.630 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.

## Complete with



4 pc. 125099 Plug MXM 18, Ø 26  
4 pc. 123604 Sealing MX 18

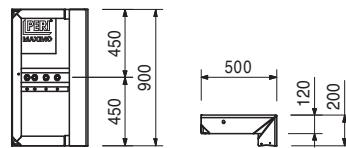

124198 68,100

## Inside Corner MXI 18, 90 x 60



1.080 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.

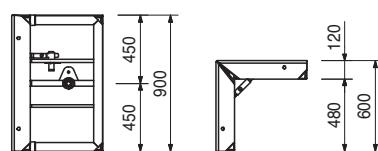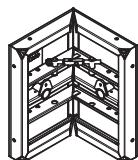

126917 52,400

## Outside Corner MXA 90 x 35

0.630 m<sup>2</sup>. Panel with 18 mm plywood. For 90° external corners.

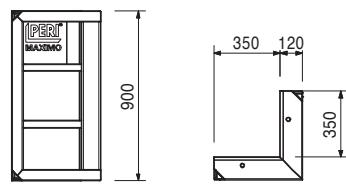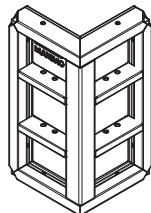

# MAXIMO MX 18 Panel Formwork 270 / 330



**PERI**

Item no. Weight kg

126923 59,600

## Outside Corner MXA 90 x 45



0.808 m<sup>2</sup>. Panel with 18 mm plywood. For 90° external corners.

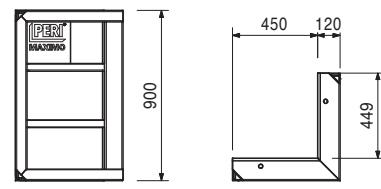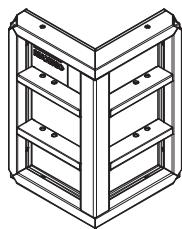

124157 88,100

## Panel MX 18, 60 x 240



1.440 m<sup>2</sup>. Panel with 18 mm plywood.

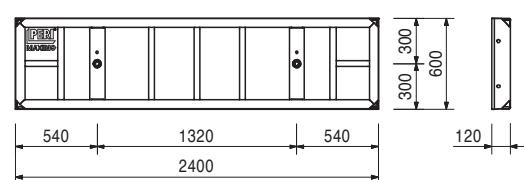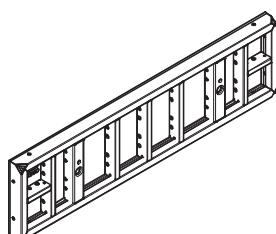

124158 28,400

## Panel MX 18, 60 x 60


0.360 m<sup>2</sup>. Panel with 18 mm plywood.

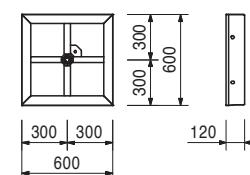

124160 21,900

## Panel MX 18, 60 x 45


0.270 m<sup>2</sup>. Panel with 18 mm plywood.

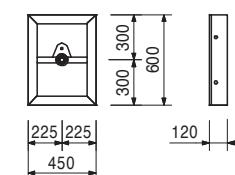

124159 16,200

## Panel MX 18, 60 x 30

0.180 m<sup>2</sup>. Panel with 18 mm plywood.

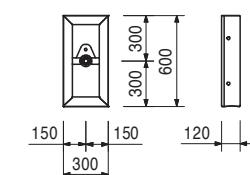

# MAXIMO MX 18 Panel Formwork 270 / 330

PERI

Item no. Weight kg

124193 29,700


## Inside Corner MXI 18, 60 x 50/20

0.420 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.



## Complete with



4 pc. 124895 PVC Plug MXM 15 Ø 18.3  
4 pc. 123604 Sealing MX 18



124199 45,400

## Inside Corner MXI 18, 60 x 60


0.720 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° internal corners.



112837 42,800

## Outside Corner MXA 60 x 45



0.540 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° external corners.

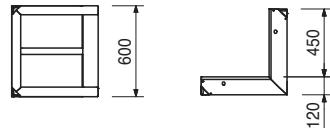

112778 37,400

## Outside Corner MXA 60 x 35



0.420 m<sup>2</sup>. Panel with 18 mm plywood.  
For 90° external corners.

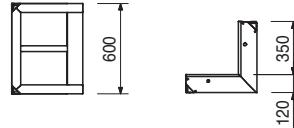

124162 52,900

## Panel MX 18, 30 x 240

0.720 m<sup>2</sup>. Panel with 18 mm plywood.

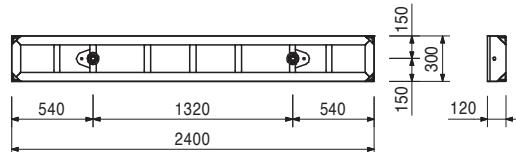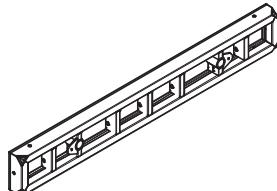

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

123901 4,880

## Tie MX 18, 15 – 25

For wall thicknesses 15 – 25 cm.


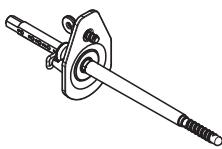


### Note

Spray with release agent before every use to ensure easier striking.

### Technical Data


Permissible tension force 130 kN.

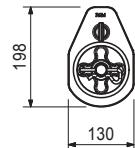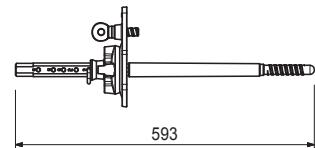

123902 5,080

## Tie MX 18, 20 – 30

For wall thicknesses 20 – 30 cm.


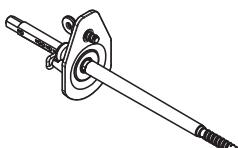


### Note

Spray with release agent before every use to ensure easier striking.

### Technical Data


Permissible tension force 130 kN.

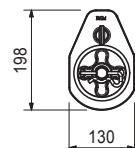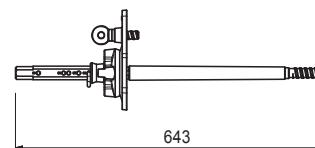

123903 5,490

## Tie MX 18, 30 – 40

For wall thicknesses 30 – 40 cm.


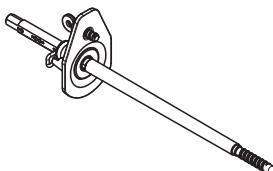


### Note

Spray with release agent before every use to ensure easier striking.

### Technical Data


Permissible tension force 130 kN.

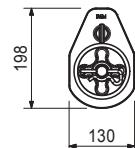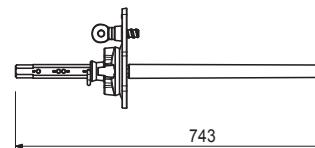

123904 5,900

## Tie MX 18, 40 – 50

For wall thicknesses 40 – 50 cm.


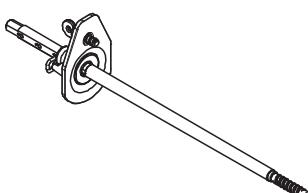


### Note

Spray with release agent before every use to ensure easier striking.

### Technical Data

Permissible tension force 130 kN.

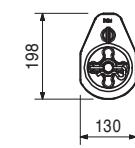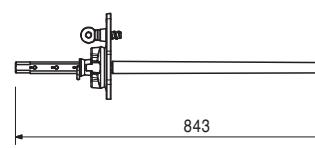

# MAXIMO MX 18 Panel Formwork 270 / 330

PERI

Item no. Weight kg

123905 6,310

## Tie MX 18, 50 – 60



For wall thicknesses 50 – 60 cm.

### Note

Spray with release agent before every use to ensure easier striking.

### Technical Data

Permissible tension force 130 kN.

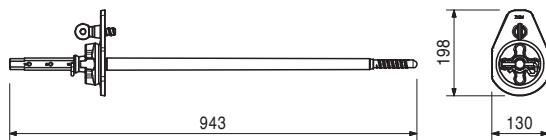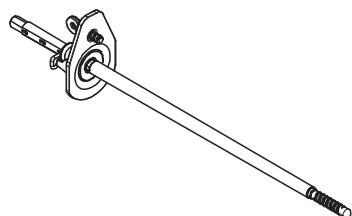


123900 3,570

## Wingnut MX 18

Counter nut for Tie MX 18.

### Technical Data



Permissible tension force 130 kN.

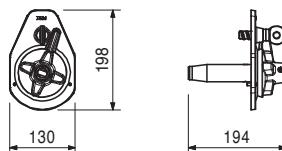

108719 3,640



## Tie Rod Spanner TRH SW 22

For Anchor TRH.

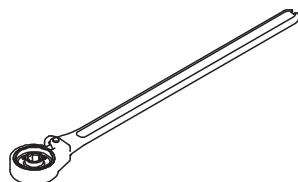

796061 3,940

## Scaffold Builders Ratchet

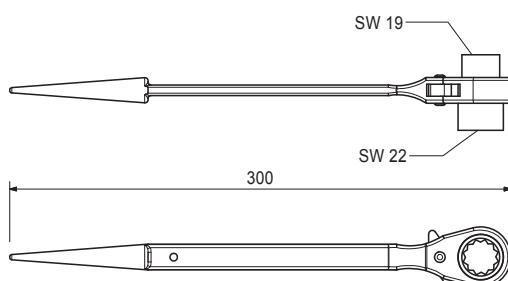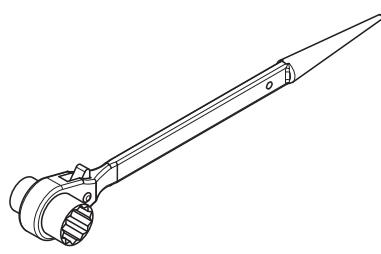

# MAXIMO MX 18 Panel Formwork 270 / 330



**PERI**

Item no. Weight kg

125099 0,005

## Plug MXM 18, Ø 26



For MAXIMO Multi Panels MXM 18, Internal Corners MXI 18 50/20 and standard elements for single faced use.

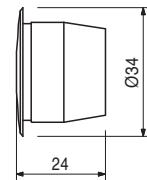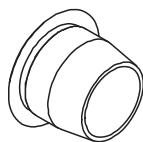

125300 0,003

## Plug MX 18, Ø 24 – 28


For closing MX 18 tie holes in the concrete.

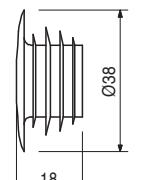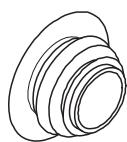

023500 4,580


## Alignment Coupler BFD, galv.

For all panel connections for MAXIMO, TRIO and RUNDFLEX. Fillers up to 10 cm.

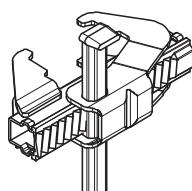

## Technical Data


Permissible tension force 20.0 kN.

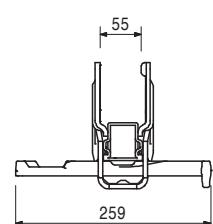

124941 14,100


## Waler MAR 85-3

For longitudinal compensation, height extensions, stopead formwork and special applications with MAXIMO. With captive connecting components.

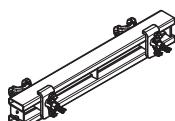

## Technical Data

Permissible bending moment 3.9 kNm.

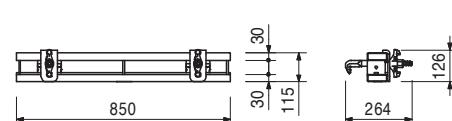

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

124942 23,400


## Waler MAR 170-3

For longitudinal compensation, height extensions, stopeнд formwork and special applications with MAXIMO. With captive connecting components.

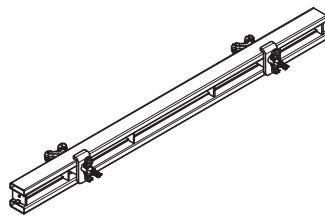

## Technical Data


Permissible bending moment 3.9 kNm.

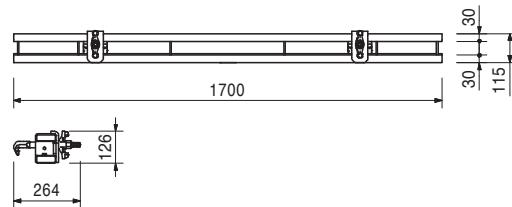

023551 8,520


## Waler 85

Corresponds to Compensation Waler TAR 85 but without mounting hooks.

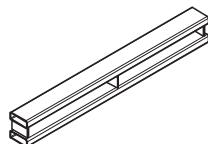

## Technical Data

Permissible bending moment 4.4 kNm.

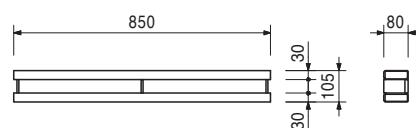

023820 0,375


## Hook Tie Head DW 15, galv.

For connecting accessories to MAXIMO and TRIO panels. DW 15 thread.



## Technical Data

Permissible tension force 20.0 kN.

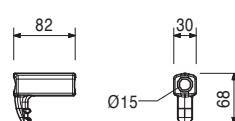

023650 0,769


## Hook Tie DW 15, l = 400 mm, galv.

For connecting accessories to MAXIMO and TRIO panels. DW 15 thread.



## Technical Data


Permissible tension force 20.0 kN.



023640 1,140


## Bulkhead Tie TS, galv.

For force application from the stopeнд formwork in MAXIMO and TRIO panels. DW 15 thread.



## Technical Data

Permissible tension force 20.0 kN.



# MAXIMO MX 18 Panel Formwork 270 / 330




**PERI**

Item no. Weight kg

115640 5,980

## Bulkhead Tie MX DW 20




For forming wall offsets with MAXIMO in connection with the Multi Panel MXM.

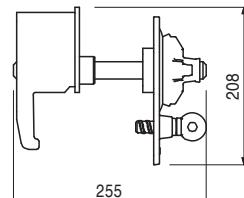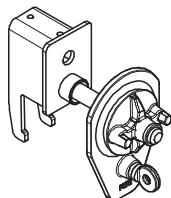

023660 3,300

## Brace Connector TRIO, galv.

For connecting push-pull props and kicker braces to MAXIMO and TRIO Panels. Mounted on vertical and horizontal struts.

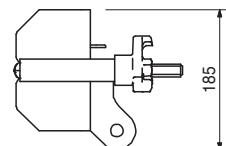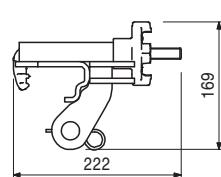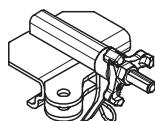


115350 6,330  
123842 9,090

## Tension and Compression Braces MX

### Tension and Compression Brace MX 15 – 40

### Tension and Compression Brace MX 15 – 100

For use with foundation formwork up to 1.20 m high and as replacement for the top anchor of the MAXIMO 330.

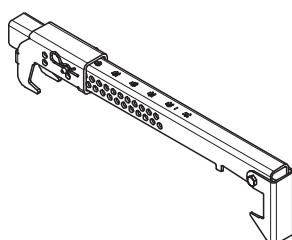

## Complete with


1 pc. 115331 Bolt Ø 12 x 96, galv.  
1 pc. 018060 Cotter Pin 4/1, galv.

## Note

Adjustable in 0.5-cm-increments from 15 to 40 cm and in 0.5-cm-increments from 15 to 100 cm.



## Technical Data

Permissible tension and compressive force 9 kN.

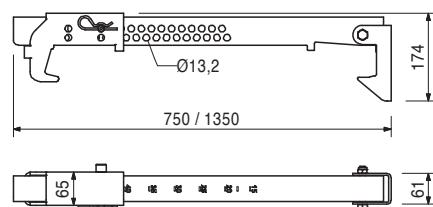

112588 5,520

## Stripping Bar TRIO

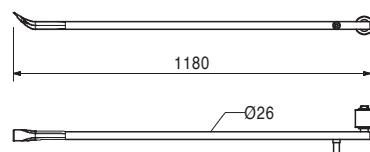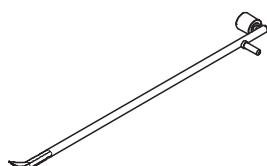

# MAXIMO MX 18 Panel Formwork 270 / 330


PERI

Item no. Weight kg

101633 9,790


## Adjusting Bracket MX

For erecting PERI Panel Formwork up to  
 $h = 4.50 \text{ m}$ .

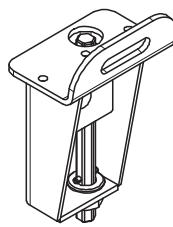

## Note


Follow Instructions for Use!  
Height Adjustment  $\pm 5 \text{ cm}$ .

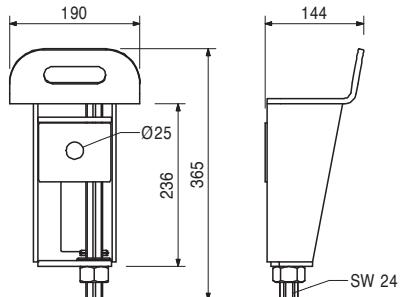

023630 2,080


## Top Tie Bracket-2 AH, galv.

For grid-independent anchoring outside of the panel, especially for foundations and height extensions.



## Technical Data


Permissible anchor tension force:  
Hole 1 = 30 kN  
Hole 2 = 15 kN

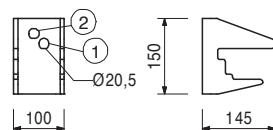

117321 31,000

## Lifting Gear Combi MX

For transporting stacks of MAXIMO and TRIO Panels. For attaching Lifting Hook MAXIMO 1.5 t and Stacking Device MAXIMO.

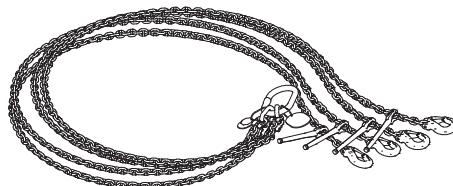


## Note

Follow Instructions for Use!

117322 25,000

## Lifting Gear MX

For transporting stacks of MAXIMO and TRIO Panels.

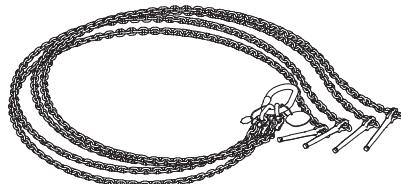

## Note

Follow Instructions for Use!

# MAXIMO MX 18 Panel Formwork 270 / 330

PERI

Item no. Weight kg

115168 7,470

## Lifting Hook MAXIMO 1.5 t

For transporting MAXIMO and TRIO Panels.




## Note

Follow Instructions for Use!

## Technical Data


Permissible load-bearing capacity:  
Steel elements 1.5 t  
Alu elements 750 kg

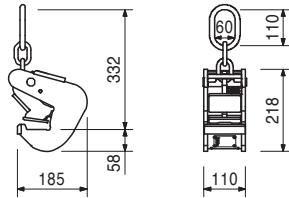

115058 7,450

## Stacking Device MAXIMO

For stacking and transportation of 2 – 5 MAXIMO or TRIO Panels of all sizes. Suitable for crane and fork-lift transport.




## Note

Follow Instructions for Use!

## Technical Data



Permissible load-bearing capacity 650 kg per post,  
2.6 t per stack.

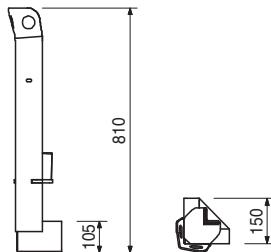

113019 0,068

## Stacking Device MX



For easy stacking of MAXIMO panels.

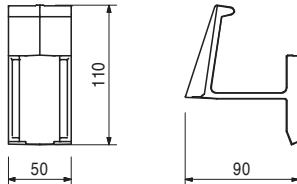

023440 0,312

## Lifting Pin TRIO

For easy carrying of TRIO Panels.



# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg


023670	12,800
023680	17,000

## Scaffold Brackets TRG

### Scaffold Bracket TRG 80


### Scaffold Bracket TRG 120

For assembly of a working and concreting scaffold with MAXIMO and TRIO. Mounted on horizontal and vertical struts.

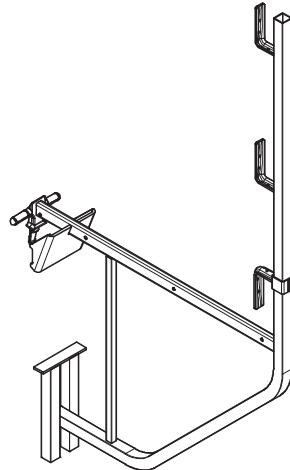

## Technical Data


Permissible load 150 kg/m<sup>2</sup>  
with maximum width of influence 1.35 m.

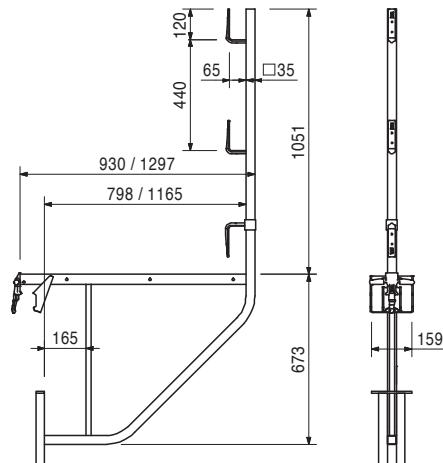

022950 129,000


## Concreting Platform TRIO 120 x 270

Working and concreting platform for MAXIMO and TRIO. Attached from above to the panel, self-securing.

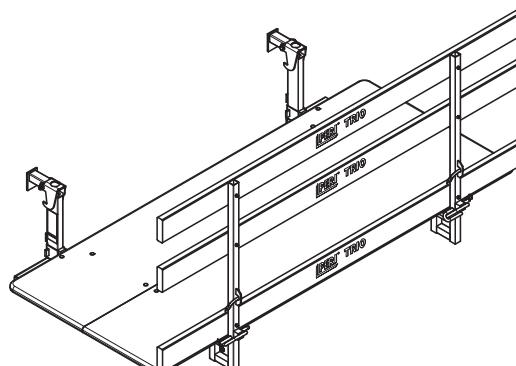

## Technical Data

Permissible load 150 kg/m<sup>2</sup>.

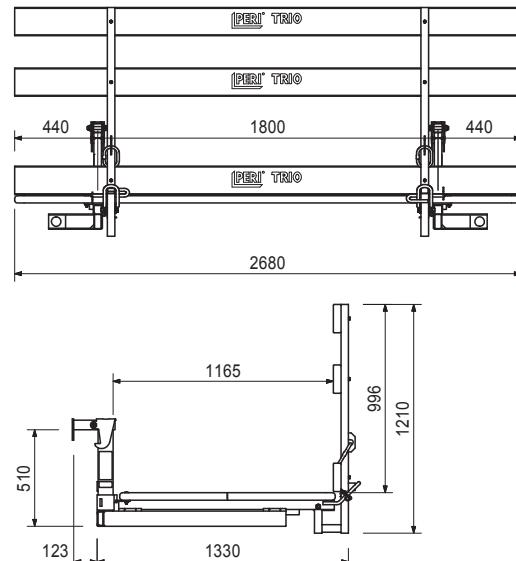

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

101592 2,810



## Guardrail Post Holder TRIO

For assembling of a guardrail to TRIO panels.



## Complete with

1 pc. 018060 Cotter Pin 4/1, galv.

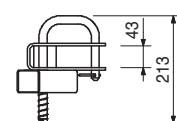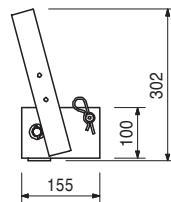


Accessories

## Guardrail Post HSGP-2

116292 4,730




## Guardrail Post HSGP-2

As guardrail for different systems.

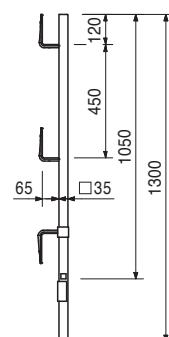




118103 0,700

## Stacking Device L MXA

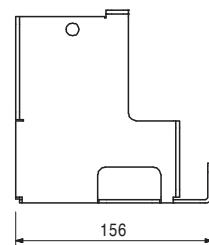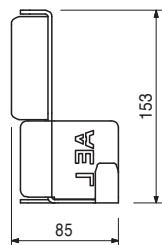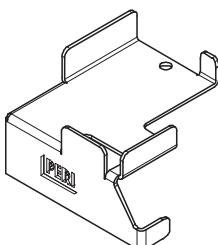

118105 0,699

## Stacking Device R MXA

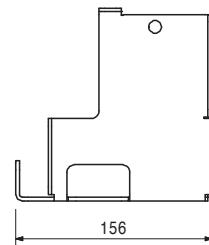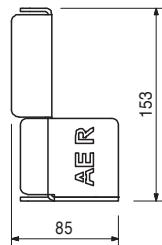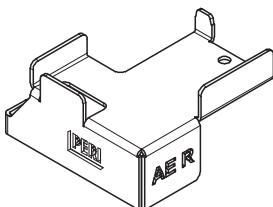



# MAXIMO MX 18 Panel Formwork 270 / 330

PERI

Item no. Weight kg



118110 0,614

Stacking Device L MXI

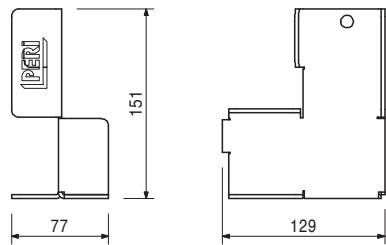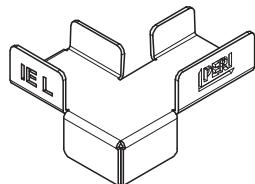



118112 0,613

Stacking Device R MXI

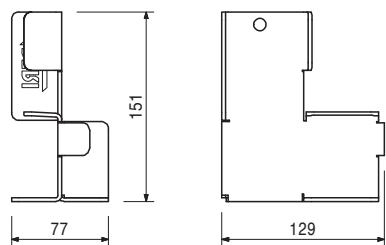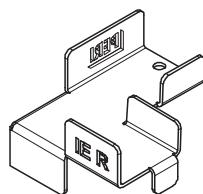

118100 0,652

Stacking Device MX Flat for Shaft Corner  
MXSE

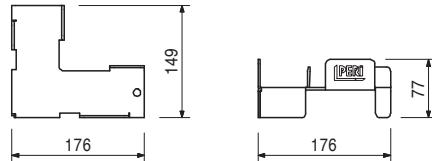

# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg

027680 49,600


## Connector SB-1,2 - MX/TR/D

For assembly of Brace Frame SB-1, 2 to MAXIMO, TRIO and DOMINO panels.



## Technical Data

Permissible load-bearing point capacity 1.0 t with crane sling angle  $\leq 15^\circ$ .

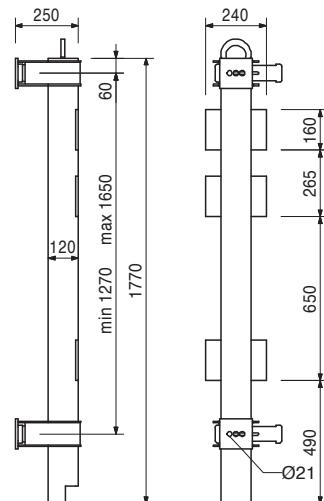

### Accessories


027690	0,368
027590	2,400
113255	0,414
114107	1,190
114417	1,400

- Bolt SB-TRIO/DOMINO, galv.**
- Hook Strap for SB-1, 2**
- Bolt SB-MAXIMO, galv.**
- Sleeve SB-MAXIMO, galv.**
- Sleeve SB-MAXIMO WDMX**

025740 9,140


## Connector SB-A, B, C - MX/TR/D

For connecting MAXIMO, TRIO and DOMINO panels with Brace Frames SB-A0, A, B, C.



## Note

1 piece per anchor point.

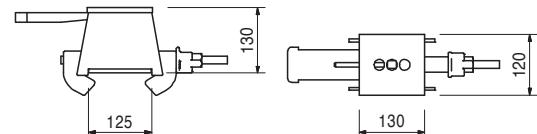

### Accessories



027690	0,368
113255	0,414
114107	1,190
114417	1,400

- Bolt SB-TRIO/DOMINO, galv.**
- Bolt SB-MAXIMO, galv.**
- Sleeve SB-MAXIMO, galv.**
- Sleeve SB-MAXIMO WDMX**

113255 0,414

## Bolt SB-MAXIMO, galv.

For connecting MAXIMO panels with Brace Frame SB.

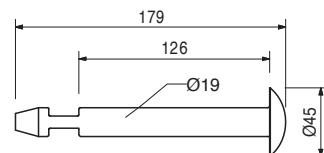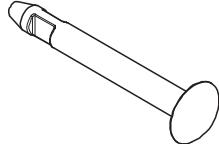

### Accessories

114107	1,190
114417	1,400

- Sleeve SB-MAXIMO, galv.**
- Sleeve SB-MAXIMO WDMX**

# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg



114107 1,190

## Sleeve SB-MAXIMO, galv.

For connecting MAXIMO panels with Brace Frame SB.

### Note

For use with  
Sealing Sleeve MX Ø 16 item no. 112342 and  
Nut Sealing Sleeve MX Ø 16 item no. 112338.

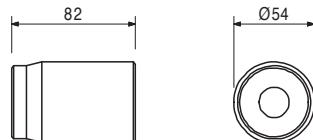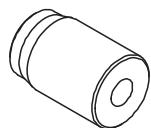

Accessories

113255 0,414  
114417 1,400

## Bolt SB-MAXIMO, galv.

## Sleeve SB-MAXIMO WDMX



114417 1,400

## Sleeve SB-MAXIMO WDMX

For connecting MAXIMO panels to Brace Frames SB.

### Note

For use with  
Sealing Sleeve MX 15 item no. 123603 and  
Sealing Sleeve MX 18 item no. 123604.

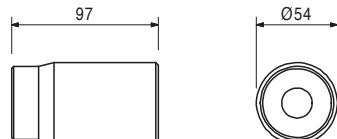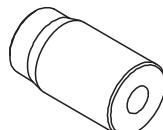

Accessories



113255 0,414

## Bolt SB-MAXIMO, galv.

127430 0,104  
127488 0,114


## Stoppers MX 18

Stopper MX 18 – 75 MF-S  
Stopper MX 18 – 75 MF-L



127589 0,082

## Stopper MX 18 – 50 MF LS

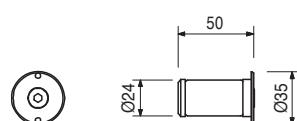

127590 0,077

## Stopper MX 18 – 50 OF LS




# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg



127432	0,099	<b>Stoppers MX 18</b>
127490	0,107	<b>Stopper MX 18 – 75 OF-S</b>
		<b>Stopper MX 18 – 75 OF-L</b>



127434 0,038

## **Stud Spanner MX 18**


Contained within the packaging units.

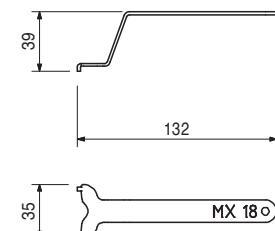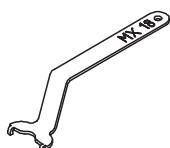

127425 0,160


## **Magnet Cone MX 18 – 55**

For the use with MAXIMO.  
Use with Anchor MX.

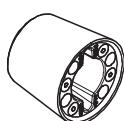

### **Note**

For the use with waterproof concrete or architectural concrete.

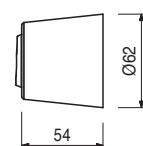

126696 1,220


### Accessories

## **Magnet Cone Spanner MX 15 / MX 18**

031643 0,241


## **DK Concrete Cone UNI 58/52**

For closing anchor points with DK Sealing Cone DW 15/55, DW 20/55, DW 26/55 and SK Anchor Cone DW 15.




### **Note**

Delivery unit 50 pieces.

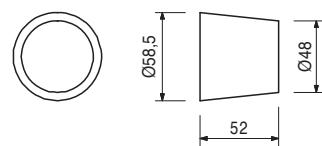

125438 0,024

## **Spacer MX 18 – 10 mm**



# MAXIMO MX 18 Panel Formwork 270 / 330



PERI

Item no. Weight kg

126696 1,220

## Magnet Cone Spanner MX 15 / MX 18


For dismantling of Magnet Cone MX 15 and MX 18.

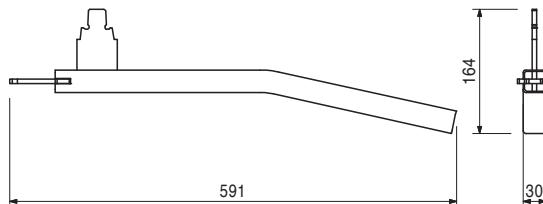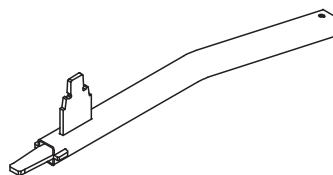

031637 0,055


## DK Cone DW 20/55

For waterproof, fire-resistant and soundproof anchor points with Tie Rod DW 20. Use with Spacer Tube rough 28.





### Note

Delivery unit 50 pieces.

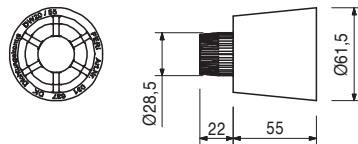

123604 0,015



## Sealing MX 18

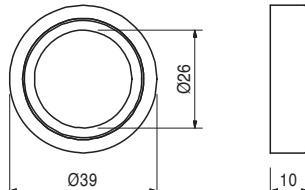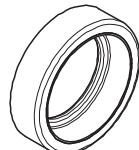

125337 1,390

## Extraction Tool MX Sealing

For remove of the Sealing MX 15 and MX 18.

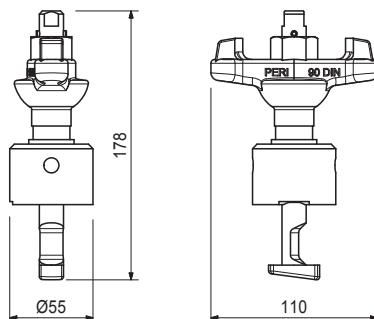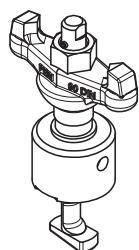

# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**

Item no. Weight kg

117466 10,600

## Push-Pull Prop RS 210, galv.


Extension length l = 1.30 – 2.10 m.

For aligning PERI formwork systems and precast concrete elements.



## Note

Permissible load see PERI Design Tables.

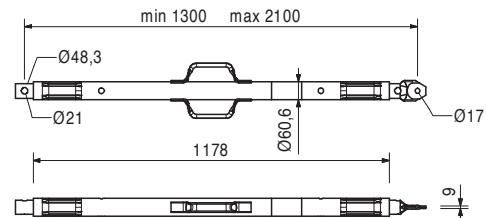


118238 12,200

## Push-Pull Prop RS 260, galv.


Extension length l = 2.30 – 2.60 m.

For aligning PERI formwork systems and precast concrete elements.

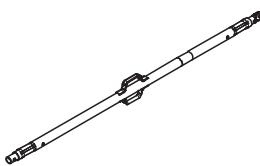

## Note

Permissible load see PERI Design Tables.

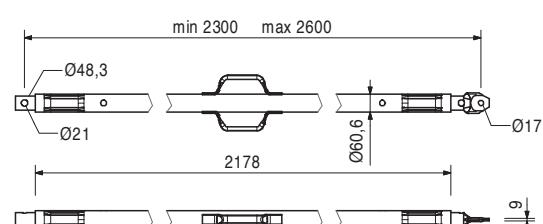


117467 15,500

## Push-Pull Prop RS 300, galv.


Extension length l = 1.90 – 3.00 m.

For aligning PERI formwork systems and precast concrete elements.

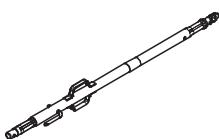

## Note

Permissible load see PERI Design Tables.

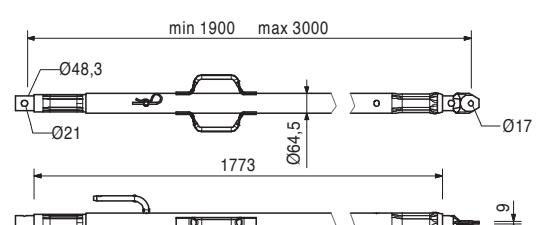


117468 23,000

## Push-Pull Prop RS 450, galv.


Extension length l = 2.80 – 4.50 m.

For aligning PERI formwork systems and precast concrete elements.

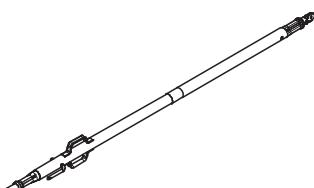

## Note

Permissible load see PERI Design Tables.

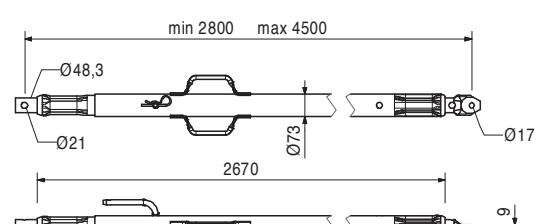

# MAXIMO MX 18 Panel Formwork 270 / 330

**PERI**


Item no. Weight kg

117469 40,000

## Push-Pull Prop RS 650, galv.


Extension length l = 4.30 – 6.50 m.

For aligning PERI formwork systems and precast concrete elements.

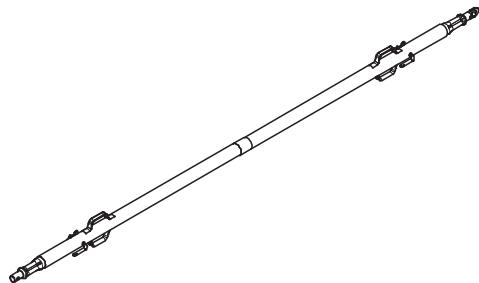

## Note

Permissible load see PERI Design Tables.

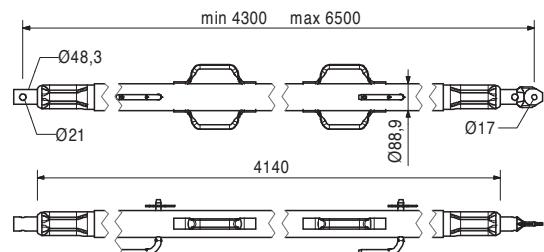


028990 115,000

## Push-Pull Prop RS 1000, galv.


Extension length l = 6.40 – 10.00 m.

For aligning PERI formwork systems.

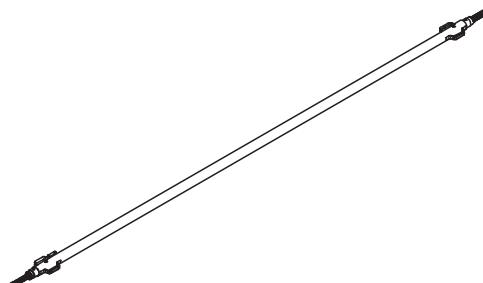

## Note

Permissible load see PERI Design Tables.

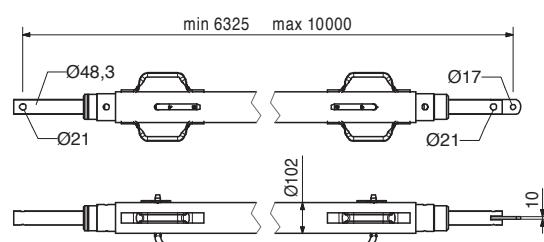


103800 271,000

## Push-Pull Prop RS 1400, galv.

Extension length l = 6.40 – 14.00 m.


For aligning PERI formwork systems.

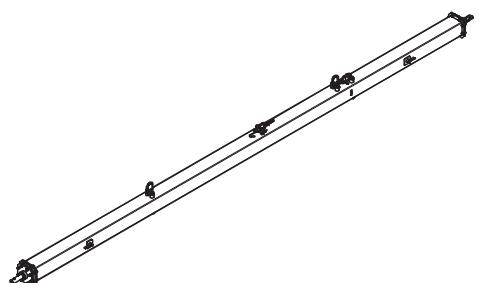

## Note

Permissible load see PERI Design Tables.

Chain can be operated from bottom.

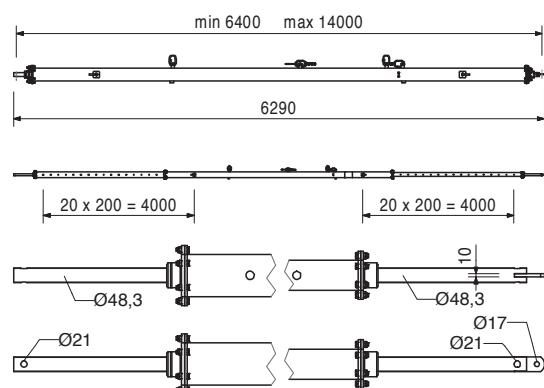

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

117343 3,250


## Base Plate-2 for RS 210 – 1400, galv.

For assembly of Push-Pull Props RS 210, 260, 300, 450, 650, 1000 and 1400.

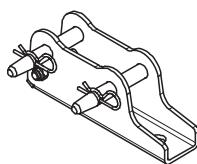

## Complete with

2 pc. 105400 Pin Ø 20 x 140, galv.  
2 pc. 018060 Cotter Pin 4/1, galv.

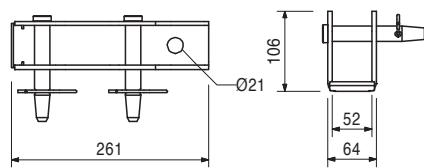

Accessories


124777 0,210

## Anchor Bolt PERI 14/20 x 130

028010 17,900


## Push-Pull Prop RSS I

Extension length l = 2.05 – 2.94 m.  
For aligning PERI formwork systems.

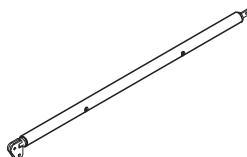

## Note




Permissible load see PERI Design Tables.

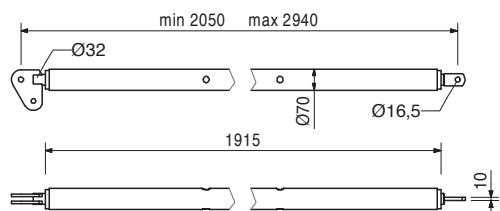

113397 1,600

## Spindle Handle RSS / AV


Spindle Handle for screwing on Push-Pull Props RSS I, RSS II, RSS III and Kickers AV 210 and AV 190 complete with 2 bolts and nuts M8.

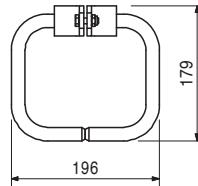

028020 22,000


## Push-Pull Prop RSS II

Extension length l = 2.91 – 3.80 m.  
For aligning PERI formwork systems.

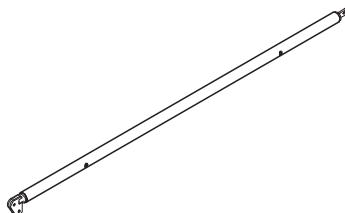

## Note

Permissible load see PERI Design Tables.

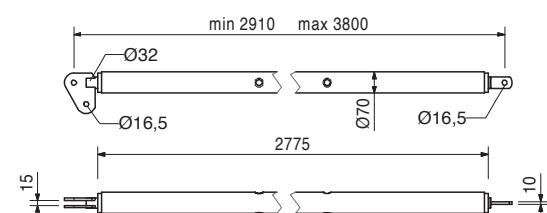

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

028030 38,400


## Push-Pull Prop RSS III

Extension length l = 4.60 – 6.00 m.  
For aligning PERI formwork systems.

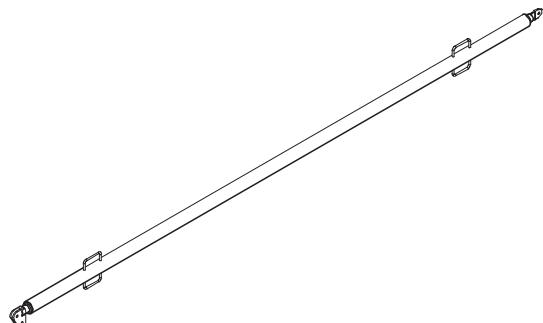

## Note

Permissible load see PERI Design Tables.

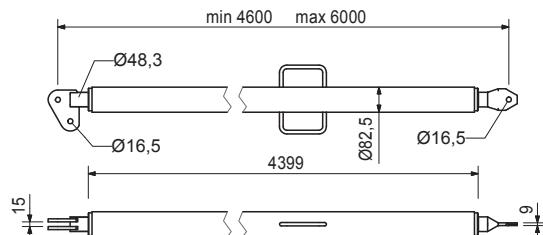

106000 1,820



## Base Plate-2 for RSS, galv.

For assembly of RSS Push-Pull Props.

## Complete with

1 pc. 027170 Pin Ø 16 x 42, galv.

1 pc. 018060 Cotter Pin 4/1, galv.

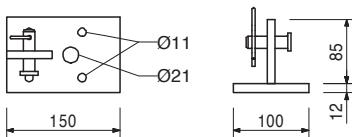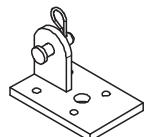

## Accessories

124777 0,210

## Anchor Bolt PERI 14/20 x 130

057087	3,720
057088	4,410

## Kickers AV

## Kicker AV 82

## Kicker AV 111

For aligning PERI formwork systems.

## min. L      max. L

500      820

790      1110




## Complete with

1 pc. 027170 Pin Ø 16 x 42, galv.

1 pc. 018060 Cotter Pin 4/1, galv.

## Note

Permissible load see PERI Design Tables.

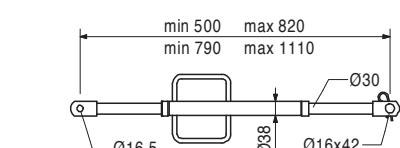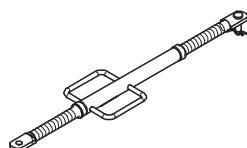

# MAXIMO MX 18 Panel Formwork 270 / 330


**PERI**

Item no. Weight kg

028110 5,180

## Kicker AV 140

Extension length l = 1.08 – 1.40 m.  
For aligning PERI formwork systems.

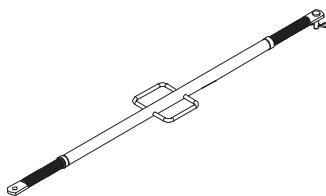


## Complete with

1 pc. 027170 Pin Ø 16 x 42, galv.  
1 pc. 018060 Cotter Pin 4/1, galv.

## Note


Permissible load see PERI Design Tables.

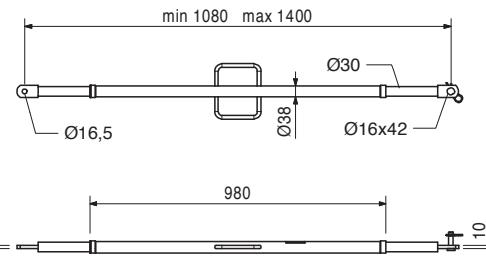

108135 12,900

## Kicker AV 210

Extension length l = 1.28 – 2.10 m.  
For aligning PERI formwork systems.

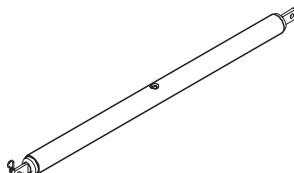


## Complete with

1 pc. 027170 Pin Ø 16 x 42, galv.  
1 pc. 018060 Cotter Pin 4/1, galv.

## Note


Permissible load see PERI Design Tables.

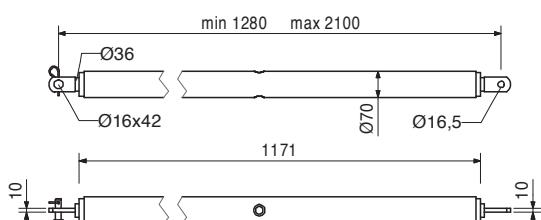

028120 17,000

## Kicker AV RSS III

Extension length l = 2.03 – 2.92 m.  
For aligning PERI formwork systems.

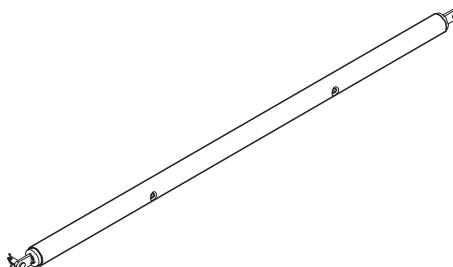


## Complete with

1 pc. 027170 Pin Ø 16 x 42, galv.  
1 pc. 018060 Cotter Pin 4/1, galv.

## Note


Permissible load see PERI Design Tables.

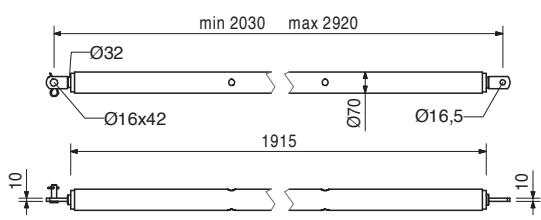

124777 0,210


## Anchor Bolt PERI 14/20 x 130

For temporary fixation to reinforced concrete structures.

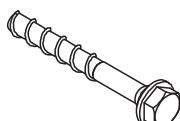

## Note

See PERI data sheet!  
Drilling Ø 14 mm.



# PERI International



**01 Germany**  
**PERI GmbH**  
 Rudolf-Diesel-Strasse 19  
 89264 Weissenhorn  
 info@peri.com  
 www.peri.com



**02 France**  
**PERI S.A.S.**  
 77109 Meaux Cedex  
 peri.sas@peri.fr  
 www.peri.fr

**09 Italy**  
**PERI S.p.A.**  
 20060 Basiano  
 info@peri.it  
 www.peri.it

**16 Austria**  
**PERI Ges.mbh**  
 3134 Nußdorf ob der Traisen  
 office@peri.at  
 www.peri.at

**23 Korea**  
**PERI (Korea) Ltd.**  
 Seoul 06243  
 info@perikorea.com  
 www.perikorea.com

**30 Slovakia**  
**PERI spol. s. r.o.**  
 903 01 Senec  
 info@peri.sk  
 www.peri.sk

**03 Switzerland**  
**PERI AG**  
 8472 Ohringen  
 info@peri.ch  
 www.peri.ch

**10 Japan**  
**PERI Japan K.K.**  
 Tokyo 103-0015  
 info@perijapan.jp  
 www.perijapan.jp

**17 Czech Republic**  
**PERI spol. S.r.o.**  
 252 42 Jesenice u Prahy  
 info@peri.cz  
 www.peri.cz

**24 Portugal**  
**Pericofragens Lda.**  
 2790-326 Queijas  
 info@peri.pt  
 www.peri.pt

**31 Australia**  
**PERI Australia Pty. Ltd.**  
 Glendenning NSW 2761  
 info@periaus.com.au  
 www.periaus.com.au

**04 Spain**  
**PERI S.A.U.**  
 28110 Algete - Madrid  
 info@peri.es  
 www.peri.es

**11 United Kingdom/Ireland**  
**PERI Ltd.**  
 Rugby, CV23 0AN  
 info@peri.ltd.uk  
 www.peri.ltd.uk

**18 Denmark**  
**PERI Danmark A/S**  
 2670 Greve  
 peri@peri.dk  
 www.peri.dk

**25 Argentina**  
**PERI S.A.**  
 B1625GPA Escobar – Bs. As.  
 info@peri.com.ar  
 www.peri.com.ar

**32 Estonia**  
**PERI AS**  
 76406 Saku vald  
 Harjumaa  
 peri@peri.ee  
 www.peri.ee

**05 Belgium/Luxembourg**  
**N.V. PERI S.A.**  
 1840 Londerzeel  
 info@peri.be  
 www.peri.be

**12 Turkey**  
**PERI Kalip ve Iskeleleri Sanayi ve Ticaret Ltd.**  
 Esenyurt / İstanbul 34510  
 info@peri.com.tr  
 www.peri.com.tr

**19 Finland**  
**PERI Suomi Ltd. Oy**  
 05460 Hyvinkää  
 info@perisuomi.fi  
 www.perisuomi.fi

**26 Brazil**  
**PERI Formas e Escoramentos Ltda.**  
 Vargem Grande Paulista – SP  
 info@peribrasil.com.br  
 www.peribrasil.com.br

**33 Greece**  
**PERI Hellas Solely Owned Ltd.**  
 194 00 Koropi  
 info@perihellas.gr  
 www.perihellas.gr

**06 Netherlands**  
**PERI Holding B.V.**  
 5480 AH-Schijndel  
 info@peri.nl  
 www.peri.nl

**13 Hungary**  
**PERI Kft.**  
 1181 Budapest  
 info@peri.hu  
 www.peri.hu

**20 Norway**  
**PERI Norge AS**  
 3036 Drammen  
 info@peri.no  
 www.peri.no

**27 Chile**  
**PERI Chile Ltda.**  
 Colina, Santiago de Chile  
 perichile@peri.cl  
 www.peri.cl

**34 Latvia**  
**PERI SIA**  
 2118 Salaspils novads, Rīgas rajons  
 info@peri-latvija.lv  
 www.peri-latvija.lv

**07 USA**  
**PERI Formwork Systems, Inc.**  
 Elkridge, MD 21075  
 info@peri-usa.com  
 www.peri-usa.com

**14 Malaysia**  
**PERI Formwork Malaysia Sdn. Bhd.**  
 43300 Seri Kembangan,  
 Selangor Darul Ehsan  
 info@perimalaysia.com  
 www.perimalaysia.com

**21 Poland**  
**PERI Polska Sp. z o.o.**  
 05-860 Płochocin  
 info@peri.com.pl  
 www.peri.com.pl

**28 Romania**  
**PERI România SRL**  
 077015 Balotești  
 info@peri.ro  
 www.peri.ro

**35 United Arab Emirates**  
**PERI (L.L.C.)**  
 Dubai U.A.E.  
 perillc@perime.com  
 www.perime.com

**08 Indonesia**  
**PT Beton Perkasa Wijaksana**  
 Jakarta 10210  
 bpw@betonperkasa.com  
 www.peri.com

**15 Singapore**  
**PERI Asia Pte Ltd**  
 Singapore 387355  
 pha@periasia.com  
 www.periasia.com

**22 Sweden**  
**PERIform Sverige AB**  
 30262 Halmstad  
 peri@periform.se  
 www.periform.se

**29 Slovenia**  
**PERI Agency**  
 2000 Maribor  
 peri.slo@triera.net  
 www.peri.com

**36 Canada**  
**PERI Formwork Systems, Inc.**  
 Bolton, ON – L7E 1K1  
 info@peri.ca  
 www.peri.ca



**37 Lebanon**  
PERI Lebanon Sarl  
90416 – Jdeideh  
lebanon@peri.de

**44 Russian Federation**  
OOO PERI  
142407, Noginsk District  
moscow@peri.ru  
www.peri.ru

**51 Turkmenistan**  
PERI Kalip ve İşkeleleri  
Aşgabat  
ahmet.kadioglu@peri.com.tr  
www.peri.com.tr

**57 Saudi Arabia**  
PERI Saudi Arabia Ltd.  
21463 Jeddah  
info@peri.com.sa  
www.peri.com.sa

**64 Nigeria**  
PERI Nigeria Ltd.  
Lagos  
info@peri.ng  
www.peri.ng

**38 Lithuania**  
PERI UAB  
02300 Vilnius  
info@peri.lt  
www.peri.lt

**45 South Africa**  
PERI (Pty) Ltd  
7600 Stellenbosch  
info@peri.co.za  
www.peri.co.za

**52 Belarusia**  
IOOO PERI Belarus  
220100 Minsk  
info@peri.by  
www.peri.by

**58 Qatar**  
PERI Qatar LLC  
P.O.Box: 31295 - Doha  
info@periqatar.com  
www.peri.qa

**65 Oman**  
PERI (L.L.C.)  
Muscat  
perimct@perime.com  
www.perime.com

**39 Morocco**  
PERI S.A.U.  
Tanger  
info@peri.ma  
www.peri.ma

**46 Ukraine**  
PERI Ukraina  
07400 Brovary  
peri@peri.ua  
www.peri.ua

**53 Croatia**  
PERI oplate i skele d.o.o.  
10 250 Lučko-Zagreb  
info@peri.com.hr  
www.peri.com.hr

**59 Algeria**  
Sarl PERI  
Kouba 16092, Alger  
info@peri.com  
www.peri.com

**66 Colombia**  
PERI S.A.S. Colombia  
Briceño, Cundinamarca  
peri.colombia@peri.com.co  
www.peri.com.co

**40 Israel**  
PERI Formwork  
Engineering Ltd.  
Rosh Ha'ayin, 48104  
info@peri.co.il  
www.peri.co.il

**47 Egypt**  
Egypt Branch Office  
11341 Nasr City /Cairo  
info@peri.com.eg  
www.peri.com.eg

**54 India**  
PERI (India) Pvt Ltd  
Mumbai – 400064  
info@peri.in  
www.peri.in

**60 Albania**  
PERI Representative Office  
Tirane  
info@peri.com.tr  
www.peri.com.tr

**67 Philippines**  
PERI-Asia Philippines, INC.  
Makati City  
info@peri.com.ph  
www.peri.com.ph

**41 Bulgaria**  
PERI Bulgaria EOOD  
1839 Sofia  
peri.bulgaria@peri.bg  
www.peri.bg

**48 Serbia**  
PERI – Oplate d.o.o.  
22310 Šimanovci  
office@peri.rs  
www.peri.rs

**55 Jordan**  
PERI GmbH - Jordan  
11947 Amman  
jordan@peri.com  
www.peri.com

**61 Peru**  
PERI Peruana S.A.C.  
Villa El Salvador, Lima  
contacto@peri.com.pe  
www.peri.com.pe

**68 Hong Kong**  
PERI (Hong Kong) Limited  
Hong Kong SAR, PRC  
bob.dover@periasia.com  
www.perihk.com

**42 Iceland**  
Armar ehf.  
220 Hafnarfjörður  
armar@armar.is  
www.armar.is

**49 Mexico**  
PERI Cimbras y Andamios,  
S.A. de C.V.  
Estado de México, Huehuetoca  
info@peri.com.mx  
www.peri.com.mx

**56 Kuwait**  
PERI Kuwait W.L.L.  
13011 Kuwait  
info@peri.com.kw  
www.peri.com.kw

**62 Panama**  
PERI Panama Inc.  
0832-00155 Panama City  
info@peri.com.pa  
www.peri.com.pa

**69 Namibia**  
PERI (Pty.) Ltd.  
Windhoek  
windhoek@peri.na  
www.peri.na

**43 Kazakhstan**  
TOO PERI Kazakhstan  
050000 Almaty  
peri@peri.kz  
www.peri.kz

**50 Azerbaijan**  
PERI Repesentative Office  
Baku  
peribaku@peri.com.tr  
www.peri.com.tr

**63 Angola**  
Pericofragens, Lda.  
Luanda  
renato.portugal@peri.pt  
www.peri.pt

**70 Mozambique**  
PERI (Pty.) Ltd.  
Matola  
maputo@peri .co.mz  
www.peri.co.mz

## The optimal System for every Project and every Requirement



Wall Formwork



Column Formwork



Slab Formwork



Climbing Systems



Tunnel Formwork



Bridge Formwork



Shoring Systems



Construction Scaffold



Facade Scaffold



Industrial Scaffold



Access



Protection Scaffold



System-Independent Accessories



Services



**PERI GmbH**  
**Formwork Scaffolding Engineering**  
Rudolf-Diesel-Strasse 19  
89264 Weissenhorn  
Germany  
Tel. +49 (0)7309.950-0  
Fax +49 (0)7309.951-0  
info@peri.com  
www.peri.com