


General recommendations:

- During the installation observe the compulsory security standards - wear protective gloves and work clothes with long sleeves.
- During transport and storage, protect against mechanical damage.


STEP 1 TYPE 1

Installation of Formtec EDGE on the ground.

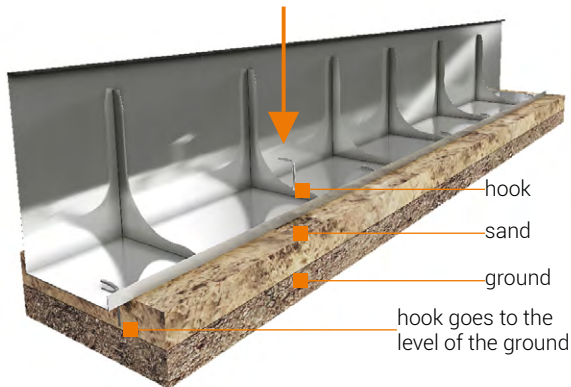


STEP 1 TYPE 2

Installation of Formtec EDGE on bedding concrete.

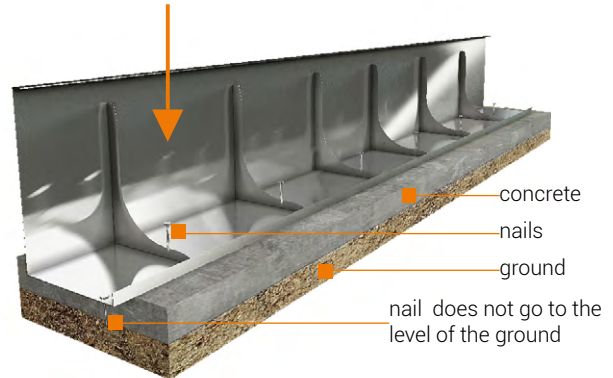


STEP 2

Connecting of Formtec EDGE.

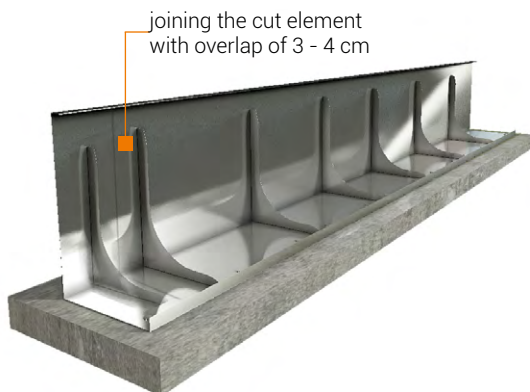

STEP 3

Cutting the mounting foot and top of element at the corner. Bending the cut metal sheet.

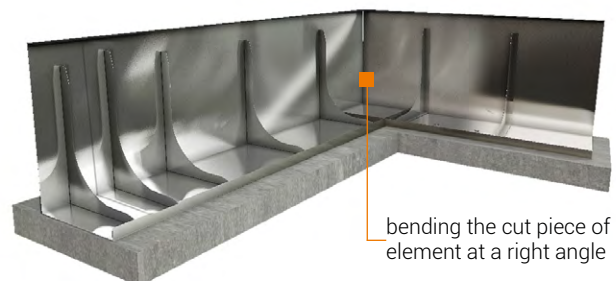

STEP 4 TYPE 1

Concreting of foundation slab.



STEP 4 TYPE 2

Concreting of combined footing.

